

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aureday](#) /

› [Aureday Smartphone Tripod Selfie Stick User Manual](#)

Aureday TZ72R

Aureday Smartphone Tripod Selfie Stick User Manual

Model: TZ72R

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Aureday Smartphone Tripod Selfie Stick. Please read this manual thoroughly before operating the device and retain it for future reference. This product is designed to enhance your photography and videography experience with its versatile features and stable design.

PRODUCT OVERVIEW

The Aureday Smartphone Tripod Selfie Stick is an integrated device combining a selfie stick and a stable tripod, designed for various shooting scenarios. It features an extendable main body and a flexible arm for diverse angles.

Key Features:

- Extended Reach:** Extends up to a total of 221cm (183cm main body + 38cm flexible arm) for wide-angle and high-angle shots.
- Flexible Arm:** A 38cm flexible arm allows for horizontal rotation, overhead shooting, and precise angle adjustments, ideal for panoramic and top-down photography.
- Integrated Design:** Functions as both a selfie stick and a stable tripod, offering enhanced versatility.
- Remote Control:** Includes a compact, thumb-sized wireless remote for easy shutter operation from a distance, compatible with both Android and iOS devices.
- Enhanced Stability:** Features a widened leg spread and anti-slip rubber feet for superior stability on various surfaces. Additional weight can be added to the tripod base for extra stability.
- Versatile Applications:** Suitable for selfies, group photos, travel photography, vlogging, live streaming, online meetings, presentations, and more.
- GoPro Compatibility:** Includes components for attaching GoPro action cameras.

Package Contents:



2つマウント同時に付き可



遠隔シャッターリモコン

スマホホルダー両側にマイク/ビデオライトなどが対応するマウントが搭載されており、三脚一台で様々な使い方に適用できます。より多くの景色を映り込み、撮影を楽しめます。

ポケットサイズのリモコンで、最大10メートルの距離から簡単に自撮りや集合写真を撮ることができます。
※リモコンの有効範囲は12m

This image displays the components included in the Aureday Smartphone Tripod package. From left to right, top to bottom, you can see:

1. Storage Bag
2. 183cm Tripod Main Body
3. Flexible Arm (38cm)
4. Smartphone Holder
5. Remote Control
6. GoPro Components

SETUP

Follow these steps to set up your Aureday Smartphone Tripod for use:

1. Extending the Tripod:

- Gently pull the tripod legs outwards until they are fully extended and stable.
- Unlock the sections of the main pole by twisting or flipping the locks (depending on the lock type). Extend the pole to your desired height.
- Securely fasten all locks to ensure the pole remains at the set height.

いろんな撮影アングル や形をお好みの角度まで調整



This image illustrates the extension of the tripod, showing the 183cm main body and the additional 38cm flexible arm. It also depicts how the tripod can be adjusted for different shooting angles, including overhead and standard horizontal/vertical orientations.

2. Attaching the Smartphone Holder or Flexible Arm:

- The tripod comes with a standard smartphone holder and a flexible arm. Choose the appropriate attachment for your needs.
- Screw the smartphone holder or the flexible arm onto the 1/4-inch screw mount at the top of the tripod pole. Ensure it is tightened securely.
- If using the flexible arm, you can attach the smartphone holder to its end.
- For GoPro cameras, use the provided GoPro components to attach your camera to the tripod mount.



This image shows the Aureday tripod with various attachments, including a smartphone, a DSLR camera, and a GoPro, demonstrating its versatility with different devices.

俯瞰撮影した際に、フレキシブルを前に出しすぎると、傾けることがあるので、上に伸ばして調整するか三脚ストップバーに重物に置くことがおすすめします。俯瞰撮影した際に、フレキシブルを前に出しすぎると、傾けることがあるので、上に伸ばして調整するか三脚ストップバーに重物に置くことがおすすめします。



長さ38cmフレキシブル

開脚した際に、三脚を地面においてエレベーターを下に押し、開脚角度を最大まで調整します。開脚角度による安定性が持っています。ブルを前に出しすぎると、傾けることがあるので、上に伸ばして調整するか三脚ストップバーに重物に置くことがおすすめします。



開脚ロックを忘れずしっかりと締めます。安定性が増強するなら、開脚ストップバーに重物をおくことができます。

This image highlights the dual mount capability, allowing accessories like microphones or video lights to be attached alongside the smartphone. It also shows the compact wireless remote control.

3. Pairing the Remote Control:

- Ensure the remote control has a battery installed (battery is included).

- Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).
- On your smartphone, go to Bluetooth settings and search for available devices.
- Select the remote control (e.g., "AB Shutter3" or similar) from the list to pair. The indicator light on the remote will stop flashing once paired.
- Open your smartphone's camera app. The remote can now be used to trigger the shutter.

OPERATING INSTRUCTIONS

Utilize the various features of your tripod for optimal photography and videography.

Adjusting Height and Angle:

- Main Pole Extension:** Adjust the height of the main pole using the section locks. Ensure all locks are securely fastened after adjustment.
- Flexible Arm Adjustment:** The 38cm flexible arm can be bent and rotated to achieve specific angles, including overhead shots and unique perspectives.
- Head Rotation:** The tripod head allows for 360-degree rotation and horizontal/vertical switching for panoramic and portrait shots.



This image demonstrates the 360-degree angle adjustment capabilities, including horizontal and vertical shooting modes, overhead shots, low-angle shots, and panoramic photography.

パッケージ内容

- ①収納バッグ
- ②183cm三脚
- ③フレキシブルアーム
- ④スマホホルダー
- ⑤リモコン
- ⑥ゴープロ部品



This image shows the elevator lock mechanism for stability and the panorama head, which allows for 180-degree rotation to switch between horizontal and vertical shooting.

Shooting Modes:


- Selfie Stick Mode:** Collapse the tripod legs and hold the main pole for handheld selfies or vlogging.
- Tripod Mode:** Extend the legs and place the tripod on a flat, stable surface for steady shots, group photos, or video calls.
- Overhead Photography:** Use the flexible arm to position your smartphone directly above a subject for top-down views.
- Low-Angle Photography:** Adjust the tripod to its lowest height or use the flexible arm for unique low-angle perspectives.

さまざまなニーズに応じて撮影可能

俯瞰撮影



ローアングル撮影

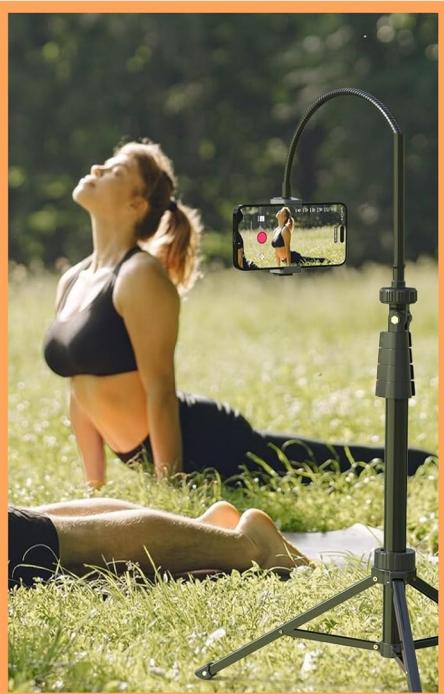

This image provides examples of overhead photography (left, showing a phone positioned over a kitchen counter) and low-angle photography (right, showing a phone capturing a subject from a low perspective in a field).



This image showcases various applications of the tripod, including travel photography, live streaming, cooking photography, and use with a GoPro action camera.

ゴープロマウント部品付き



対応機種：GoPro Hero 12,11,10,9,8,7,6,5,4,3+,3,2,1HD, AKASO Campark、アクションカメラなど

This image displays the included GoPro mount components and an example of the tripod being used with a GoPro in water, highlighting its compatibility with action cameras.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your tripod.

- Cleaning:** Wipe the tripod with a soft, dry cloth after each use. If necessary, use a slightly damp cloth with mild soap, then dry thoroughly. Avoid harsh chemicals or abrasive materials.
- Storage:** Collapse the tripod fully and store it in the provided storage bag in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid Overloading:** Do not exceed the recommended weight capacity for the tripod and phone holder.
- Check Connections:** Periodically check all screws and connections to ensure they are tight. Do not overtighten.
- Battery Care (Remote):** If the remote control will not be used for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your Aureday Smartphone Tripod, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Tripod is unstable.	Legs not fully extended or locked; uneven surface; excessive height for weight.	Ensure legs are fully extended and locks are secured. Place on a flat surface. For maximum stability, do not extend to full height if not necessary, or place a weight on the tripod base.

Problem	Possible Cause	Solution
Remote control not pairing.	Remote not turned on; battery low/dead; Bluetooth not enabled on phone; interference.	Ensure remote is on and battery is good. Enable Bluetooth on your phone. Move closer to the remote. Try re-pairing.
Remote control not taking photos.	Not paired; camera app not open; phone settings.	Confirm remote is paired. Open your phone's camera app. Some Android phones may require changing volume button function to shutter in camera settings.
Flexible arm sags or doesn't hold position.	Overloaded; not bent correctly for support.	Ensure the weight of the phone is supported by the arm's structure. For overhead shots, it is recommended to push the flexible arm forward and adjust the height, or place a weight on the tripod stopper for stability.



This image provides guidance on stabilizing the flexible arm for overhead shooting. It suggests pushing the flexible arm forward and adjusting height, or placing a weight on the tripod stopper to prevent tilting.

SPECIFICATIONS

Feature	Detail
Brand	Aureday
Model Number	TZ72R
Included Accessories	Tripod, Flexible Arm, Remote Control
Color	Black
Compatible Devices	Smartphones
Size (Tripod + Flexible Arm)	183cm Tripod + 38cm Flexible Arm

Feature	Detail
Maximum Height	221 cm
Head Type	Panorama Head
Battery Included	Yes (for remote control)
Package Dimensions	44.6 x 9.7 x 6.7 cm
Item Weight	850 g
Material	Aluminum

WARRANTY AND SUPPORT

Aureday provides a **1-year warranty** for this product. Should you encounter any issues or have questions regarding the use of your product, please do not hesitate to contact our customer support team. We are committed to providing reliable service, including repair or replacement, for any product problems.

For support, please contact the seller directly through the platform where you purchased the product, or refer to the contact information provided with your purchase.