



[Manuals.plus](#) /

› [GROWNSY](#) /

› GROWNSY 8-in-1 Bottle Warmer User Manual

GROWNSY N1T

GROWNSY 8-in-1 Bottle Warmer User Manual

Model: N1T

INTRODUCTION

Thank you for choosing the GROWNSY 8-in-1 Bottle Warmer. This versatile appliance is designed to simplify feeding times by offering multiple functions including rapid warming, defrosting, keeping warm, steaming, food heating, and more. It is engineered for safety, efficiency, and convenience, ensuring your baby's milk and food are always at the perfect temperature. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the water level is appropriate for the selected function.
- This appliance is for household use only.

PRODUCT OVERVIEW

The GROWNSY 8-in-1 Bottle Warmer features an intuitive design with a clear LCD screen and easy-to-use controls. Below is an illustration of the main unit and its components.



Figure 1: Front view of the GROWNSY 8-in-1 Bottle Warmer, highlighting the digital display and control panel.

Components:

- **Main Unit:** The primary body housing the heating element and control panel.
- **Control Panel:** Features an LCD screen, power button, mode selection buttons, and temperature/timer adjustment buttons.
- **Lid:** Transparent lid for covering bottles during warming or steaming.
- **Anti-Scald Basket:** A removable basket designed to safely hold bottles or food jars and prevent direct contact with the heating plate.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the main unit with a damp cloth. Wash the lid and anti-scald basket with warm soapy water, then rinse thoroughly and dry. Do not immerse the main unit in water.
3. **Placement:** Place the bottle warmer on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The LCD screen will illuminate briefly.

OPERATING INSTRUCTIONS

The GROWNSY 8-in-1 Bottle Warmer offers multiple functions to cater to various needs. Always ensure the water level is appropriate for the selected function.

1. Fast Warming

This mode quickly warms milk to the desired temperature, typically within 2-7 minutes depending on the volume and initial temperature of the milk. This is ideal for soothing a hungry baby quickly.

2-7 Minutes Fast Warming Milk



Figure 2: Fast Warming function in action, demonstrating quick heating of milk.

- Place the bottle with milk into the anti-scald basket, then place the basket into the warmer.
- Add appropriate amount of purified water (refer to water level markings for guidance).
- Select the "Fast" mode on the control panel.
- The warmer will automatically heat the milk to the preset temperature.
- Always test milk temperature before feeding.

2. Thaw/Defrost

Safely defrosts frozen breast milk or baby food, preserving nutrients. This function gently brings frozen items to a liquid state before warming.

Fast Defrost Breastmilk



Figure 3: Defrosting breast milk, illustrating the temperature change from frozen to ready-to-warm.

- Place the frozen milk bag or container into the anti-scald basket.
- Add water to the warmer.

- Select the "Thaw" mode. The unit will gently defrost the contents.

3. Keep Warm (24H)

Maintains milk or food at a constant, safe temperature for up to 24 hours, perfect for night feedings or when you need milk readily available.

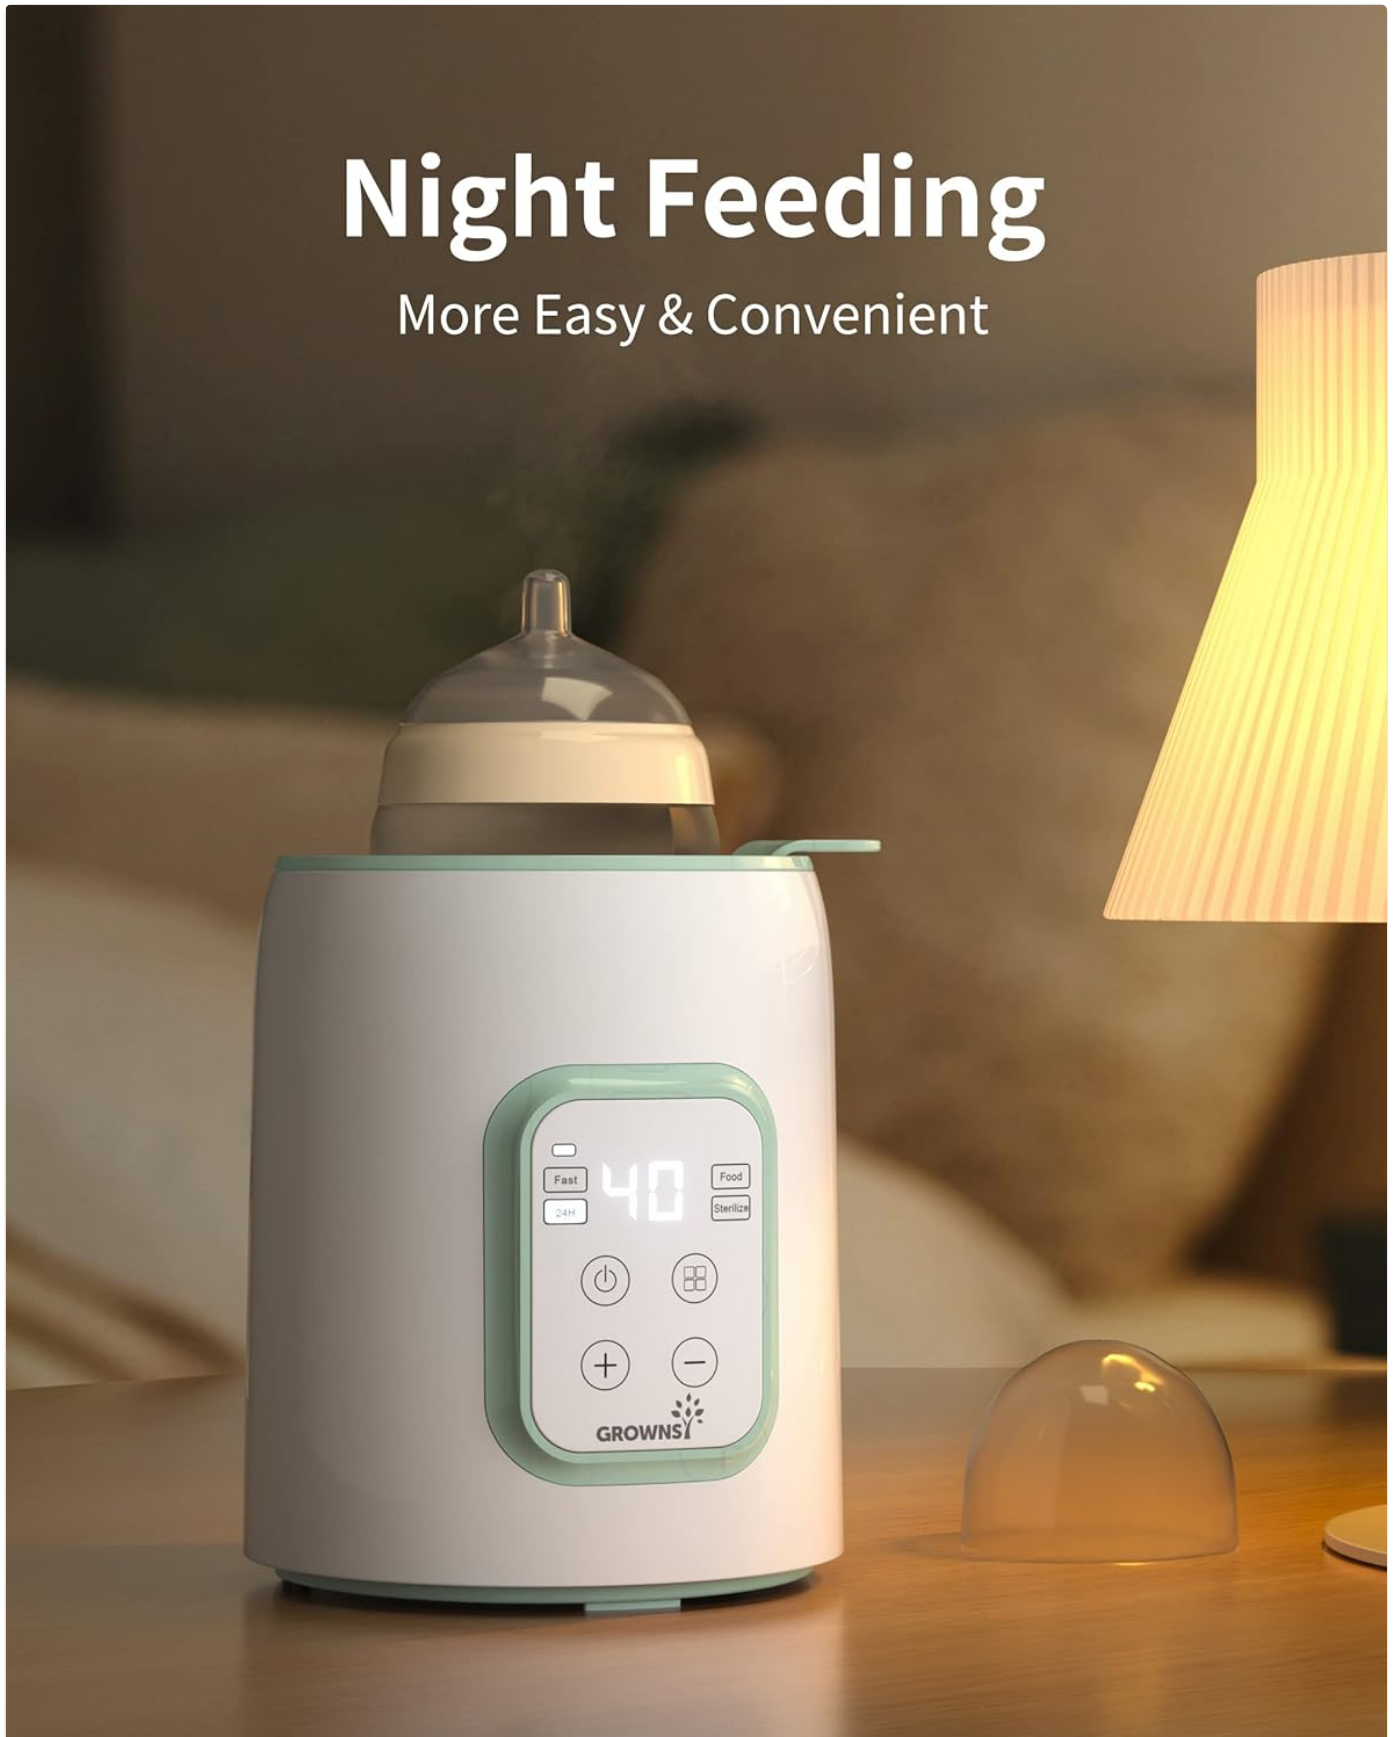


Figure 4: Bottle warmer positioned for convenient night feeding, maintaining milk temperature.

- After warming, select the "24H" or "Keep Warm" mode.
- The warmer will hold the temperature at the preset level.

4. Steaming/Sterilize

Utilizes high-temperature steam to sterilize bottles, pacifiers, and small accessories, ensuring hygiene and safety for your baby.

Effective Steaming Up to 99.9%



Figure 5: Steaming process, showing condensation inside the lid, indicating effective sterilization.

- Place clean bottles or accessories upside down in the anti-scald basket.
- Add a small amount of water to the heating plate (refer to manual for exact quantity).
- Select the "Sterilize" mode. The unit will generate steam to sterilize.

5. Food Heating

Gently warms baby food jars or pouches to a comfortable eating temperature.

- Place the food jar/pouch into the anti-scald basket.
- Add water to the warmer.
- Select the "Food" mode.
- Stir and test food temperature before feeding.

6. Timer Function

Allows you to set a specific warming duration, providing precise control over the heating process. The unit automatically shuts off when the timer expires.

- After selecting a warming mode, use the +/- buttons to set the desired time.
- The warmer will operate for the set duration and then automatically turn off.

7. Adjustable Temperature

Fine-tune the target temperature for milk or food to suit your baby's preference or specific requirements, ensuring optimal nutrient preservation.

2-7 Minutes Fast Warming Milk



Figure 6: Smart accurate temperature control feature, allowing precise temperature adjustments.

- In certain modes, use the +/- buttons to adjust the target temperature.
- The LCD screen will display the current and target temperatures.

8. Anti-Scald Basket

The included basket ensures safe handling of hot bottles and food jars, preventing direct contact with the heating element and making removal easy.

- Always use the anti-scald basket when placing bottles or food into the warmer.
- Use the handle of the basket to safely lift out hot items.



Figure 7: Overview of all 8 multifunctions of the bottle warmer.

MAINTENANCE

Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Wash the lid and anti-scald basket with warm, soapy water. Rinse thoroughly and air dry or wipe with a clean cloth.

Descaling:

Mineral deposits (limescale) can build up on the heating plate over time, affecting performance. Descale regularly, especially in areas with hard water.

- Mix 50ml of white vinegar with 100ml of cold water.
- Pour the solution into the warmer.
- Allow it to soak for 30 minutes to 1 hour, or until the limescale dissolves. For stubborn deposits, you can briefly turn on the warmer for a few minutes (without a bottle) to heat the solution, then unplug and let it soak.
- Pour out the solution and rinse the heating plate thoroughly with clean water several times.
- Wipe dry with a clean cloth.

Storage:

When not in use for an extended period, ensure the warmer is clean and dry. Store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in; power outlet malfunction; unit damaged.	Ensure plug is securely inserted. Test outlet with another appliance. If still not working, contact customer support.
Milk/food not warming sufficiently.	Insufficient water; incorrect mode selected; limescale buildup.	Add more water. Select appropriate warming mode. Descale the unit as per maintenance instructions.
Unit produces excessive steam or boiling water.	Too much water; incorrect mode selected.	Reduce water quantity. Ensure correct mode (e.g., "Fast Warm" vs. "Sterilize") is selected.
LCD screen not displaying correctly.	Electrical glitch; unit malfunction.	Unplug the unit for a few minutes, then plug back in. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	N1T
Manufacturer	GROWNSY
Material Composition	Plastic (BPA-Free)

Feature	Detail
Dimensions (Package)	22.2 x 13.2 x 13.2 cm
Weight (Package)	690 grams
Power Source	Electric (No batteries required)
Functions	Fast Warming, Thaw, Keep Warm (24H), Steaming/Sterilize, Food Heating, Timer, Adjustable Temperature, Anti-scald basket

WARRANTY AND SUPPORT

GROWNSY products are manufactured to the highest quality standards. For warranty information, technical support, or any questions regarding your GROWNSY 8-in-1 Bottle Warmer, please refer to the contact information provided on the product packaging or visit the official GROWNSY website. Please have your model number (N1T) and purchase details ready when contacting support.