

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Twist & Learn Gamer Console HNL50 - French Edition Instruction Manual

Fisher-Price HNL50

Fisher-Price Twist & Learn Gamer Console HNL50 - French Edition Instruction Manual

Model: HNL50 | Brand: Fisher-Price

INTRODUCTION

Welcome to the instruction manual for your Fisher-Price Twist & Learn Gamer Console, Model HNL50. This interactive toy is designed to engage and educate children aged 9-36 months through playful interaction. It combines lights, music, and educational phrases to support early development.

IMPORTANT SAFETY INFORMATION

- For external use only.
- Avoid contact with eyes.
- Keep away from any flame or heat source.
- Always supervise children during play.
- Do not immerse the toy in water. Clean with a damp cloth only.

WHAT'S IN THE BOX

Your package should contain the following item:

- 1 x Fisher-Price Twist & Learn Gamer Console (French Edition)



Image: Front view of the Fisher-Price Twist & Learn Gamer Console.

SETUP

Battery Installation

The Fisher-Price Twist & Learn Gamer Console requires AA alkaline batteries for operation.

1. Locate the battery compartment on the back of the console.
2. Using a screwdriver, open the battery compartment cover.
3. Insert the required AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: Always use fresh batteries and dispose of old batteries responsibly.

OPERATING INSTRUCTIONS

The console is designed for intuitive play.

1. **Power On/Off:** Locate the power switch, usually on the side or back of the console, and slide it to the "On" position.
2. **Activate Lights, Music, and Sounds:** Press any of the more than 10 interactive buttons on the console to activate various lights, musical tunes, and educational sounds and phrases.
3. **Interactive Play:**
 - **Joystick:** Move the joystick to interact with the on-screen characters and activities.
 - **Directional Pad:** Press the directional pad buttons for additional interactive responses.
 - **Twist and Slide "Controllers":** The side handles can be twisted and slid, producing clicking sounds and further engaging the child.
4. **Volume Control:** Adjust the volume using the dedicated volume switch or buttons, if available, to a comfortable level.



Image: A child's hands interacting with the buttons on the console.



Image: A child twisting one of the side controllers on the console.

KEY FEATURES

- **Interactive Learning:** Over 65 songs, sounds, and phrases teach counting to 10, shapes, and colors.
- **Realistic Design:** Features a joystick, directional pad, and twistable/slidable "controllers" for an authentic pretend gaming experience.
- **Sensory Engagement:** Multi-colored lights, music, and sounds stimulate visual and auditory senses.
- **Motor Skill Development:** Encourages fine motor skills through pressing buttons, manipulating the joystick, and twisting the handles.
- **Cause-and-Effect Learning:** Children learn about cause and effect as their actions trigger responses from the console.



Image: A child playing with the console, highlighting its interactive lights and sounds.

MAINTENANCE

Cleaning

To clean the console, wipe it with a soft, damp cloth. Do not use abrasive cleaners or immerse the toy in water.

Storage

Store the console in a cool, dry place away from direct sunlight when not in use. Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or lights	- Batteries are dead or incorrectly installed. - Power switch is off.	- Check battery polarity and replace with fresh AA alkaline batteries. - Ensure the power switch is in the "On" position.
Intermittent sound/lights	- Low battery power. - Loose battery connection.	- Replace batteries. - Ensure batteries are securely seated in the compartment.
Buttons not responding	- Toy may be in a sleep mode. - Internal malfunction.	- Turn the power off and then on again. - If the problem persists after checking batteries and power, contact customer support.

SPECIFICATIONS

Model Number	HNL50
Brand	Fisher-Price
Recommended Age	9-36 Months
Material	Plastic
Dimensions (L x W x H)	22.9 x 5.1 x 15.2 cm (approximately 9 x 2 x 6 inches)

Power Source	Battery (AA Alkaline)
Educational Objective	Numeracy & Literacy
Number of Players	1
GTIN/UPC	194735143986

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Fisher-Price website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Online Support: Visit the [Fisher-Price official website](#) for FAQs and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question