

[Manuals.plus](#) /

› [WOLFANG](#) /

› WOLFANG GB2000 Action Camera Floating Hand Grip User Manual

WOLFANG GB2000

WOLFANG GB2000 Action Camera Floating Hand Grip User Manual

Model: GB2000

1. INTRODUCTION

Thank you for choosing the WOLFANG GB2000 Action Camera Floating Hand Grip. This device is designed to provide a secure and comfortable grip for your action camera, ensuring it remains afloat if dropped in water. Its high-visibility design makes it easy to spot, making it an essential accessory for water sports and activities.

2. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1x WOLFANG GB2000 Floating Hand Grip
- 1x Long Thumb Screw
- 1x Adjustable Wrist Strap



Reliable wrist-strap for safety securing

Image: The WOLFANG GB2000 Floating Hand Grip shown with its included long thumb screw and wrist strap, ready for assembly.

3. PRODUCT FEATURES

- **Floating Design:** Keeps your action camera afloat on the water surface, preventing loss.
- **Waterproof Construction:** Made from durable ABS plastic, suitable for all water environments.
- **Ergonomic Grip:** Textured handle provides a secure and comfortable hold, even when wet.
- **High Visibility:** Bright yellow base and top make the grip easy to spot in water.
- **Integrated Storage:** The bottom cap is removable, offering a small compartment for lightweight items like a key.
Note: Do not store heavy items as this may affect buoyancy.
- **Universal Compatibility:** Designed to work with WOLFANG action cameras and most other action camera brands.

Floaty and Waterproof Design
Bright yellow color increases visibility



Image: The WOLFANG GB2000 Floating Hand Grip with an action camera attached, partially submerged in water, demonstrating its buoyancy and bright color for visibility.

4. SETUP

1. Attach Your Action Camera:

Align your action camera's mounting bracket with the three-pronged mount on top of the floating hand grip. Insert the long thumb screw through the aligned holes and tighten it securely by hand. Ensure the camera is firmly attached and does not wobble.

Super compatibility with all action cameras



Image: A close-up view illustrating how to attach an action camera to the WOLFANG GB2000 Floating Hand Grip using the provided thumb screw.

2. **Attach the Wrist Strap:**

Thread the loop of the adjustable wrist strap through the small eyelet located at the bottom of the hand grip. Secure the strap by passing the larger end through the loop you just created and pulling it tight. Adjust the strap to fit comfortably around your wrist for added security.

3. **Using the Storage Compartment (Optional):**

To access the storage compartment, unscrew the bottom cap of the grip. You can store small, lightweight items here. Ensure the cap is securely tightened before use, especially in water, to maintain buoyancy and prevent water ingress.

5. OPERATING INSTRUCTIONS

The WOLFANG GB2000 Floating Hand Grip is designed for ease of use in various environments, particularly water-based activities.

- **Secure Your Camera:** Always ensure your action camera is securely mounted to the grip before entering the water.
- **Use the Wrist Strap:** For maximum security, always wear the wrist strap. This prevents accidental drops and ensures your camera stays with you.
- **Water Activities:** The grip will keep your camera floating upright on the surface if it slips from your hand, making it easy to retrieve. Its bright color further aids visibility.
- **General Use:** The ergonomic design provides a stable platform for filming, whether in or out of water, reducing camera shake and improving comfort.



Image: A diver underwater holding an action camera mounted on the WOLFANG GB2000 Floating Hand Grip, giving a thumbs-up.



Image: A collage showing individuals enjoying various water sports like diving and snorkeling, all using the WOLFANG GB2000 Floating Hand Grip with their action cameras.

6. MAINTENANCE

- **After Saltwater Use:** Always rinse the hand grip thoroughly with fresh water after use in saltwater to prevent corrosion and salt buildup.
- **Drying:** Allow the grip to air dry completely before storing.
- **Storage:** Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check the mounting screw and the grip for any signs of wear or damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grip does not float or sinks.	<ul style="list-style-type: none">Too much weight stored in the internal compartment.Camera/housing combination is excessively heavy.	<ul style="list-style-type: none">Remove any items from the internal compartment.Ensure your camera setup (camera + housing) does not exceed the buoyancy capacity of the grip.
Camera feels loose or wobbles.	Mounting screw is not tightened sufficiently.	Ensure the long thumb screw is tightened firmly by hand until the camera is secure. Do not overtighten.

8. SPECIFICATIONS

Model Name	GB2000
Brand	WOLFANG
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Floating, Lightweight, Ergonomic Grip
Water Resistance Level	Waterproof
Item Weight	0.12 kg (approximately 3.07 oz)
Dimensions (Approx.)	7.01 inches (length)
Compatible Devices	WOLFANG Action Cameras and most other action cameras



Pocket-Size Portable and Lightweight

Image: The WOLFANG GB2000 Floating Hand Grip displayed with its approximate length (7.01 inches) and weight (3.07 oz) indicated.

9. WARRANTY AND SUPPORT

WOLFANG provides a **2-year warranty** for the GB2000 Action Camera Floating Hand Grip. Additionally, a **1-month free return and exchange** policy is offered from the date of purchase.

For any support needs, technical assistance, or warranty claims, please contact our customer service team:

Email: support@wolfang.co

Please include your purchase details and a description of the issue when contacting support for faster service.

© 2024 WOLFANG. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CWH7SY4Z>

More documents and user manuals: **<https://manuals.plus/>**