

[Manuals.plus](#) /

› [LELO](#) /

› LELO F1S V3 XL Pleasure Console User Manual

LELO 12003

LELO F1S V3 XL Pleasure Console User Manual

Brand: LELO

Model: 12003

1. INTRODUCTION

The LELO F1S V3 XL is an advanced male pleasure device designed for an immersive and customizable experience. It incorporates cutting-edge technology to deliver deep, all-around pleasure without the need for manual thrusting. With its app-connected interface and interactive AI mode, users can personalize their experience and explore a wide range of sensations. This XL version is specifically engineered to provide enhanced comfort and a roomier fit.

2. PACKAGE CONTENTS

Upon opening your LELO F1S V3 XL package, please ensure all the following items are present:

 
- LELO F1S V3 XL Pleasure Console
- USB Charging Cable
- User Manual & Warranty Information
- Warranty Registration Card
- Moisturizer Sachet (water-based lubricant)

F1S V3 XL

pleasure console

USER MANUAL

how to use guide

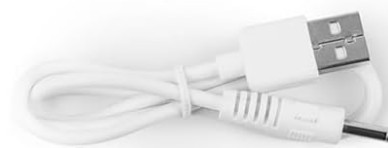

CHARGING CORD

USB cable



WARRANTY CARD

verifies product authenticity



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.

Image: Contents of the LELO F1S V3 XL package, including the device, charging cable, user manual, warranty card, and lubricant sachet.

3. KEY FEATURES

The LELO F1S V3 XL is equipped with several advanced features to enhance your experience:

- **Sensonic & Cruise Control Technology:** Delivers sonic waves for deep stimulation without requiring extra thrusting motion. Cruise Control ensures consistent intensity.
- **App-Connected Pleasure Console:** Connects via Bluetooth to a smartphone app, unlocking 4 additional modes, including an interactive AI mode, and offering greater control.
- **Extra Large Version:** Designed with a larger internal diameter for users seeking a roomier fit.
- **Dual Motor Design:** Features two synchronized motors that stimulate sensitive nerve endings and the shaft for powerful, hands-free pleasure.
- **Auto-Adjusted Liquid Silicone Sleeve:** The internal sleeve is made from flexible liquid silicone with ribs that adjust to your anatomy for a smooth and pleasurable experience.
- **8 Powerful Pleasure Settings:** Offers a variety of vibration patterns and intensities.

- **Responsive Sensors:** Provides performance feedback on speed, stamina, and skill when connected to the app.
- **100% Waterproof:** Fully submersible for easy cleaning and use in the bath or shower.

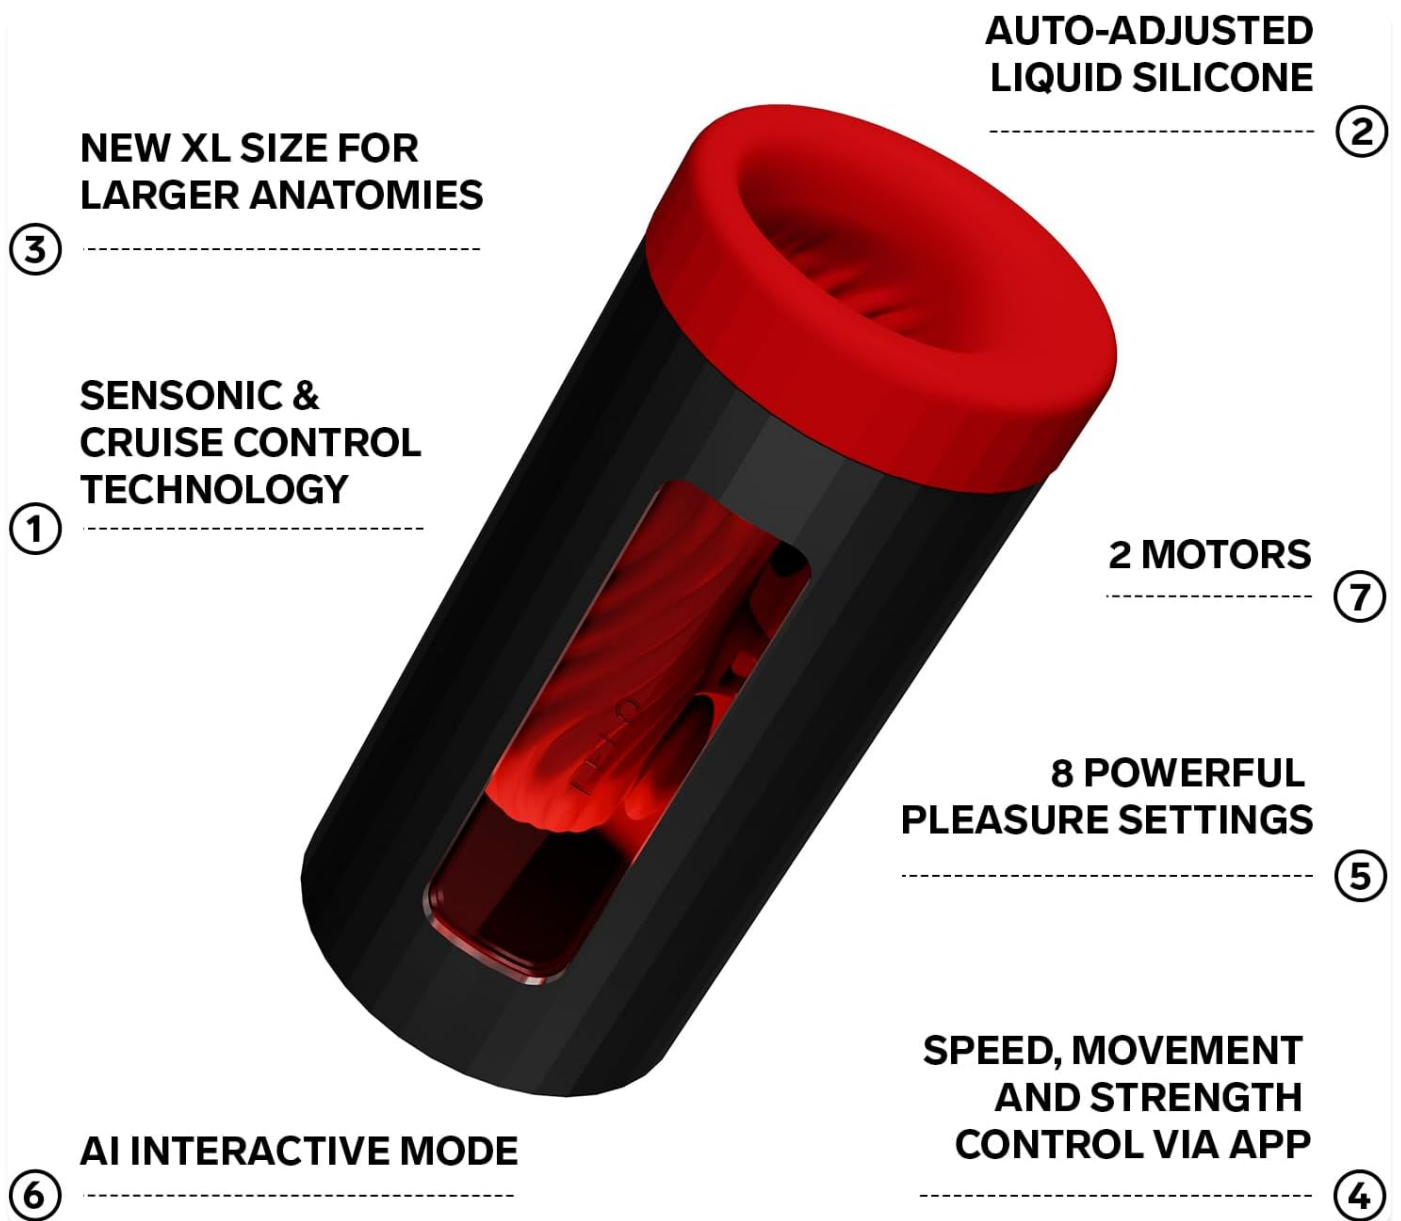 


Image: Diagram highlighting key features of the LELO F1S V3 XL, including Sensonic & Cruise Control, AI Interactive Mode, XL size, dual motors, and auto-adjusted liquid silicone.

Features



SENSONIC & CRUISE CONTROL TECHNOLOGY

the sensation of sonic waves with patented Cruise Control technology make F1S V3 the ultimate act of self-love



LELO APP CONNECTION VIA BLUETOOTH

gain more control during intimacy and unlock additional settings including AI INTERACTIVE mode



RESPONSIVE SENSORS

performance feedback on your speed, stamina, and skill



AUTO-ADJUSTED LIQUID SILICONE

real-feel material that adjusts to your anatomy



XL SIZE AVAILABLE

to fit larger anatomies



DUAL MOTOR DESIGN

delivers the sensation with no hand motion needed

Image: A visual summary of the LELO F1S V3 XL's features, such as Sensonic & Cruise Control, LELO App connection, responsive sensors, auto-adjusted liquid silicone, XL size, and dual motor design.

4. SETUP

4.1 Initial Charging

Before your first use, fully charge your LELO F1S V3 XL for approximately 2 hours. The LED lights will indicate charging status.

4.2 App Connection

To unlock the full potential of your device, including additional modes and the interactive AI mode, download the LELO app from your smartphone's app store. Enable Bluetooth on your device and follow the in-app instructions to pair your LELO F1S V3 XL.

5. OPERATION

Familiarize yourself with the basic controls and functions of your LELO F1S V3 XL:

- **To Turn It On:** Press and hold the power button.
- **To Switch Between Modes:** Press the power button shortly. The LED lights will go steady, showing the vibration level.
- **To Adjust Intensity:** Press the + or - button.
- **To Turn It Off:** Press and hold the power button.
- **App-Connected:** Connect your device via Bluetooth to unlock additional settings and the interactive AI mode.
- **Travel Lock:** To activate or deactivate the travel lock, hold the + and - buttons simultaneously for 5 seconds.

How to use

BEFORE FIRST USE

charge your F1S V3 for 2 hours

TO TURN IT ON

press and hold the power button

TO SWITCH BETWEEN THE MODES

press the power button shortly

THE LED LIGHTS WILL GO STEADY

showing the vibration level

TO ADJUST THE INTENSITY

press the + or – button

TO TURN IT OFF

press and hold the power button

APP-CONNECTED

connect your device via Bluetooth
to unlock additional settings

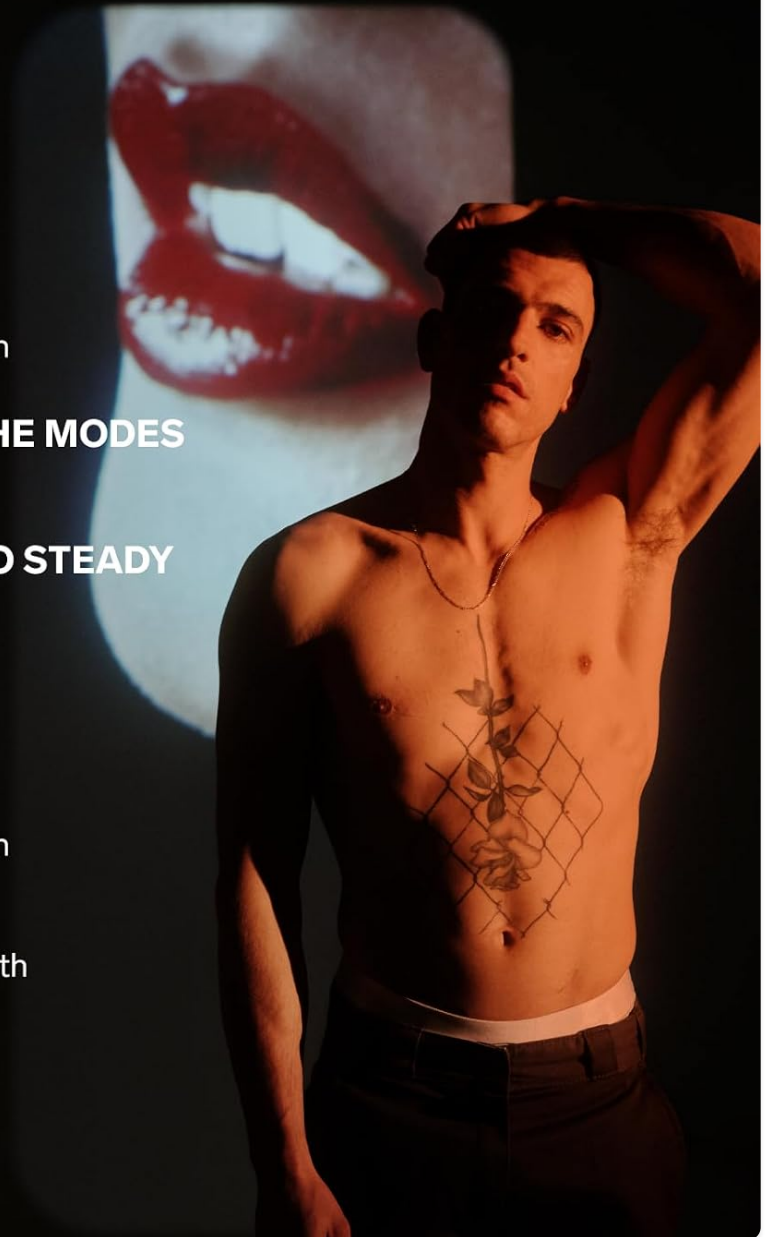 


Image: Instructions on how to use the LELO F1S V3 XL, including charging, turning on/off, switching modes, adjusting intensity, and app connectivity.

Useful information



CHARGING TIME / USE TIME

2 h both



TRAVEL LOCK

hold the + and the - buttons for 5 seconds



STANDBY

90 days



100% WATERPROOF

perfect for the bath and shower



Image: Useful information about the LELO F1S V3 XL, covering charging/use time, travel lock, standby duration, and 100% waterproof feature.

5.1 Using the LELO App

The LELO app provides an intuitive interface to control your F1S V3 XL. You can select from various pre-set programs, create custom patterns, and engage with the interactive AI mode which responds to your movements in real-time. Ensure your device is charged and Bluetooth is active on your smartphone for seamless connection.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the LELO F1S V3, including its app connectivity and various modes.

6. MAINTENANCE

6.1 Cleaning

The LELO F1S V3 XL is 100% waterproof, making cleaning simple and hygienic. After each use, wash the device

thoroughly with warm water and a LELO Toy Cleaner or a mild, antibacterial soap. Rinse well to remove all soap residue and allow it to air dry completely before storing.

6.2 Storage

Store your LELO F1S V3 XL in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

7. TROUBLESHOOTING

If you encounter any issues with your LELO F1S V3 XL, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the device is fully charged. If the issue persists, try performing a soft reset by holding the power button for 10 seconds.
- **App Connectivity Issues:** Verify that Bluetooth is enabled on your smartphone and the device is within range. Try restarting both the LELO F1S V3 XL and the LELO app.
- **Vibration Weak or Inconsistent:** Check the battery level. A low battery can affect performance. Ensure the device is clean and free of debris that might obstruct the motors.
- **Discomfort During Use:** Ensure adequate water-based lubricant is applied to the internal sleeve. While the XL version is designed for a roomier fit, individual anatomies vary.
- **Travel Lock Engaged:** If the device is unresponsive, check if the travel lock is active. Deactivate it by holding the + and - buttons simultaneously for 5 seconds.

If these steps do not resolve the issue, please contact LELO customer support for further assistance.

8. SPECIFICATIONS

Attribute	Detail
Product Dimensions	6.06 x 2.83 x 1.97 inches (154 x 72 x 50 mm)
Weight	1.1 Pounds (0.5 kg)
Insertable Length	120 mm / 4.7 inches
Girth (Diameter)	42mm - 64mm / 1.65 in - 2.5 inches
Battery Type	1 Lithium Ion battery (included)
Charging Time	2 hours
Use Time	Up to 2 hours
Standby Time	90 days
Waterproof	100%
Material	Body-safe Liquid Silicone

9. WARRANTY AND SUPPORT

Your LELO F1S V3 XL comes with a comprehensive warranty. Please refer to the included Warranty Registration Card for specific terms and conditions. For product registration, frequently asked questions, and direct customer support, please visit the official LELO website.

For a comprehensive user guide and certificate of compliance, please refer to the official [LELO F1S V3 XL User Manual \(PDF\)](#).

10. SAFETY INFORMATION

Please read and understand all safety instructions before using your LELO F1S V3 XL. This product is intended for adult use only. Do not use if the device appears damaged or if the silicone sleeve is torn. Consult a healthcare professional if you experience any discomfort, irritation, or adverse reactions during or after use. Always clean the device thoroughly before and after each use.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2024 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question