

KRPTQJoo AA59-00784C

KRPTQJoo IR Remote Control for Samsung Smart LED UHD HDTV TV (Model AA59-00784C) User Manual

1. INTRODUCTION

This manual provides instructions for the KRPTQJoo IR Remote Control, model AA59-00784C. This remote is designed as a direct replacement for specific Samsung Smart LED UHD HDTV TV models. It operates using infrared (IR) technology and does not include voice search functionality.

Important Note: This remote control is a replacement unit and is not universal. It is specifically compatible with the listed Samsung TV models and does not require programming. Please ensure your TV model is listed below for proper functionality.

Compatible Samsung TV Models include:

- UA40H6400AW, UA48H6400AW, UA55H6400AW, UA60H6400AW, UA65H6400AW, UA75H6400AW
- UA32H6400AWXXY, UA40H6400AWXXY, UA48H6400AWXXY
- UE55H6700SL, BN59-01182M, BN59-01185A, UN75H7100AFA, UN40H6400
- UE40H6700SL, UE40H6700ST, UE40H6705ST, UE40H6740SV
- UE48H6700SL, UE48H6700ST, UE48H6705ST, UE48H6740SV, UE48H6750SV, UE48H6770SV
- UE40F6510SB, UE40F6510SS, UE55F6510SB, UE55F6510SS
- UE58H5203AW, UE48H5030AW, UE40H5030AW, UE32H5030AW
- UE50H5000AW, UE48H5000AW, UE40H5000AW
- UE65H6470SS, UE65H6475SU, UE55H6750SV, UE55H6770SV, UE55H6850AW, UE55H6850AY, UE55H6890SS, UE55H6895SU
- UE65H6400AK, UE65H6400AW, UE65H6470AS

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards to open the compartment.
3. Insert two (2) AAA alkaline batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Remote control with the battery cover removed, illustrating the battery compartment for AAA batteries.

2.2 Initial Use

This remote control requires no programming. Once batteries are correctly installed, it is ready for immediate use with compatible Samsung TV models.

3. OPERATING INSTRUCTIONS

To operate your TV, point the remote control directly at the TV's infrared (IR) sensor. The maximum effective range is approximately 8 meters (26 feet).



Figure 2: Front view of the remote control with all buttons labeled.

3.1 Button Functions

- **POWER (Red Button):** Turns the TV on or off.
- **SOURCE:** Selects the input source (e.g., HDMI, AV).
- **STB GUIDE / STB MENU / STB CONTROL:** Buttons for controlling a connected Set-Top Box (if applicable).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **PRE-CH:** Returns to the previous channel.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (up/down):** Changes channels.
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.
- **SMARTHUB:** Accesses the Smart Hub feature of your Samsung TV.
- **GUIDE:** Displays the electronic program guide.

- **TOOLS:** Accesses quick tools or options.
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & ENTER:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functionality varies by application or TV menu.
- **NE / STATUS / AM:** Additional function buttons, specific use may vary by TV model or application.
- **SEARCH / RECOMMEND:** Accesses search or recommendation features.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure batteries are correctly installed with the proper polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's IR sensor.
 - Ensure you are within the effective operating range (up to 8 meters) and pointing the remote directly at the TV.
- **Certain buttons are not working:**
 - This may indicate low battery power. Try replacing the batteries.
 - Some buttons' functionality may depend on the specific TV model or the current input/application.
- **Remote does not control my TV:**
 - Verify that your TV model is listed in the compatibility section (Section 1). This remote is not universal.
 - If your TV model is not explicitly listed, the remote may not be compatible.

How to buy a Remote Control

The original/old Remote control is still exists but it's broken and doesn't work	If you don't have the model No. or don't know the model No., send the front and back picture of the remote control to us ,that will be be a professional technician to match the right remote for you
The old remote control is Missing, only the brand of unit	Provide a clear picture of the brand and model No. of the machine or the original remote control in the manual and the model & Manufacturer of the machine, send it to us
Still have the original remote, but would like to get a spare one	Send us a clear picture of the old remote control (front and back) for reference, as well as the brand & Model number of the Machine

Our Remote control is Replacement, Not Universal, Only suitable for the models we list.

We will send the correct remote control by checking the given model number/photos of the old control.

In some case, even though the remote looks the same ,the codes inside are different; If the model number suffix is not exactly the same, the correct remote control is also different.

If you are not sure or our remote doesn't work ,please provide us with as much information as possible in order to find out the problem and solve it soon.

Figure 3: Compatibility guide for remote controls. If you are unsure about your TV's compatibility, refer to this guide or consult your TV's original documentation.

6. SPECIFICATIONS

Feature	Description
Brand	KRPTQJoo
Model Name	Infrared TV Remote
Model Number	AA59-00784C
Connectivity Technology	Infrared (IR)
Maximum Range	8 Meters
Battery Type	Alkaline
Number of Batteries Required	2 AAA batteries (not included)
Compatible Devices	Specific Samsung Smart LED UHD HDTV TV models
Special Features	Not Universal, No Programming Required, No Voice Search Function

7. WARRANTY INFORMATION

This product comes with a 90-day warranty from the date of purchase. Please retain your proof of purchase for any warranty claims.

8. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the seller or your point of purchase for support.