

cozze 90523

cozze®

Cozze Deluxe Plancha User Manual

Model: 90523

1. INTRODUCTION

Welcome to the Cozze Deluxe Plancha user manual. This high-performance outdoor grill is designed to elevate your culinary experience on terraces and balconies. With its advanced steel burners and enameled cooking surface, it ensures precise and uniform cooking for a variety of ingredients, from juicy meats to crisp vegetables. Its compact and elegant design, featuring a matte black finish and zinc-treated construction, offers both aesthetic appeal and durability. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure you get the most out of your Cozze Plancha.



Figure 1: Cozze Deluxe Plancha, compact model without lid.

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembling and operating your Cozze Plancha. Failure to follow these instructions could result in fire, explosion, or serious injury.

- **Outdoor Use Only:** This appliance is for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Ventilation:** Ensure adequate ventilation around the appliance. Do not obstruct airflow.
- **Flammable Materials:** Keep the plancha at a safe distance from any flammable materials, structures, or surfaces.
- **Gas Connection:** Always ensure gas connections are tight and leak-free. Perform a leak test with soapy water before each use. A gas hose and regulator are required for operation and are sold separately.
- **Hot Surfaces:** The plancha surfaces become extremely hot during operation. Use heat-resistant gloves and avoid direct contact. Allow the appliance to cool completely before cleaning or moving.
- **Children and Pets:** Keep children and pets away from the hot appliance.
- **Stable Surface:** Always place the plancha on a stable, level, non-combustible surface.
- **Never Leave Unattended:** Do not leave the operating plancha unattended.
- **Proper Storage:** Store the gas cylinder in a well-ventilated area, away from heat sources. Disconnect the gas cylinder when the plancha is not in use.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present and undamaged.

- Cozze Deluxe Plancha Unit (Model 90523)
- User Manual (this document)
- Recipe Book

Note: A gas hose and regulator are essential for the operation of this plancha and **are not included** in the package. These must be purchased separately and be compatible with your local gas supply regulations.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials from the plancha. Retain packaging for future storage or transport if needed.
2. **Placement:** Position the plancha on a flat, stable, non-combustible outdoor surface, such as a patio table or dedicated outdoor kitchen unit. Ensure there is sufficient clearance from walls and other objects (minimum 1 meter from combustible materials).
3. **Gas Cylinder Connection:**
 - Ensure the gas cylinder valve is closed.
 - Connect a compatible gas hose and regulator (not included) to the gas inlet on the side of the plancha. Tighten all connections securely.
 - Connect the regulator to your gas cylinder according to the regulator's instructions.
4. **Leak Test:**
 - Prepare a soapy water solution (50% soap, 50% water).
 - Open the gas cylinder valve slowly.
 - Apply the soapy solution to all gas connections (hose to plancha, regulator to hose, regulator to cylinder).

- If bubbles appear, there is a leak. Close the gas valve immediately and re-tighten connections. Repeat the test. If leaks persist, do not use the appliance and contact a qualified technician.
5. **Initial Burn-Off:** Before first use, operate the plancha on high heat for 10-15 minutes to burn off any manufacturing residues. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS



Figure 2: The Cozze Plancha in use during an outdoor gathering.

1. Lighting the Burners:

- Ensure the gas cylinder valve is open.
 - Push in and turn one control knob counter-clockwise to the "HIGH" position. You should hear a clicking sound from the igniter.
 - If the burner does not light within 5 seconds, turn the knob to "OFF", wait 5 minutes for gas to dissipate, and try again.
 - Once the first burner is lit, you can light additional burners by pushing in and turning their respective knobs to the desired setting.
2. **Temperature Control:** The control knobs allow you to adjust the flame intensity from "LOW" to "HIGH", providing precise temperature control for different types of food.
3. **Preheating:** For best results, preheat the plancha for 5-10 minutes on medium-high heat before placing food on the cooking surface.
4. **Cooking:** Lightly oil the cooking surface before placing food. Cook food evenly, turning as needed. The enameled surface is ideal for searing, grilling, and frying.
5. **Turning Off:**
- Turn all control knobs to the "OFF" position.
 - Close the valve on the gas cylinder.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will extend the life of your Cozze Plancha and ensure optimal performance. Always allow the plancha to cool completely before cleaning.

- **After Each Use:**
 - Scrape off any food residue from the cooking surface using a non-abrasive scraper.
 - Empty and clean the integrated grease trap. Wash with warm, soapy water.
 - Wipe the cooking surface with a damp cloth. For stubborn residue, use a mild degreaser.
- **Deep Cleaning:** Periodically, perform a more thorough cleaning.
 - Remove the cooking surface if possible and clean it thoroughly.
 - Clean the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the finish.
 - Inspect burners for blockages and clean if necessary (refer to a qualified technician if unsure).
- **Storage:** When not in use, store the plancha in a dry, protected area. Disconnect the gas cylinder and store it separately in a well-ventilated space.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not light.	No gas supply.	Ensure gas cylinder valve is open and has gas.
	Gas hose/regulator not connected or faulty.	Verify a compatible gas hose and regulator are correctly connected and functional. These are sold separately.
	Igniter not sparking.	Check igniter electrode for damage or blockage.
	Burner port clogged.	Clean burner ports.
Uneven heating.	Burner ports partially clogged.	Clean burner ports.
	Low gas pressure.	Check gas cylinder level and regulator.
Excessive smoke.	Grease buildup. Food residue.	Clean grease trap and cooking surface thoroughly.

8. SPECIFICATIONS

Brand	Cozze
Model Number	90523
Color	Black
Dimensions (L x W x H)	49 x 25.5 x 45.5 cm
Weight	10.5 Kilograms
Voltage (for igniter)	1.5 Volts
Material	Stainless Steel
Style	Without lid, Compact

Spare Parts Availability	Information unavailable
--------------------------	-------------------------


9. WARRANTY AND SUPPORT

For information regarding warranty coverage, spare parts, or technical support, please contact Cozze customer service or refer to the official Cozze website. Keep your purchase receipt as proof of purchase.
Manufacturer: Millarco International A/S



© 2024 Cozze. All rights reserved.

Documents - cozze – 90523

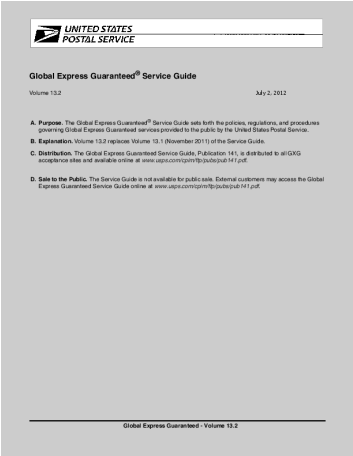

[Global Express Guaranteed Service Guide - International Shipping Policies](#)

Comprehensive guide detailing policies, regulations, and procedures for Global Express Guaranteed (GXG) international expedited delivery services offered by the United States Postal Service in partnership with FedEx Express. Covers shipping requirements, prohibited items, insurance, and form instructions.

lang:en score:23 filesize: 19.87 M page_count: 1159 document date: 2012-06-12