

ELECTROLUX LND5FE18S

Electrolux LND5FE18S Integrable Combi Refrigerator User Manual

Model: LND5FE18S | Model Number: 925503359

1. INTRODUCTION

Thank you for choosing the Electrolux LND5FE18S Integrable Combi Refrigerator. This appliance is designed to provide reliable and efficient food preservation, seamlessly integrating into your kitchen design. This manual provides essential information for the safe and efficient installation, operation, maintenance, and troubleshooting of your new refrigerator-freezer combination.

Please read this manual thoroughly before using the appliance and keep it for future reference. Always follow the safety instructions to prevent accidents and ensure optimal performance.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please read and understand all safety instructions before installation and use.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or multiple socket adapters.
- **Installation:** Install the appliance according to the instructions provided, ensuring proper ventilation and clearance.
- **Children's Safety:** Keep children away from packaging materials. Do not allow children to play with the appliance.
- **Maintenance:** Always unplug the appliance before cleaning or performing any maintenance.
- **Flammable Materials:** Do not store explosive substances or products containing flammable propellants in the appliance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your appliance.

3.1 Unpacking and Inspection

- Carefully remove all packaging materials.
- Inspect the appliance for any damage incurred during transit. Report any damage to your retailer immediately.
- Remove all internal packing and protective films.

3.2 Installation Requirements

This combi refrigerator is designed for integrated installation, meaning it will be built into your kitchen cabinetry for a seamless look.

- **Opening Dimensions:** A dedicated opening of **178 cm (height) x 56 cm (width) x 55 cm (depth)** is required for proper installation.
- **Ventilation:** Ensure adequate ventilation space around the appliance as specified in the full installation guide (not included in this manual). Proper airflow is essential for efficient operation.
- **Leveling:** Use the adjustable feet to level the appliance. This prevents vibrations and ensures proper door closure.

3.3 Door Reversal

The appliance's door opening is reversible, allowing you to adapt it to your kitchen layout or personal preference. Refer to the detailed installation instructions provided with the appliance for specific steps on how to reverse the door hinges.

3.4 Electrical Connection

- Before connecting, ensure the voltage and frequency indicated on the rating plate match your household power supply.
- Connect the appliance to a properly installed and grounded wall socket.
- Allow the appliance to stand upright for at least 4 hours before plugging it in to allow the refrigerant to settle.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your Electrolux refrigerator.

4.1 Control Panel Overview

The control panel allows you to adjust temperature settings and activate special functions.



Image: The control panel displays temperature settings (2°C to 8°C) and buttons for temperature adjustment and the ActionFreeze function.

4.2 Temperature Settings

Use the temperature control buttons on the panel to set the desired temperature for the refrigerator compartment. Recommended temperatures are typically between 3°C and 5°C for optimal food preservation.

4.3 LowFrost System and Fan

Your appliance features a LowFrost system in the freezer compartment, which significantly reduces ice build-up, minimizing the need for manual defrosting. The integrated fan in the refrigerator compartment ensures consistent air circulation, maintaining an even and stable temperature throughout, which helps keep your food fresh for longer.



Image: Interior view showing the Electrolux branded fan cover, which circulates air for even cooling.

4.4 ActionFreeze Function

The ActionFreeze function allows you to rapidly freeze fresh food items. This helps to preserve their flavor, texture, and nutritional value. Activate this function when adding a large quantity of fresh food to the freezer. The function will automatically deactivate after a set period or when the optimal freezing temperature is reached.

4.5 Food Storage Guidelines



Image: Interior of the refrigerator showing clear shelves with various food items, demonstrating organized storage.

- Store raw meat and fish on the lowest shelf to prevent dripping onto other foods.
- Keep dairy products, cooked foods, and leftovers on middle shelves.
- Use the crisper drawers for fruits and vegetables.
- Ensure all food is covered or stored in airtight containers to prevent drying out and odor transfer.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and hygiene.

5.1 Cleaning the Interior

- Always unplug the appliance before cleaning.
- Clean the interior regularly with a solution of lukewarm water and a mild, non-abrasive detergent.
- Wipe dry thoroughly after cleaning.
- Removable shelves and drawers can be washed by hand or in a dishwasher (if dishwasher-safe).



Image: Close-up of an interior light or component, highlighting the clean and smooth surfaces.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent.
- Avoid using abrasive cleaners or solvents.

5.3 Defrosting

Thanks to the LowFrost system, manual defrosting of the freezer compartment is rarely needed. However, if a significant layer of ice builds up, follow these steps:

- Unplug the appliance.
- Remove all food and store it in a cool place.
- Leave the freezer door open to allow the ice to melt naturally. Do not use sharp objects or heating devices to speed up the process.
- Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the power plug is correctly inserted and the fuse/circuit breaker is not tripped.
Temperature is not cold enough.	Door not closed properly; too much food; high ambient temperature; incorrect temperature setting.	Ensure door is sealed; do not overload; adjust temperature setting; ensure proper ventilation.
Excessive noise.	Appliance not level; objects touching the back wall.	Adjust leveling feet; ensure nothing is touching the appliance.
Water on the bottom of the refrigerator compartment.	Drain hole is blocked.	Clear the drain hole with a small, soft tool.

If the problem persists after checking these points, please contact Electrolux customer service or a qualified technician.

7. SPECIFICATIONS

- **Brand:** ELECTROLUX
- **Model:** LND5FE18S
- **Model Number:** 925503359
- **Type:** Integrable Combi Refrigerator (Refrigerator-Freezer Combination)
- **Installation Opening Dimensions (H x W x D):** 178 cm x 56 cm x 55 cm
- **Key Features:** LowFrost System, Integrated Fan, ActionFreeze Function, Reversible Door.
- **First Available Date:** January 23, 2024

8. WARRANTY AND SUPPORT

Your Electrolux LND5FE18S refrigerator comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms, conditions, and duration.

For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. You can usually find contact information on the Electrolux official website for your region or in the documentation provided with your appliance.

When contacting support, please have your appliance's model number (LND5FE18S) and serial number ready. The serial number is typically located on a label inside the refrigerator compartment.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question