

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Expedition North Anchorage 43mm Watch Instruction Manual TW2W41700JR](#)

Timex TW2W41700JR

Timex Expedition North Anchorage 43mm Watch Instruction Manual


Model: TW2W41700JR

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Timex Expedition North Anchorage 43mm Watch. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Timex Expedition North Anchorage is a robust 43mm watch designed for durability and functionality. It features a stainless steel case, a black dial, a sapphire lens, and a comfortable black strap. The watch is water-resistant up to 200 meters, making it suitable for various water activities.

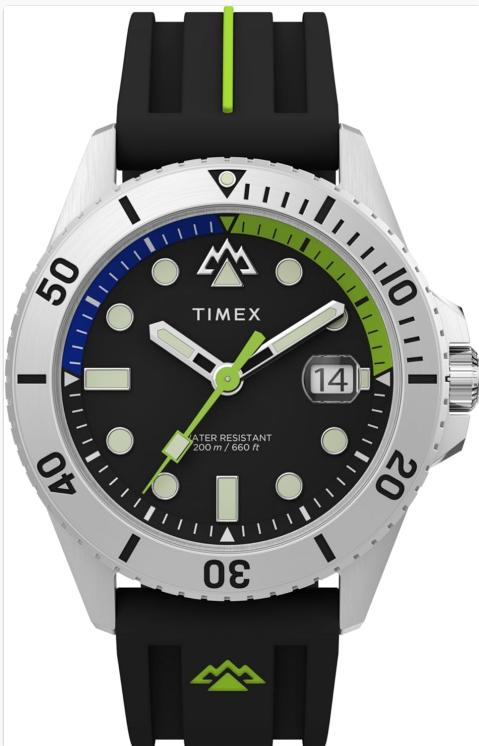

Front view of the Timex Expedition North Anchorage watch, showcasing the black dial, luminous markers, and rotating bezel.



Side profile of the watch, highlighting the screw-down crown and the robust stainless steel case construction.



Rear view of the watch strap, showing the buckle mechanism and quick-release pins.



Detailed view of the watch's stainless steel case back, featuring the Expedition North logo and model information.

SETUP

Setting Time and Date

- Unscrew the Crown:** The watch features a screw-down crown for enhanced water resistance. To access the crown functions, rotate the crown counter-clockwise until it is fully unscrewed and springs out slightly.
- Set the Date:** Gently pull the crown out to the first click position. Rotate the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
- Set the Time:** Pull the crown out to the second click position. The second hand will stop. Rotate the crown to set the hour and minute hands. To ensure accurate time setting, synchronize with a reliable time source.
- Secure the Crown:** Once the time and date are set, push the crown back into the first position, then gently push and rotate it clockwise to screw it back down tightly against the case. This ensures water resistance.

Strap Adjustment

The watch comes with a silicone strap equipped with quick-release pins for easy removal and attachment. To adjust the fit, use the buckle to select the appropriate hole on the strap. For strap replacement, gently slide the quick-release pin lever to detach the strap from the watch lugs.

OPERATING INSTRUCTIONS

Water Resistance

Your Timex Expedition North Anchorage watch is water-resistant up to 200 meters (660 feet). This rating means it is suitable for professional marine activity and serious surface water sports, but not for saturation diving. Always ensure the crown is fully screwed down before exposing the watch to water. Avoid operating the crown or pushers while the watch is wet or submerged.

Rotating Bezel

The unidirectional rotating bezel can be used to time events. Rotate the bezel counter-clockwise to align the zero marker with the minute hand. As time passes, the minute hand will indicate the elapsed time against the bezel's markings. This feature is useful for tracking dive times or other timed activities.

Luminescence

The watch hands and hour markers are treated with a luminous material that glows in low-light conditions after exposure to light. The intensity and duration of the glow depend on the exposure time and intensity of the light source.

MAINTENANCE

Cleaning

To clean your watch, wipe the case and strap with a soft, damp cloth. For more thorough cleaning, use a mild soap solution and rinse with fresh water, ensuring the crown is securely screwed down. Dry thoroughly with a soft cloth. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by a Lithium Metal battery. When the battery needs replacement, it is recommended to have it replaced by a qualified watch technician or an authorized Timex service center. This ensures the proper sealing and maintenance of the watch's water resistance.

Water Resistance Seal Check

To maintain the watch's water resistance, it is advisable to have the seals checked periodically, especially if the watch has been subjected to impacts or extreme temperature changes. Consult an authorized service center for this inspection.

TROUBLESHOOTING

- Crown is Stiff or Won't Return:** Ensure the crown is fully unscrewed before attempting to pull it out. If it feels stiff, gently rotate it counter-clockwise until it releases. When screwing it back in, apply gentle pressure while rotating clockwise to ensure it threads correctly. Do not force it.
- Date Not Changing Correctly:** Verify that you are not attempting to set the date between 9 PM and 3 AM. If the issue persists, ensure the crown is fully pulled out to the first click position for date adjustment.
- Watch Not Keeping Accurate Time:** This could indicate a low battery. If the watch is new, ensure the crown was fully pushed in after setting. If the problem continues, professional inspection is recommended.
- Date Magnifier Obscures View:** The date magnifier (cyclops) is designed to enlarge the date. In certain lighting conditions or viewing angles, it may appear to obscure the date. This is a characteristic of the design and not a defect.

SPECIFICATIONS

Feature	Detail
Model Number	TW2W41700JR
Case Diameter	43mm
Case Material	Stainless Steel
Strap Material	Silicone
Dial Color	Black

Feature	Detail
Lens Material	Sapphire
Water Resistance	200 meters (660 feet)
Battery Type	Lithium Metal (included)
Approximate Weight	8.99 ounces

WARRANTY AND SUPPORT

For warranty information, service, or support inquiries, please refer to the official Timex website or contact Timex customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the official Timex store for more information:[Timex Official Store](#)

© 2026 Timex. All rights reserved.