

Timex TW2W51200VQ

Timex Men's Marlin Moon Phase 40mm Watch - Instruction Manual

Model: TW2W51200VQ

INTRODUCTION

The Timex Marlin Moon Phase Multifunction watch is designed to accurately display time, day of the week, month, date, and the lunar cycle. This manual provides essential information to help you understand and utilize all features of your watch. Please read these instructions carefully before use.

WATCH COMPONENTS

Familiarize yourself with the main components of your watch:

- **Crown (A):** Used for setting time and date.
- **Pusher (B):** Used for adjusting the month.
- **Pusher (C):** Used for adjusting the day of the week.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Date Sub-dial:** Displays the current date.
- **Day of Week Sub-dial:** Displays the current day.
- **Month Sub-dial:** Displays the current month.
- **Moon Phase Sub-dial:** Displays the current lunar cycle.



Image: Side view of the watch, highlighting the crown (A) and pushers (B, C) for adjustments.

SETUP AND ADJUSTMENTS

Setting the Time

1. Pull the crown (A) out to the outermost position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time. Ensure AM/PM is correctly set, especially when setting the date.
3. Push the crown (A) back into its normal position to start the watch.

Setting the Date

1. Pull the crown (A) out to the middle position.
2. Turn the crown clockwise to advance the date hand to the correct date.
3. Push the crown (A) back into its normal position.

Setting the Day of the Week

1. Press the pusher (C) repeatedly until the day of the week sub-dial displays the correct day.

Setting the Month

1. Press the pusher (B) repeatedly until the month sub-dial displays the correct month.

Setting the Moon Phase

The moon phase sub-dial advances automatically with the time. To set it initially or correct it:

1. Pull the crown (A) out to the outermost position (time setting position).
2. Advance the time until the moon phase display shows the correct phase for the current date. This may require advancing the time through several days. Refer to a reliable moon phase calendar for accuracy.
3. Once the moon phase is set, adjust the time to the current time as described above.

OPERATING YOUR WATCH

Your Timex Marlin Moon Phase watch is a quartz movement timepiece, powered by a battery. It provides accurate timekeeping and displays various calendar functions.

Water Resistance

This watch is water resistant to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water intrusion.

MAINTENANCE

Cleaning

Wipe the watch case and crystal with a soft, dry cloth. For the leather strap, avoid prolonged exposure to water and harsh chemicals. Clean with a damp cloth and mild soap if necessary, then dry thoroughly.

Battery Replacement

The watch is powered by one Lithium Metal battery. When the watch stops running, the battery needs to be replaced. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.





Image: Back view of the watch, showing the buckle and strap attachment.



Image: Detailed view of the watch case back, featuring engravings including "Timex" and "The Marlin Collection".

TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Time/Date incorrect:** Refer to the "Setup and Adjustments" section to reset the time, date, day, and month.
- **Moon phase incorrect:** The moon phase sub-dial is linked to the time. If the time is advanced past midnight, the moon phase will advance. Ensure the time is set correctly, and then adjust the moon phase as described in the setup section.
- **Water inside the watch:** If moisture appears inside the watch, have it inspected by a professional watch repair service immediately to prevent damage.

SPECIFICATIONS

Model Number	TW2W51200VQ
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered (1 Lithium Metal battery included)
Case Material	Stainless Steel
Case Diameter	40 Millimeters
Case Thickness	12 Millimeters
Crystal Material	Acrylic
Band Material	Leather
Band Width	10 Millimeters
Band Length	8 Inches
Water Resistance	50 Meters (5 ATM)
Weight	0.18 Kilograms (6.35 ounces)

WARRANTY AND SUPPORT

Limited Warranty

Your Timex watch is covered by a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. This warranty typically covers manufacturing defects but does not cover normal wear and tear, battery life, or damage caused by improper use or accidents.

Customer Support

For further assistance, troubleshooting, or warranty claims, please visit the official Timex website or contact Timex customer service. Contact information can usually be found on the Timex website or in the packaging materials.