

[manuals.plus](#) /

› [Timex](#) /

› [Timex Men's UFC Rush 52mm Watch Instruction Manual - Model TW5M59100JT](#)

Timex TW5M59100JT

Timex Men's UFC Rush 52mm Watch Instruction Manual

MODEL: **TW5M59100JT**

Introduction

This manual provides instructions for the setup, operation, and maintenance of your Timex Men's UFC Rush 52mm Digital Watch, Model TW5M59100JT. Please read these instructions carefully to ensure proper use and care of your timepiece.



Front view of the Timex Men's UFC Rush 52mm Digital Watch.

Setup

Initial Time Setting

To set the time on your digital watch:

1. Locate the **MODE** button, typically on the left side of the watch case. Press it repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **SET** or **ADJUST** button (usually on the right side) to select the hour, minute, or other settings you wish to change.
3. Use the **START/STOP** or **NEXT** button to increase the selected value.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.



Side view of the watch, illustrating the typical placement of control buttons for setting functions.

Operating Instructions

Basic Functions

- **Time Display:** The watch displays time in a digital format. It may include 12-hour or 24-hour formats, and date information.
- **Backlight:** Press the **LIGHT** button (often located on the top left) to illuminate the display for visibility in low-light conditions.
- **Mode Cycling:** Use the **MODE** button to cycle through different functions such as stopwatch, alarm, timer, and dual time.

Water Resistance

This watch is water resistant up to 100 meters (330 feet). This rating makes it suitable for showering, swimming, and snorkeling. **Do not press any buttons while the watch is submerged in water** as this can compromise the water resistance seal.



The watch back, displaying the water resistance rating of 100M.

Maintenance

Cleaning Your Watch

To clean your watch, wipe it with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials, as these can damage the watch case or strap.

Battery Replacement

The watch is powered by a CR2025 cell battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

Troubleshooting

- Watch not displaying time:** Check if the battery needs replacement. Ensure no buttons are stuck.
- Display is dim:** This often indicates a low battery. Replace the battery.
- Water inside the watch:** If moisture appears inside the watch, seek professional service immediately to prevent further damage.
- Buttons not responding:** Ensure the watch is not in a locked mode. If the issue persists, a professional inspection may be required.

Specifications

Model Number	TW5M59100JT
Case Size	52mm
Strap Length	8 inches
Water Resistance	100 meters (330 feet)
Lens Material	Acrylic
Battery Type	CR2025 Cell
Case Material	Resin
Strap Material	Silicone/Rubber

Sizing Information

To help determine the appropriate watch size for your wrist, please refer to the official Timex sizing chart video below. This video demonstrates how different case sizes appear on various wrist dimensions.

Your browser does not support the video tag.

Official Timex Sizing Chart video, demonstrating various watch case sizes on different wrist dimensions to assist with fit.

Warranty and Support

For detailed warranty information and customer support, please refer to the official Timex website or contact Timex customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the [Timex Store on Amazon](#) for additional product information and support resources.