

[Manuals.plus](#) /

› [Timex](#) /

› Timex Waterbury Standard 43mm Watch (Model TW2W47400VQ) Instruction Manual

Timex TW2W47400VQ

Timex Waterbury Standard 43mm Watch

Model: TW2W47400VQ

INTRODUCTION

Thank you for choosing the Timex Waterbury Standard 43mm Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.





Front view of the Timex Waterbury Standard 43mm Watch with black strap and silver-tone dial.

SETUP

Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to position 2. The watch hands will stop moving.
3. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
4. Once the time is set, push the crown back into position 1 to start the watch.



Side view of the watch, highlighting the crown for time adjustment.

Strap Adjustment

The watch features a standard buckle strap. To adjust the fit, simply thread the strap through the buckle and secure the pin into one of the pre-punched holes that provides a comfortable and secure fit on your wrist.





Close-up of the watch strap and buckle mechanism.

OPERATING

Basic Timekeeping

Once the time is set and the crown is pushed back into position 1, your Timex Waterbury Standard watch will continuously display the current time. The watch operates on a Quartz movement, ensuring accurate timekeeping.

Water Resistance Guidelines

This watch is water resistant up to 100 meters (330 feet). This rating makes it suitable for showering, swimming, and snorkeling. **It is not suitable for scuba diving or high-impact water sports.** Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.



Rear view of the watch case, indicating 'WR 100M' for water resistance.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and crystal with a soft, damp cloth. For the strap, use a slightly damp cloth and mild soap if necessary, then wipe dry. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

Battery Replacement

Your watch is powered by a Lithium Metal battery. When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original packaging or a watch box can help protect it from dust and scratches.

TROUBLESHOOTING

Watch Not Running

- Ensure the crown is fully pushed into position 1. If it is pulled out, the watch will not run.
- If the crown is in position 1 and the watch is still not running, the battery may need to be replaced. Refer to the 'Battery Replacement' section.

Condensation or Water Inside Watch

If you notice condensation under the crystal or water inside the watch, seek professional service immediately. This indicates a breach in the water resistance, and prompt attention is required to prevent further damage to the movement.

SPECIFICATIONS

Feature	Detail
Model Number	TW2W47400VQ
Case Diameter	43 Millimeters
Case Thickness	12 Millimeters
Band Length	8 Inches
Band Width	10 Millimeters
Water Resistance Depth	100 Meters
Watch Movement Type	Quartz
Crystal	Mineral Glass
Case Material Type	Brass
Band Material Type	Plastic

Feature	Detail
Display	Analog
Batteries	1 Lithium Metal battery (included)

WARRANTY AND SUPPORT

Warranty Information

This Timex watch comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects but does not cover normal wear and tear, accidental damage, or damage resulting from improper use.

Customer Support

For any questions, service needs, or warranty claims, please contact Timex customer support. You can find contact information on the official Timex website or through the retailer where you purchased the watch.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question