



Manuals.plus /

- › GARAGE STOP /
- › GARAGE STOP 2X Marantec Garage Door Keypad M13-631, 104053 Instruction Manual

GARAGE STOP M13-631, 104053

GARAGE STOP 2X Marantec Garage Door Keypad M13-631, 104053 Instruction Manual

Wireless Keyless Entry System for Marantec 315 MHz Frequency

INTRODUCTION

This manual provides detailed instructions for the installation, programming, and operation of your GARAGE STOP Wireless Keyless Entry System. Designed for convenience and security, this keypad allows you to operate your garage door(s) without a traditional remote or key. Please read these instructions carefully before use to ensure proper functionality and safety.

Product Overview

The GARAGE STOP keypad is a wireless keyless entry system that enables you to open and close your garage door(s) using a personalized 4-digit PIN. It features a secure multi-bit code technology, is weatherproof, and includes backlit numeric buttons for easy visibility. This system can control up to 4 separate garage door openers.



Figure 1: GARAGE STOP Wireless Keyless Entry Keypad.

COMPATIBILITY

This GARAGE STOP keypad (Model M13-631, 104053) is specifically designed to be compatible with Marantec Garage Door Openers operating on a 315 MHz frequency. It is also compatible with Marantec Harrison Martin M3-2312 garage door opener remotes. Ensure your existing garage door opener meets these specifications for proper operation.

PACKAGE CONTENTS

Upon opening your package, please verify that all the following items are included:

- 2 x GARAGE STOP M13-631 Keypads
- 4 x AAA Batteries
- Wall Kit Screws
- Installation Instructions (this manual)

Included with Purchase

Wall Keypad



Program Guide

Mounting Screws

AAA Battery

Figure 2: Contents included with your purchase.

SETUP AND INSTALLATION

Wall Installation Instructions

Follow these steps to securely mount your keyless entry system:


1. Select a location to mount the Keyless Entry at a minimum height of 5 feet (1.5m) out of the reach of children.
2. Use the mounting plate as a template, mark hole locations, and then drill two 1/8 inch (3.2mm) pilot holes.
3. Secure the plate to the mounting surface with the (2) screws provided. Do not over-tighten screws to avoid cracking the plastic.
4. Cover batteries with the battery cover.
5. Snap the Keypad into the mounting plate and secure with the screw provided.
6. Install the slide-up protective cover. Align cover slides with slide grooves on the Keypad and slide cover down until it locks.

Wall Installation Instructions

MTEC PAD

INSTALLATION

- 1 Select a location to mount the Keyless Entry at a minimum height of 5 feet (1.5m) out of the reach of children.
- 2 Use mounting plate as template, mark hole location and then drill two 1/8 inch (3.2mm) pilot holes.
- 3 Secure plate to the mounting surface with the (2) screws provided. Do not over-tighten screws to avoid cracking the plastic.
- 4 Cover batteries with battery cover.
- 5 Snap Keypad into the mounting plate and secure with screw provided. See Fig. 1.
- 6 Install slide-up protective cover. Align cover slides with slide grooves on Keypad and slide cover down until it locks.

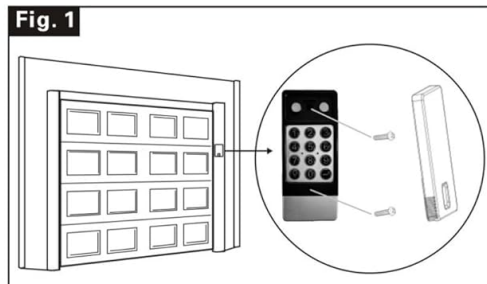

OPERATION

The garage door operator activates when the PIN and **ENTER** button are pressed. The Keypad will blink for 28 seconds, during that time the **ENTER** button can be used to stop, start, reverse the door.

If the wrong number is accidentally pressed, press the correct PIN then the **ENTER** button. The Keyless Entry will transmit only the last four digits.

ONE-BUTTON-TO-CLOSE: The Keyless Entry has a feature that allows the door to be closed using the ENTER button instead of a PIN.

NOTE: Factory setting- active.

To deactivate the one button close feature:

- 1 Press the **3** button for 3 seconds. LED on keypad flash slowly .
- 2 Press the **ENTER** button.
- 3 The keypad LED's light up for 2 seconds indicating that the one button close feature has been deactivated.

To activate the one button close feature:

- 1 Press the **9** button for 3 seconds. LED on keypad flash slowly .
- 2 Press the **ENTER** button.
- 3 The keypad LED's light up for 2 seconds indicating that the one button close feature has been activated.

CLEARING Keypad Memory

- 1 Remove Wireless Keyless from wall mounting plate.
- 2 Remove batteries from Wireless keyless.
- 3 Press and hold **ENTER** button.
- 4 Install batteries back. Match polarity designation.
- 5 Release **ENTER** button, LED flash rapidly approximately 5 seconds.

Figure 3: Wall mounting diagram for the keypad.

PROGRAMMING INSTRUCTIONS

Program PIN and Transfer Transmitter Code

To program your new keypad, follow these steps:

1. Install batteries as shown in Figure 4.
2. Press and hold the **3** button for at least 3 seconds to activate programming mode. The LED's will light up for 10 seconds.
3. Hold the transmitter (your existing Marantec remote) very close to the keypad buttons. Press and hold the transmitter button you use to open and close your garage door. Release the transmitter button when the LED on the keypad flashes.
4. Enter a 4-digit personal identification number (PIN) of your choice (e.g., ####).
5. Press and release the **ENTER** button. The LED's and keypad buttons will light up for 2 seconds, signaling that programming is completed.
6. Test the Keypad by entering the PIN, then pressing the **ENTER** button.

NOTE: To program the keypad to more than one garage door opener (maximum 4), repeat the steps above using a new PIN for each additional garage door opener.

GARAGE STOP

Change an Existing PIN

To change your current PIN, follow these steps:


1. Press the 1 button for at least 3 seconds. The LED's will flash slowly. Release the button.
2. Enter the programmed PIN that you want to change. Press the **ENTER** button. The LED's will flash rapidly.
3. Enter the new 4-digit PIN of your choice (e.g., ####). Then press the **ENTER** button. The LED's and keypad light up for 2 seconds.
4. To test the keypad, enter the new PIN, then press the **ENTER** button. The garage door opener will activate.

Programming Instructions

MTEC PAD


PROGRAM PIN AND TRANSFER TRANSMITTER CODE

1 Install batteries provided, see Fig. 2.




Press and hold ① button for at least 3 seconds to activate programming mode, LED's light up for 10 seconds.

2




Hold transmitter very close to keypad buttons ⑧ and ⑨. Press and hold transmitter button you use to open and close your garage door. Release transmitter when LED's on keypad flash.

3

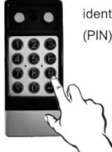


Enter a 4-digit personal identification number (PIN) of your choice ####.

4 Press and release the **ENTER** button.



LED's and keypad buttons will light up for 2 seconds signaling programming is completed.

5




Test Keypad by entering the PIN, then press **ENTER** button.

NOTE: To program the keypad to more than one garage door operator (maximum 4), repeat the steps above using a new PIN for each additional garage door operator.


CHANGE AN EXISTING PIN

1




Press ① button for at least 3 seconds, LED's will flash slowly. Release ① button.

2




Enter the programmed PIN that you want to change. Press the **ENTER** button. LED's will flash rapidly.

3



Enter the new 4-digit PIN of your choice #### then press the **ENTER** button. LED's and keypad light up for 2 seconds.


4

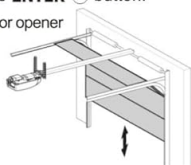

To test keypad, enter the new PIN then press the **ENTER** button. The garage door opener will activate.

BATTERY REPLACEMENT

Fig. 2



GARAGE STOP

Figure 4: Programming and PIN change instructions.

OPERATING INSTRUCTIONS

Opening/Closing the Garage Door

To operate your garage door, simply enter your 4-digit PIN and press the **ENTER** button. The garage door operator will activate. The keypad will blink for 28 seconds, during which time the **ENTER** button can be used to stop, start, or reverse the door.

If an incorrect number is accidentally pressed, correct the PIN then press the **ENTER** button. The Keyless Entry will transmit only the last four digits.

One-Button-To-Close Feature

The Keyless Entry has a feature that allows the door to be closed using the **ENTER** button instead of a PIN.

NOTE: This feature is factory-set to active.

To Deactivate the One-Button Close Feature:

1. Press the **8** button for 3 seconds. The LED on the keypad will flash slowly.
2. Press the **ENTER** button.
3. The keypad LED's will light up for 2 seconds, indicating that the one-button close feature has been deactivated.

To Activate the One-Button Close Feature:

1. Press the **9** button for 3 seconds. The LED on the keypad will flash slowly.
2. Press the **ENTER** button.
3. The keypad LED's will light up for 2 seconds, indicating that the one-button close feature has been activated.

BATTERY REPLACEMENT

When the keypad's battery is low, the backlight may dim or the keypad may become unresponsive. To replace the batteries:

1. Remove the keypad from its wall mount.
2. Locate the battery compartment on the back of the keypad.
3. Remove the old AAA batteries.
4. Insert new AAA batteries, ensuring correct polarity.
5. Reattach the keypad to its wall mount.

Refer to Figure 4 for a visual guide on battery placement.

CLEARING KEYPAD MEMORY

To clear all programmed PINs and reset the keypad's memory:

1. Remove the Wireless Keyless from its wall mounting plate.
2. Remove the batteries from the Wireless Keyless.
3. Press and hold the **ENTER** button.
4. Install the batteries back. Match polarity designation.
5. Release the **ENTER** button. The LED will flash rapidly approximately 5 seconds.

PRODUCT SPECIFICATIONS

Feature	Detail
Manufacturer	Garage Stop
Part Number	GD-MTEC-PAD
Item Weight	2.88 ounces
Product Dimensions	4.09 x 4 x 2.8 inches
Model Number	M13-631, 104053
Size	Small
Color	Keypad x2
Style	Modern
Installation Method	Wall mount
Number Of Pieces	4 (for 2 keypads)
Mounting Type	Wall Mount
Special Features	Weatherproof
Included Components	M13-631 keypad, mounting screws, AAA battery, installation instruction
Batteries Included?	Yes
Batteries Required?	Yes
Battery Cell Type	Alkaline

SUPPORT AND WARRANTY

At GARAGE STOP, customer satisfaction is our primary focus. Our products undergo thorough testing to ensure optimal quality and reliability. If you encounter any issues or are not entirely satisfied with your purchase, please do not hesitate to contact us for immediate assistance. We are committed to providing support and budget-friendly alternatives.

INSTRUCTIONAL VIDEOS

For visual guidance on product features and installation, please refer to the official video below:

Your browser does not support the video tag.

Video 1: An overview of GARAGE STOP products and their benefits, including various garage door accessories.