

[Manuals.plus](#) /

> [Braun](#) /

> Braun Epilator Silk-épil 7, Hair Removal Device, Women Shaver & Trimmer, Wet and Dry, Wide Head, Includes Shaver Head and Trimmer Comb, SE7-041, Silver

Braun SE7-041

Braun Epilator Silk-épil 7 Instruction Manual

Model: SE7-041

1. INTRODUCTION AND PRODUCT OVERVIEW

The Braun Silk-épil 7 SE7-041 is a hair removal device designed for women, offering efficient and comfortable hair removal for up to one month of smooth skin. Its wide head covers large areas, capturing more hair in each stroke. Equipped with MicroGrip tweezer technology, it can capture hairs as short as 0.5mm. The device is suitable for both wet and dry use, allowing for gentle epilation in the bath or shower to reduce pain sensation. It also includes a shaver head and trimmer comb for sensitive areas.

Key features include:

- Up to 1 month of smooth skin.
- Efficient hair removal, capturing hairs 3x shorter than wax (0.5mm).
- Wide head for faster epilation.
- MicroGrip tweezer technology.
- Wet & Dry functionality for comfortable use in bath or shower.
- Massage roller cap to help reduce pain sensation.
- Cordless operation with 40 minutes battery life.
- Smart Light to reveal fine hairs.



Image: The Braun Epilator Silk-épil 7 device shown alongside its product packaging, highlighting its wide head and promise of up to 4 weeks of smooth skin.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the Braun Silk-épil 7. Failure to follow these instructions may result in injury or damage to the device.

- Ensure that your skin is clean and dry before using the epilator. Moist or oily skin can interfere with the effectiveness of the device and increase the risk of skin irritation or infection.
- Do not use the device on irritated skin, varicose veins, rashes, moles, or wounds without consulting a doctor.
- Keep the device away from children.
- Do not use the device if it is damaged.
- Only use the charger provided with the device.
- For hygienic reasons, do not share the epilator with other persons.

3. WHAT'S INCLUDED

Your Braun Silk-épil 7 SE7-041 package includes the following components:

- SE7 Epilator device
- Shaver Head
- Trimmer comb
- Skin Contact Cap
- Cleaning Brush
- Pouch
- Charger (not explicitly listed in feature bullets but implied by "Battery Powered" and "cordless")



Image: A visual representation of all items included in the Braun Epilator Silk-épil 7 package, including the epilator,

shaver head, trimmer comb, skin contact cap, pouch, and cleaning brush.

4. SETUP

Before first use, or when the battery is low, ensure the device is fully charged. The epilator uses 1 Lithium Ion battery (included).

1. Connect the charger to the epilator and plug it into a power outlet.
2. Allow the device to charge completely before its initial use. Refer to the indicator lights on the device for charging status.
3. Select the appropriate attachment for the area you intend to epilate or shave. The epilator head is for general hair removal, while the shaver head and trimmer comb are for sensitive areas.



Image: The Braun Epilator Silk-épil 7 demonstrating its versatility with both epilating and shaving/trimming functions for different body areas.

5. OPERATING INSTRUCTIONS

For optimal results and comfort, follow these steps:

1. **Preparation:** Ensure your skin is clean. For dry epilation, make sure the skin is taut. For wet epilation, use in the bath or shower under warm water to help reduce pain sensation.
2. **Power On:** Turn on the epilator. The Smart Light will illuminate, helping to reveal even the finest hairs.
3. **Epilation:** Gently move the epilator over the skin against the direction of hair growth. Do not press too hard. The wide head is designed to remove more hair in one stroke.
4. **Sensitive Areas:** For sensitive areas like the bikini line, use the skin contact cap or switch to the shaver head with the trimmer comb for a gentler experience.
5. **Post-Epilation:** After epilation, you may apply a soothing lotion to your skin if desired.



Image: A woman using the Braun Epilator Silk-épil 7 on her underarm, illustrating its design for gentler hair removal with a massage roller cap and suitability for wet use.

Skip the hassle

of wax & choose for convenience

- ✓ No need to wait for regrowth
- ✓ No sticky wax, no mess
- ✓ Free of chemicals
- ✓ Gentle on skin
- ✓ One time purchase. No refills needed

Image: A graphic highlighting the benefits of the Braun Epilator Silk-épil 7, such as no need to wait for regrowth, no sticky mess, chemical-free, gentle on skin, and a one-time purchase.

Official Product Video: Braun Silk-épil 7 Epilator

Your browser does not support the video tag.

Video Description: This official product video from Procter & Gamble demonstrates the key features and benefits of the Braun Silk-épil 7 epilator, including its wide head, wet & dry functionality, and efficient hair removal capabilities.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your epilator.

1. **Cleaning:** After each use, turn off the device and remove the epilator head. Use the provided cleaning brush to remove any trapped hairs from the epilator head and the device body.

2. **Rinsing:** Since the device is Wet & Dry, you can rinse the epilator head under running water for thorough cleaning. Ensure it is completely dry before reattaching or storing.
3. **Storage:** Store the epilator and its attachments in the provided pouch in a dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your Braun Silk-épil 7, refer to the following common solutions:

Problem	Possible Cause	Solution
Device not turning on	Battery is low or depleted.	Charge the device fully.
Poor hair removal performance	Skin not taut enough; hair too short/long; epilator head dirty.	Ensure skin is taut. Hair should be between 0.5mm and 5mm. Clean the epilator head.
Skin irritation/redness	First-time use; sensitive skin; pressing too hard.	Redness is normal initially. Use in shower/bath for comfort. Do not press too hard. Apply soothing lotion.
Device making unusual noise	Hair trapped in mechanism; damaged head.	Clean the epilator head thoroughly. If noise persists or head is damaged, contact customer support.

If the problem persists after trying these solutions, please contact Braun customer support.

8. SPECIFICATIONS

- **Brand:** Braun
- **Model Number:** SE7-041
- **Color:** Grey/Silver
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Product Dimensions:** 2.52 x 1.54 x 0.04 inches
- **Item Weight:** 346 Grams (12.2 ounces)
- **Water Resistance Level:** Not Water Resistant (Note: While it can be used wet, it is not fully submersible for extended periods. Refer to specific product guidelines for wet use.)
- **Manufacturer:** Procter & Gamble
- **Country of Origin:** Germany
- **UPC:** 069055140093
- **ASIN:** B0CWJF37L8

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Braun website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Visit the [Braun Store on Amazon](#) for more information and product offerings.