

Mr. Dj PSE-65BT

Mr. Dj PSE-65BT 6.5" Rechargeable PA Speaker Instruction Manual

Model: PSE-65BT

INTRODUCTION

Thank you for purchasing the Mr. Dj PSE-65BT 6.5" Rechargeable PA Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this appliance to rain or moisture. Do not place objects filled with liquids, such as vases, on the apparatus. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Protect the power cord from being walked on or pinched. Only use attachments/accessories specified by the manufacturer.

PACKAGE CONTENTS

- Mr. Dj PSE-65BT 6.5" Rechargeable PA Speaker
- AC Adapter (Power Supply DC 9V)
- User Manual (this document)

PRODUCT OVERVIEW

The Mr. Dj PSE-65BT is a portable active speaker featuring a 6.5-inch woofer, built-in Bluetooth technology, USB/AUX/FM playback options, and RGB LED party lights. It includes a rechargeable battery for portable use and a microphone input for karaoke.



Image Description: A front view of the Mr. Dj PSE-65BT speaker with its blue LED lights illuminated. Below it are smaller images showing the speaker from different angles and with different LED colors (purple, green, red), as well as a view of the speaker's rear panel and its retail packaging. The main image highlights the speaker's control panel at the top and the 6.5-inch woofer with a protective metal grill.

SETUP

1. **Charging the Battery:** Before first use, fully charge the speaker. Connect the included AC adapter to the DC 9V input port on the speaker and plug it into a standard electrical outlet (100-240V, 60-50Hz). The charging indicator light will show the charging status.
2. **Power On/Off:** Locate the power switch on the control panel. Flip it to the 'ON' position to power on the speaker. Flip it to 'OFF' to power off.
3. **Initial Placement:** Place the speaker on a stable, flat surface. Ensure adequate ventilation around the unit.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Power on the speaker. The speaker will automatically enter Bluetooth mode or you may need to press the 'MODE' button to select Bluetooth.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'PSE-65BT' from the list of devices. Once paired, the speaker will emit a confirmation sound.
4. You can now stream audio from your device to the speaker.

USB/AUX/FM Modes

- **USB Mode:** Insert a USB flash drive into the USB port. The speaker will automatically switch to USB mode and begin playing compatible audio files.
- **AUX-In Mode:** Connect an external audio device (e.g., MP3 player, laptop) to the AUX-In port using a 3.5mm audio cable (not included). Press the 'MODE' button until 'AUX' is displayed on the LED screen.
- **FM Radio Mode:** Press the 'MODE' button until 'FM' is displayed. Use the control buttons to scan for and select radio stations.

Microphone Usage

Connect a 1/4" microphone (not included) to the Microphone In jack. Adjust the microphone volume using the dedicated control on the speaker's panel.

RGB LED Lights

The speaker features RGB party LED lights. Use the dedicated On/Off switch to control the lighting effects.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery regularly, even if the speaker is not in active use.

TROUBLESHOOTING

- **No Power:** Ensure the speaker is charged or connected to a power source. Check the power switch is in the 'ON' position.
- **No Sound:** Check the volume levels on both the speaker and the connected audio device. Ensure the correct input mode (Bluetooth, USB, AUX, FM) is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in Bluetooth mode and within range of your device. Disconnect and re-pair if necessary. Ensure no other devices are currently connected to the speaker.
- **Distorted Sound:** Reduce the volume on both the speaker and the audio source. Check for proper cable connections in AUX mode.

SPECIFICATIONS

Feature	Specification
Model	PSE-65BT
Speaker Size	6.5 Inches
Power Output (P.M.P.O)	1000 Watts
Speaker Maximum Output Power	150 Watts
Connectivity	Bluetooth, USB, AUX-In, FM Radio

Lighting	RGB Party LED Lights (with On/Off Switch)
Battery	7.4V 1500mAh Rechargeable Battery
Power Supply	DC 9V (AC Adapter: 100-240V 60-50Hz)
Unit Dimensions (W x D x H)	10.2" x 10.2" x 14.2"
Unit Weight	6.44 LBS (approx. 1 pound as per some listings)
Material	Metal (Grill-Covered Speakers)
Frequency Response	50 Hz
UPC	847169043321, 826843980718

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2024 Mr. Dj. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

