

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Linklike](#) /
- › [Linklike HS1 50dB Noise Cancelling Bluetooth Headphones User Manual](#)

Linklike HS1

Linklike HS1 50dB Noise Cancelling Bluetooth Headphones User Manual

MODEL: HS1

Brand: Linklike

1. Introduction

Thank you for choosing Linklike HS1 50dB Noise Cancelling Bluetooth Headphones. These headphones are designed to provide a high-quality audio experience with advanced noise cancellation, extended battery life, and comfortable wear. This manual will guide you through the setup, operation, and maintenance of your new headphones.

2. Package Contents

- Linklike HS1 Noise Cancelling Headphones
- USB-C Charging Cable
- User Manual

Wired Connection for Listening and Charging

When the wireless headphone is out of battery, it supports wired connection to realize charging while listening to songs. Wired connection for better sound quality



Figure 2.1: Package contents including headphones, USB-C cable, and user manual.

3. Product Overview

The Linklike HS1 headphones feature a comfortable, foldable design with soft memory foam ear pads and an adjustable headband for extended wear. They incorporate 40mm silk-dome drivers for Hi-Res audio and a multi-microphone system for effective noise cancellation and clear calls.

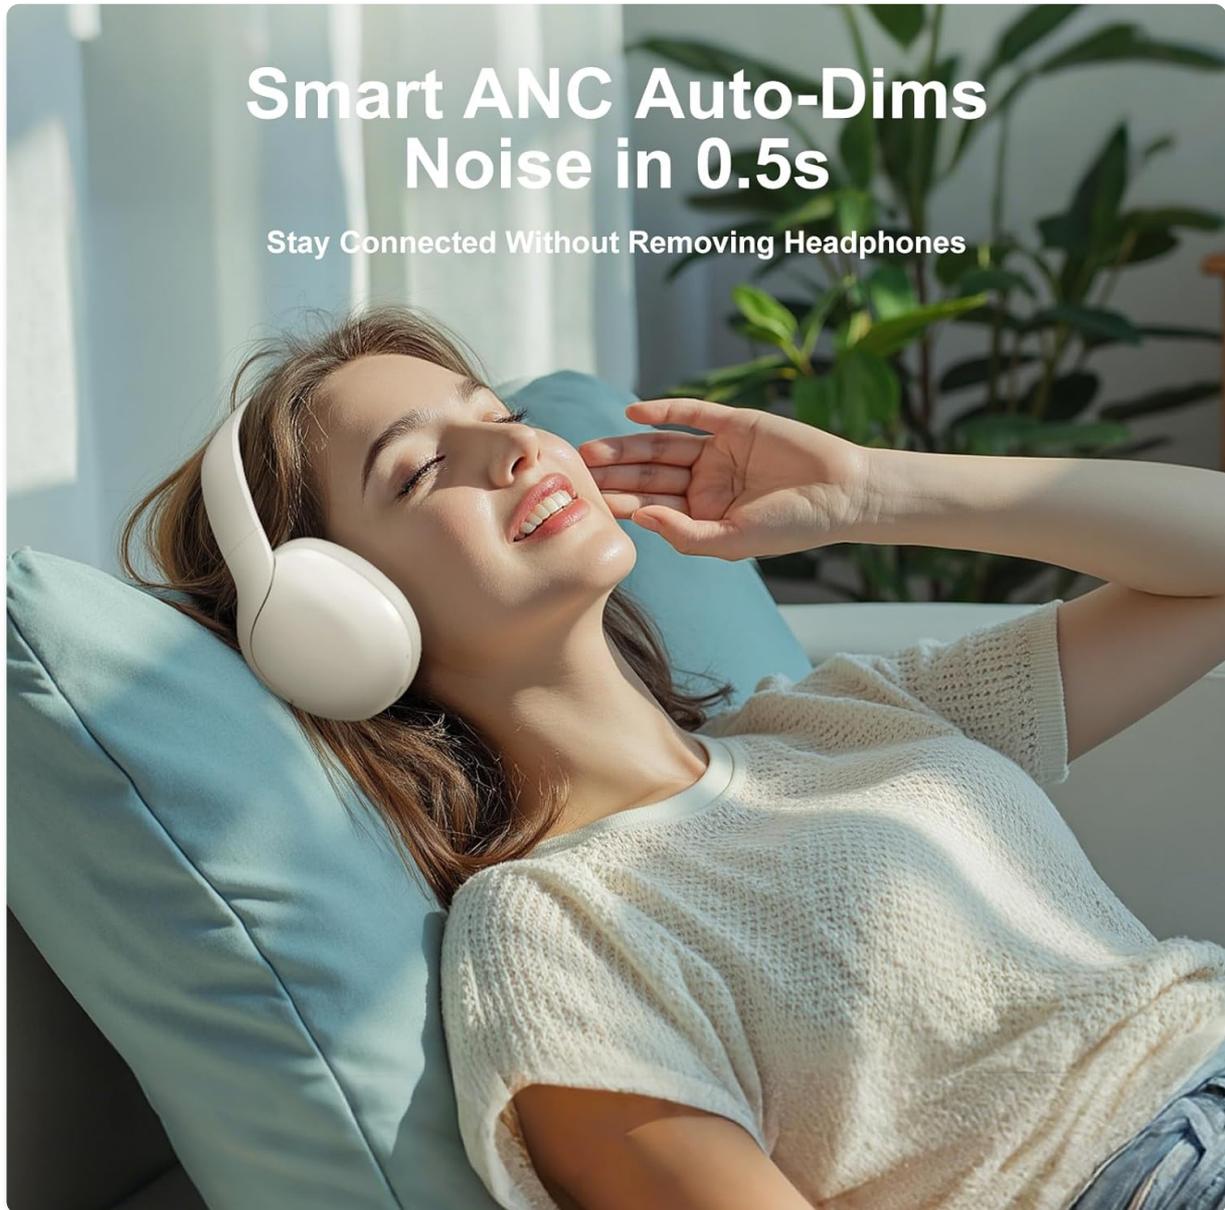


Figure 3.1: Linklike HS1 headphones, showcasing their sleek design.

3.1 Controls

The headphones feature intuitive touch controls on the right ear cup surface and a multi-function button for various operations.

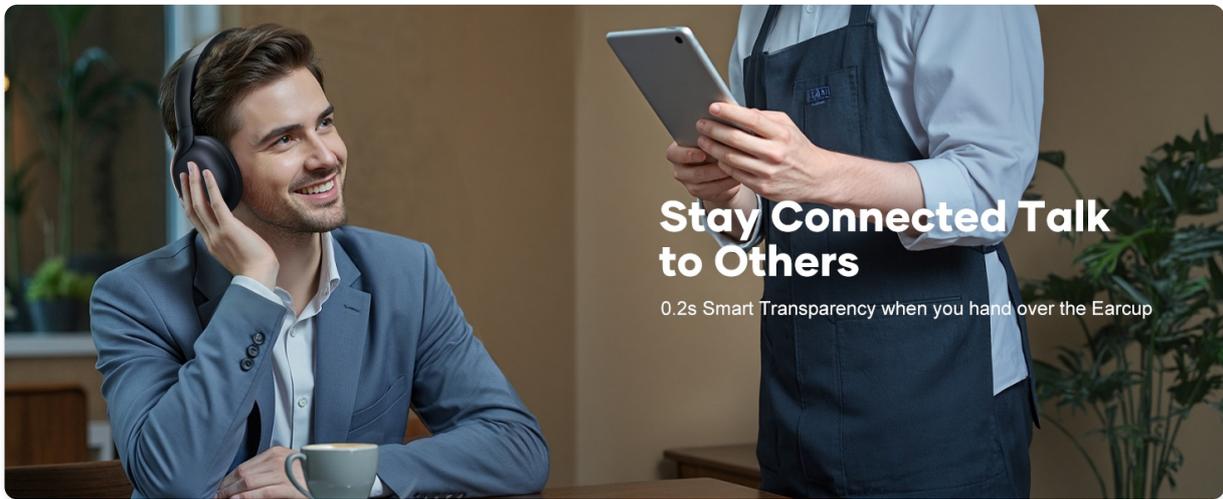


Figure 3.2: Diagram illustrating the touch control gestures on the right ear cup.



Package List

- 1*Noise Cancelling Headphone
- 1*Type-C Charging Cable
- 1*User Manual

Figure 3.3: Close-up view of the multi-function button and USB-C port.

4. Setup

4.1 Charging

Connect the provided USB-C cable to the charging port on the headphones and to a compatible USB power source. A full charge takes approximately 1.5 hours and provides up to 180 hours of continuous listening in music mode (ANC off), or 90 hours with ANC on. A 10-minute fast charge can provide up to 18 hours of listening.



Figure 4.1: Visual representation of the extended battery life and fast charging capability.

4.2 Bluetooth Pairing

1. Long press the multi-function button for 3 seconds to power on the headphones.
2. The LED indicator will flash, indicating pairing mode.
3. On your device (smartphone, laptop), enable Bluetooth and select "Linklike HS1" from the list of available devices.
4. Once connected, the LED indicator will show a steady light.

DualSync Seamless Switching: The headphones support connecting to two devices simultaneously. To use this feature, ensure both devices are paired. The headphones will intelligently switch between them based on audio activity.

4.3 Wired Audio Connection

Plug the included USB-C cable into the headphone's USB-C port and connect it to your audio source. This allows for audio playback even when the battery is depleted or for a wired connection without Bluetooth.



Figure 4.2: Headphones connected via USB-C for wired audio and charging.

5. Operating Instructions

5.1 Power On/Off

- **Power On:** Long press the multi-function button for 3 seconds.
- **Power Off:** Long press the multi-function button for 10 seconds.

5.2 Noise Control Modes

The HS1 headphones feature Hybrid Active Noise Cancellation (ANC) up to 50dB and a Smart Transparency function.

- **Switch Mode (ANC/Transparency/Normal):** Click the multi-function button once.
- **Instant Transparency:** Place your palm over the surface of the right ear cup to temporarily switch to transparency mode, allowing you to hear your surroundings without removing the headphones.



Figure 5.1: Activating Smart Transparency mode by covering the right ear cup.

5.3 Music Playback Control (Touch Controls)

Use the touch-sensitive surface on the right ear cup for music control:

- **Volume Up:** Slide finger upwards.
- **Volume Down:** Slide finger downwards.
- **Next Track:** Slide finger right.
- **Previous Track:** Slide finger left.
- **Play/Pause:** Double-tap the surface.

5.4 Call Management

The headphones are equipped with a microphone for hands-free calls.

- **Answer/End Call:** Double-tap the right ear cup surface.
- **Decline Call:** Long press the right ear cup surface.

5.5 Game Mode

For gaming, the headphones offer a low-latency mode. Click the multi-function button twice to activate Game Mode. For zero latency, use a wired USB-C connection.

5.6 Independent Use Mode

In Bluetooth waiting for pairing state, you can use the noise reduction and transparency functions independently without a connected cellphone. Click the multi-function button twice to enter/exit Independent Use Mode.

Your browser does not support the video tag.

Video 5.2: An overview of the Linklike HS1 Hybrid Active Noise Cancelling Headphones, demonstrating key features and controls.

6. Maintenance

- Clean the headphones regularly with a soft, dry cloth.
- Avoid exposing the headphones to extreme temperatures or direct sunlight.
- The ear pads are made of skin-friendly delicate leather and memory foam, designed for comfort and breathability.
- The headphones are sweat-resistant, making them suitable for fitness activities.
- Store the headphones in their folded position to save space and protect them during travel.



Figure 6.1: The foldable design of the headphones for optimal portability.

7. Troubleshooting

- **No Power:** Ensure the headphones are fully charged.
- **Cannot Pair:** Ensure Bluetooth is enabled on your device and the headphones are in pairing mode. Try restarting both devices.
- **Intermittent Connectivity:** Move closer to your device to reduce interference. Ensure no other devices are causing signal disruption.

- **Touch Controls Unresponsive:** Ensure your fingers are clean and dry. Practice the gestures for precise control.
- **No Sound in Wired Mode:** Check if the USB-C cable is securely connected to both the headphones and the audio source.
- **Reset:** If issues persist, long press the multi-function button for 10 seconds to power off, then long press again for 10 seconds to reset.

8. Specifications

Model Name	HS1
Noise Control	Hybrid Noise Cancellation (up to 50dB)
Connectivity Technology	Wired, Wireless (Bluetooth 5.2)
Headphones Jack	Type-C
Drivers	40mm Silk-Dome Speakers
Battery Life	Up to 180 Hours (ANC off), 90 Hours (ANC on)
Charging Time	1.5 Hours (full charge)
Control Method	Touch, Button
Special Features	Hi-Res Sound, Independent Use, Long Battery Life, Noise Cancellation, UI Interaction Design Touch Control, DualSync Seamless Switching
Material	Memory foam, Delicate leather
Item Weight	0.64 Kilograms (1.41 pounds)

9. Warranty and Support

For warranty information, technical support, or further inquiries, please visit the official Linklike store or contact customer service. Each item has a unique code that we verify before shipping, ensuring product authenticity.

Visit the [Linklike Store](#) for more information.