

EKO EK6164P-10L-WH

EKO Automatic Bathroom Trash Can

Model: EK6164P-10L-WH

INTRODUCTION

Thank you for choosing the EKO Automatic Bathroom Trash Can. This innovative touchless garbage can is designed to provide a hygienic and convenient waste disposal solution for your bathroom, office, kitchen, or any small space. Featuring advanced motion sensor technology, a waterproof design, and quiet operation, this manual will guide you through its setup, operation, and maintenance to ensure optimal performance.

SAFETY INFORMATION

- Do not immerse the product in water. The unit is IPX5 waterproof, meaning it resists splashes, but is not designed for submersion.
- Keep the sensor area clean and unobstructed for proper operation.
- Use only the specified battery type (2 AA batteries). Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries properly according to local regulations.
- Keep out of reach of small children to prevent accidents.

PACKAGE CONTENTS

- EKO Automatic Bathroom Trash Can (1 unit)
- 20 Packs of Trash Bags (sample)
- Instruction Manual (this document)

SETUP

1. Battery Installation

Locate the battery compartment, typically on the underside of the lid. Insert 2 AA batteries, ensuring correct polarity (+/-). **Note:** Rechargeable batteries are not recommended for this device.



Figure 1: Illustration of battery installation and trash bag placement.

2. Trash Bag Installation

Lift the inner ring of the trash can. Place a trash bag around the rim of the inner bucket, then lower the inner ring to secure the bag in place. This ensures a clean, 'no bag hanging outside' look.

3. Placement

Place the trash can in your desired location. Its slim design (10.8"L x 5.8"W x 13.3"H) makes it ideal for small spaces such as bathrooms, offices, or bedrooms.



Figure 2: The EKO trash can's slim profile allows for discreet placement in various settings.

OPERATING INSTRUCTIONS

Motion Sensor Operation

The EKO Automatic Bathroom Trash Can features a responsive motion sensor. Simply wave your hand or approach the sensor area, and the lid will open in approximately 0.2 seconds. The lid will automatically close softly and silently after 3 seconds of inactivity, operating at a quiet 55 dB.



Figure 3: The lid opens quickly upon sensing motion and closes gently after a few seconds.

Ambient Light for Night-time Use

The trash can is equipped with an ambient light feature that illuminates the interior when the lid opens, making it convenient for use in low-light conditions or at night.



Ambient Light for Night-time Use

Figure 4: The ambient light feature provides visibility inside the bin during night-time use.

MAINTENANCE

Cleaning

The EKO Automatic Bathroom Trash Can is certified IPX5 waterproof, allowing for easy cleaning. Simply wipe down the exterior with a damp cloth. Avoid using abrasive cleaners or harsh chemicals. Ensure the sensor area remains clean for optimal performance.

Waterproof

Designed with an IPX5 rating, this trash can effortlessly resists water, making cleaning a breeze.



Figure 5: The IPX5 waterproof rating ensures easy cleaning and resistance to splashes.

Odor Control

The tight seal of the lid helps to trap unpleasant odors inside the can, keeping your area fresh.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not open/close automatically.	Low batteries; Sensor obstructed; Sensor malfunction.	Replace batteries; Clean sensor area; Contact customer support if problem persists.
Lid closes too quickly or slowly.	Sensor interference; Environmental factors.	Ensure no objects are near the sensor; Try relocating the unit.

Problem	Possible Cause	Solution
Unpleasant odors.	Trash bag not properly sealed; Can needs cleaning.	Ensure trash bag is properly secured; Clean the interior and exterior of the can.

SPECIFICATIONS

Feature	Detail
Brand	EKO
Model Number	EK6164P-10L-WH
Capacity	2.6 Gallons (10 Liters)
Color	White
Opening Mechanism	Motion-Sensor
Material	Plastic
Product Dimensions (L x W x H)	10.8" x 5.8" x 13.3"
Waterproof Rating	IPX5
Lid Closing Noise Level	55 dB
Batteries Required	2 AA (not included)

WARRANTY AND SUPPORT

EKO products are manufactured with quality and durability in mind. For specific warranty details or technical support, please refer to the warranty card included with your purchase or visit the official EKO website. Our customer support team is available to assist you with any questions or concerns.

EKO Store: [Visit the EKO Store on Amazon](#)