

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AKORD](#) /

› [AKORD FIN 180 Washing Machine Storage Cabinet Instruction Manual](#)

AKORD OP0LLAZSZARPRA2D

AKORD FIN 180 Washing Machine Storage Cabinet

Model: OP0LLAZSZARPRA2D | Brand: AKORD

1. INTRODUCTION

This instruction manual provides essential information for the safe and correct assembly, installation, operation, and maintenance of your AKORD FIN 180 Washing Machine Storage Cabinet. Please read this manual thoroughly before beginning assembly and retain it for future reference.

The AKORD FIN 180 cabinet is designed to be installed above a standard 60 cm wide washing machine, offering a practical storage solution with two doors and four internal shelves. It helps optimize space in your bathroom while providing a clean and organized appearance.

2. SAFETY INFORMATION


WARNING: Improper installation can lead to serious injury or damage to the product.

- Ensure the cabinet is correctly mounted and securely fixed to a solid wall or other stable surfaces to prevent the risk of falling or injury.
- Use the adjustable hanging hooks carefully to avoid damage or accidents during installation.
- Always follow the assembly instructions step-by-step.
- Keep all small parts and packaging materials away from children.
- Do not overload the shelves. The maximum weight capacity for the cabinet is 30 kg.

3. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	OP0LLAZSZARPRA2D
Dimensions (W x D x H)	64 cm x 30 cm x 180 cm
Weight	30.3 kg

Material	High-quality KRONOSPAN laminated board
Color	Graphite Grey (cabinet and front)
Number of Doors	2 (swing doors)
Number of Shelves	4
Maximum Weight Capacity	30 Kilograms
Mounting Type	Wall Mount

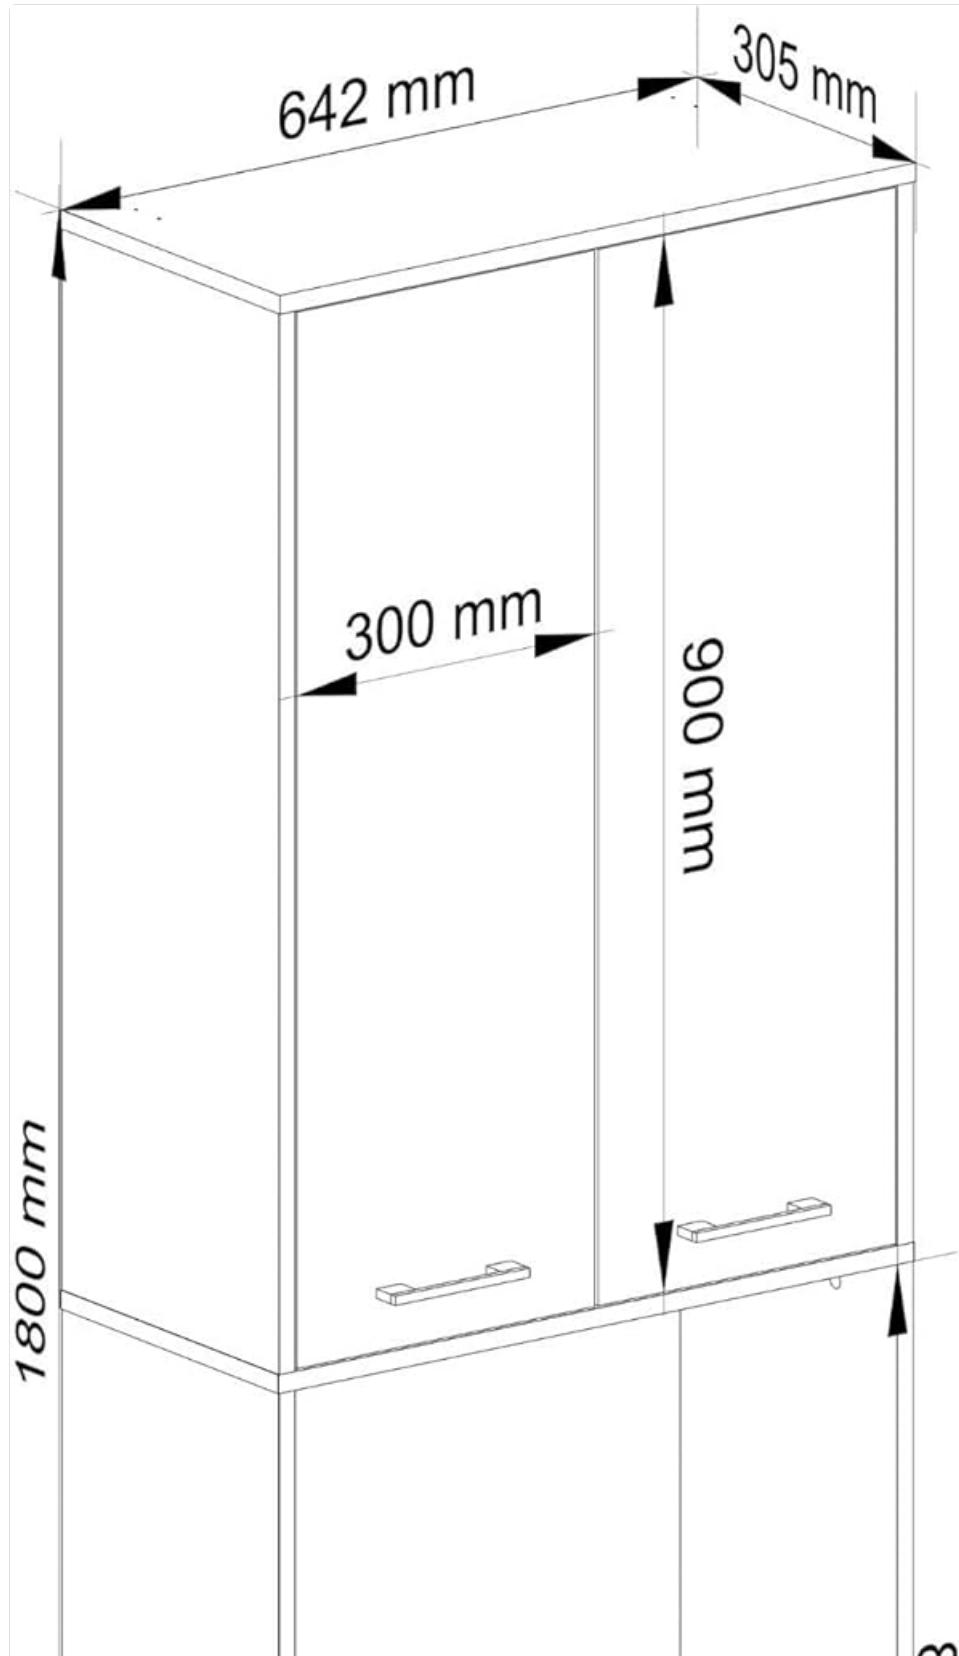

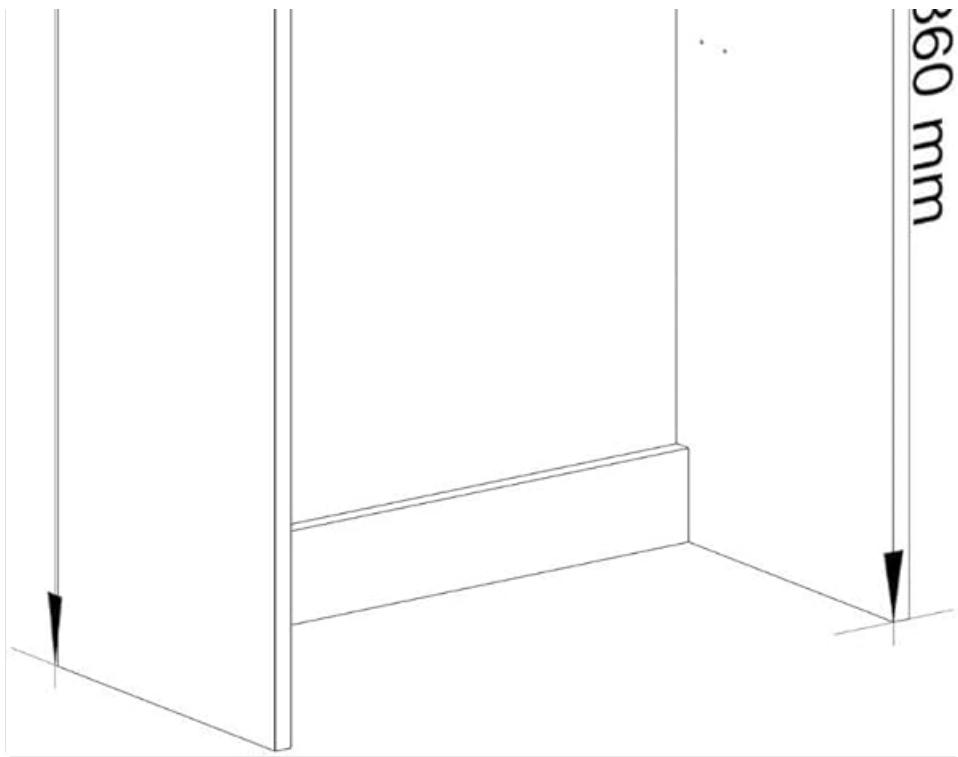


Figure 1: Dimensional drawing of the AKORD FIN 180 cabinet. The overall height is 1800 mm, width 642 mm, and depth 305 mm. The open space for the washing machine is approximately 860 mm high.

4. SETUP AND ASSEMBLY

The AKORD FIN 180 cabinet is designed for straightforward assembly. It is intended to be installed over a 60 cm wide washing machine. Ensure you have all components and tools before starting.

4.1 Before Assembly

- Unpack all components and verify against the parts list (usually included in the packaging).
- Clear a spacious, clean area for assembly.
- Gather necessary tools (e.g., screwdriver, hammer, drill for wall mounting).
- If your washing machine is already in place, it may need to be disconnected and moved temporarily to allow for cabinet placement and secure wall mounting.

4.2 Assembly Steps

1. **Assemble the Cabinet Frame:** Follow the provided diagrams to connect the side panels, top, and bottom panels using the supplied fasteners. Ensure all connections are tight and secure.
2. **Install Shelves:** Insert the shelf supports into the pre-drilled holes at your desired height. Place the four shelves onto the supports.
3. **Attach Doors:** Mount the hinges to the cabinet frame and then attach the two doors. Adjust the hinges to ensure the doors align correctly and close smoothly.
4. **Install Handles:** Attach the silver-finished handles to the doors.
5. **Prepare for Wall Mounting:** Identify the appropriate location above your washing machine. Mark the drilling points on the wall for the adjustable hanging hooks. Ensure the marks are level and at the correct height to accommodate the washing machine underneath.
6. **Secure to Wall:** Drill holes, insert wall plugs (if necessary for your wall type), and securely fasten the adjustable hanging hooks to the wall. Carefully lift the assembled cabinet and hang it onto the wall hooks. Adjust the hooks to ensure the cabinet is level and firmly attached.



Figure 2: The AKORD FIN 180 cabinet installed above a washing machine.

5. OPERATING INSTRUCTIONS

The AKORD FIN 180 cabinet is designed for storage of bathroom essentials, detergents, towels, and other items. Its two swing doors provide easy access to the four internal shelves.

- **Opening/Closing Doors:** Use the silver handles to open and close the cabinet doors. Ensure they close completely to keep contents secure and dust-free.
- **Shelf Usage:** Utilize the four shelves to organize items. Distribute weight evenly across the shelves and do not exceed the maximum weight capacity of 30 kg for the entire cabinet.
- **Placement of Washing Machine:** The open space below the cabinet is specifically designed for a washing machine up to 60 cm wide. Ensure the washing machine is properly positioned and stable.







Figure 3: Interior view of the AKORD FIN 180 cabinet with shelves.

6. MAINTENANCE

To ensure the longevity and appearance of your AKORD FIN 180 cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or solvents, as these can damage the laminated finish.
- **Spills:** Immediately wipe up any spills, especially water, to prevent moisture damage to the laminated board.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Door Hinges:** If doors become misaligned, adjust the hinges as needed.

7. TROUBLESHOOTING

If you encounter issues during assembly or use, consider the following:

- **Difficulty Identifying Parts:** Refer to the detailed diagrams in the assembly instructions. Ensure you match each component carefully before assembly. If parts are unclear, contact customer support.
- **Cabinet Not Stable:** Double-check that the wall mounting hooks are securely fastened to a suitable wall structure. Ensure all internal fasteners are tightened. The cabinet must be firmly attached to the wall to prevent movement.
- **Doors Not Aligning:** Adjust the screws on the hinges to fine-tune door alignment.
- **Washing Machine Placement:** Ensure the washing machine is fully pushed into the designated space and does not interfere with the cabinet's stability or structure.

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is typically provided with your purchase documentation. Please refer to the packaging or accompanying leaflets for this information.

For any missing parts, assembly questions, or product concerns not covered in this manual, please contact AKORD customer service.