

[Manuals.plus](#) /

› [ZEEPORTE SECURITY](#) /

› User Manual for ZEEPORTE SECURITY Wireless Outdoor Camera

ZEEPORTE SECURITY CG6S

User Manual for ZEEPORTE SECURITY Wireless Outdoor Camera

Model: CG6S

1. PRODUCT OVERVIEW

The ZEEPORTE SECURITY CG6S is a 2K battery-powered wireless outdoor camera designed for home security. It features AI motion detection, color night vision, a spotlight, siren, and is waterproof for reliable outdoor use. The camera offers flexible storage options including SD card and cloud storage, and supports two-way audio communication.



Figure 1: ZEEPORTE SECURITY Wireless Outdoor Camera (Model CG6S)

2. WHAT'S IN THE BOX

Verify that all components are present before proceeding with installation.

- ZEEPORTE SECURITY Wireless Outdoor Camera (Model CG6S)
- Charging Cord
- Installation Sets (bracket and screws)
- User Manual (this document)

3. SPECIFICATIONS

Feature	Description
Model Name	CG6S

Video Resolution	2K FHD (2304 x 1296 pixels)
Night Vision	Color Night Vision, Infrared Night Vision (33 feet range)
Battery Life	1 to 5 months (depending on usage)
Water Resistance	IP65 Waterproof
Connectivity	2.4Ghz Wi-Fi (5Ghz not supported)
Storage Options	SD Card (up to 128GB, not included), 3-day rolling cloud storage (free for two years)
Audio	Two-Way Talk (built-in microphone and speaker)
Motion Detection	Smart PIR Motion Detection with AI Recognition (person, vehicle, pet, package)
Alerts	Instant notifications to mobile app, Siren Alarm, Flashing LED Light
Viewing Angle	130 Degrees
Dimensions	5.3 x 2.6 x 3.8 inches
Weight	11.8 ounces
Mounting Type	Wall Mount
Control Method	Mobile App (Android compatible)

4. SETUP GUIDE

4.1 Charging the Camera

Before initial use, fully charge the camera using the provided charging cord. Connect the charging cord to the camera's charging port and a standard USB power adapter (not included). A full charge can provide 1 to 5 months of operation depending on activity and settings.

4.2 App Installation and Account Creation

1. Download the official mobile application (e.g., "VicoHome" based on customer reviews) from your smartphone's app store (Google Play Store for Android).
2. Open the app and follow the on-screen instructions to create a new account or log in if you already have one.

4.3 Connecting to Wi-Fi

1. Ensure your Wi-Fi network is 2.4Ghz. This camera does not support 5Ghz Wi-Fi.
2. In the app, select "Add Device" or similar option.
3. Follow the app's instructions to connect the camera to your Wi-Fi network. This typically involves scanning a QR code displayed on your phone with the camera lens.

4.4 Mounting the Camera

The camera can be installed both indoors and outdoors. Choose a location that provides the desired viewing angle (130 degrees) and is within range of your 2.4Ghz Wi-Fi network. Use the provided bracket and screws for wall mounting.

100% Wireless & IP65 Weatherproof

Protect Your Home and Family in Anywhere.



Long Battery
Life



AI Motion
Detection



2K FHD



Color Night
Vision



IP65
Weatherproof



Two-Way
Audio



SD/Cloud
Storage



Multi-User
Sharing

Figure 2: Wireless and weatherproof design allows for flexible outdoor installation.

ZEEPORTE SECURITY

Figure 3: The camera is suitable for various indoor and outdoor locations such as doorways, garages, baby rooms, living rooms, bedrooms, and yards.

5. OPERATING INSTRUCTIONS

5.1 Live View and Recording

Access live video and recorded footage anytime, anywhere through the mobile app. The camera provides 2K high-definition video and images.

2K FHD Resolution Captures Every Detail



Figure 4: The 2K FHD resolution captures clear and detailed images, offering superior clarity compared to 1080P.

5.2 Motion Detection and Alerts

The camera features advanced AI motion detection that can identify persons, vehicles, pets, and packages. When motion is detected, instant notifications are pushed to your phone via the app.

PIR Motion Detection, Enjoy a Peace of Mind



Figure 5: PIR motion detection triggers siren, spotlight, notification push, two-way audio, and motion detection recording.

Smart AI Motion Analysis

Less False Alerts and Higher Accuracy

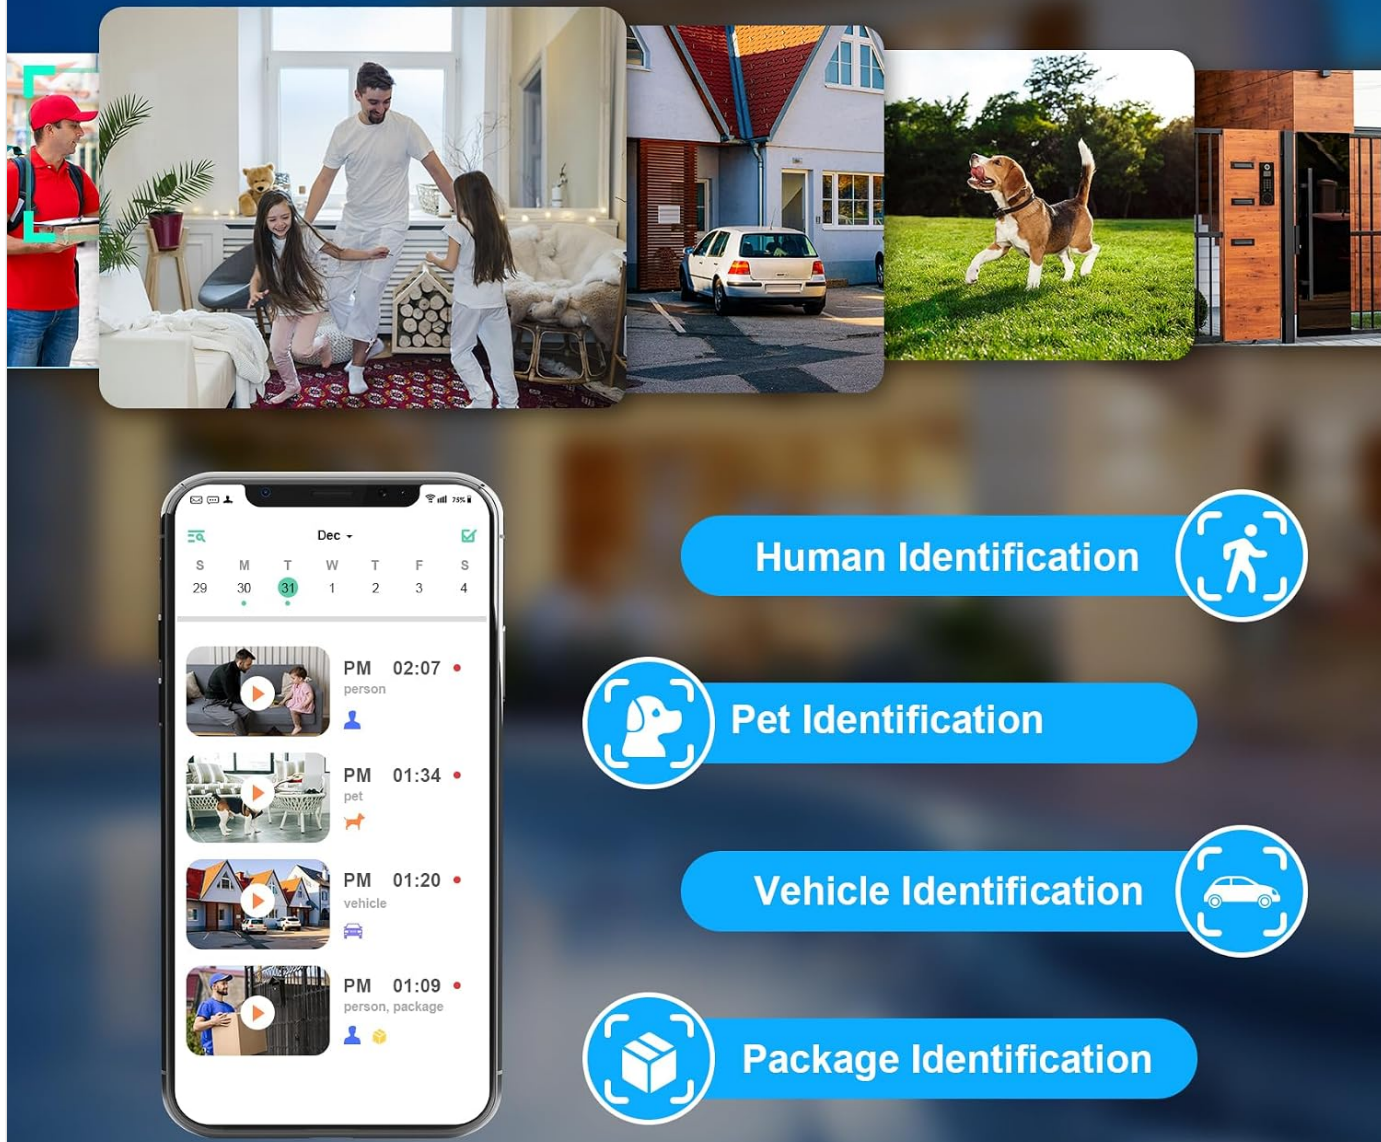


Figure 6: Smart AI motion analysis provides accurate identification of humans, pets, vehicles, and packages, reducing false alerts.

5.3 Night Vision Modes

The camera offers two night vision modes: full color and infrared. Both modes provide clear visibility up to 33 feet in low-light conditions.



Figure 7: Experience clear vision even in the dark with 2K FHD Color Night Vision or traditional Infrared Night Vision.

5.4 Two-Way Audio and Siren

Utilize the built-in microphone and speaker for real-time two-way communication. You can also activate the siren alarm or flashing LED light via the app to deter unwanted visitors.

Two Way Audio & Multi-User Sharing

Communicate in a Live Video



Figure 8: Communicate with visitors or family members using the two-way audio feature. Share live view access with multiple users for collaborative home security.

5.5 Storage Management

The camera supports local storage via an SD card (up to 128GB, not included) and cloud storage. A free 3-day rolling cloud storage is provided for two years. Advanced features, including upgraded cloud memory and custom alert areas, are available with a 30-day trial and subsequent subscription.

INSTALL IT INDOOR AND OUTDOOR

Get More Areas Covered

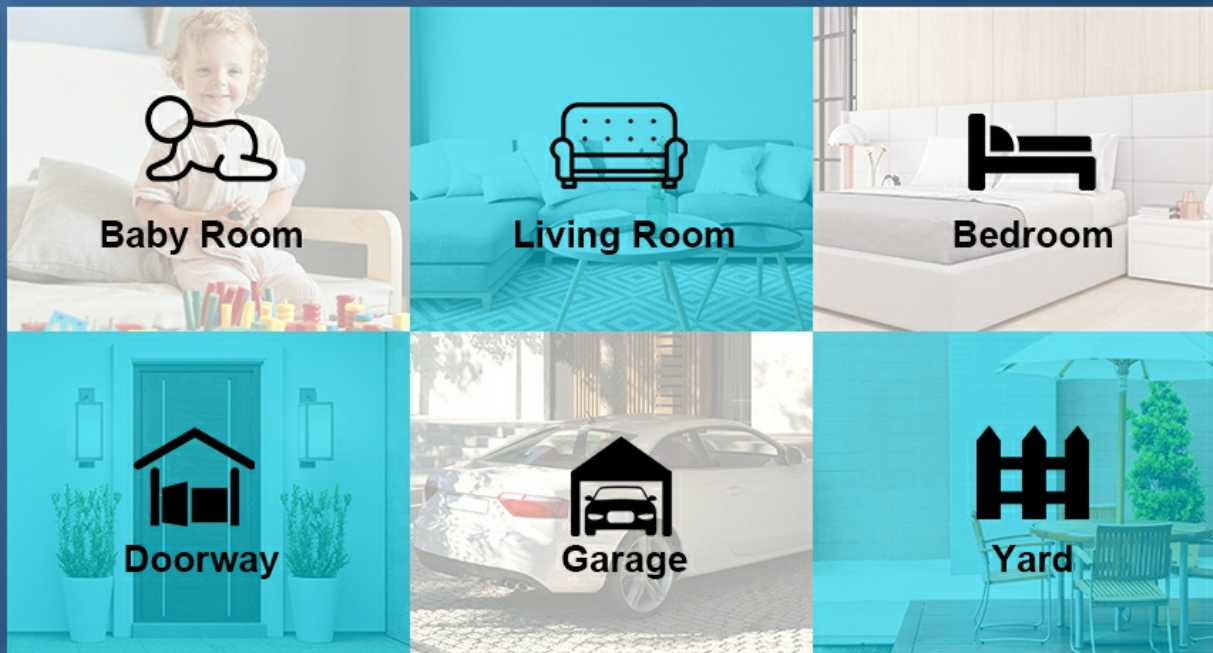


Figure 9: Manage your recordings with local SD card storage or convenient cloud storage options.

6. MAINTENANCE

6.1 Battery Charging

Monitor the battery level through the mobile app. Recharge the camera when the battery is low using the provided charging cord. The frequency of charging depends on motion detection events and live view usage.

6.2 Cleaning the Lens

Periodically clean the camera lens with a soft, dry cloth to ensure clear image quality. Avoid using abrasive cleaners or solvents.

6.3 Firmware Updates

Check the mobile app regularly for available firmware updates. Keeping your camera's firmware up-to-date ensures optimal performance, new features, and security enhancements.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera not connecting to Wi-Fi	◦ Ensure your Wi-Fi is 2.4Ghz. 5Ghz networks are not supported. ◦ Check Wi-Fi signal strength at the camera's location. ◦ Restart your Wi-Fi router. ◦ Reset the camera and try the setup process again.

Poor image/video quality	◦ Clean the camera lens with a soft cloth. ◦ Ensure adequate lighting for optimal performance, especially at night. ◦ Check Wi-Fi connection stability.
Battery drains quickly	◦ Frequent motion detection events can reduce battery life. Adjust motion sensitivity settings in the app. ◦ Excessive live view streaming will consume more power. ◦ Ensure the camera is fully charged.
No motion detection alerts	◦ Check motion detection settings in the app to ensure it's enabled. ◦ Verify notification settings on your smartphone. ◦ Ensure the camera's field of view covers the desired area.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or the official ZEEPORTE SECURITY website. Keep your purchase receipt as proof of purchase for warranty claims. Additional support resources may be available through the mobile application's help section.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question