

[Manuals.plus](#) /

› [AIKE](#) /

› AIKE Magnetic Charging Waterproof Automatic Soap Dispenser AK1337 User Manual

## AIKE AK1337

# AIKE Magnetic Charging Waterproof Automatic Soap Dispenser AK1337 User Manual

Model: AK1337 | Brand: AIKE

## INTRODUCTION

Thank you for choosing the AIKE Magnetic Charging Waterproof Automatic Soap Dispenser, Model AK1337. This dispenser is designed for convenience and hygiene, featuring a magnetic charging port for superior waterproofing and an anti-fingerprint black coating for a clean aesthetic. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new soap dispenser.




Image: AIKE Magnetic Charging Waterproof Automatic Soap Dispenser (Model AK1337) in black finish.

## SETUP

1. **Unpack the Dispenser:** Carefully remove all components from the packaging. Ensure you have the soap dispenser unit and the magnetic charging cable.
2. **Initial Charge:** Before first use, fully charge the dispenser. Connect the magnetic charging cable to the magnetic charging port on the dispenser. Use a 5V USB adapter (not included) for effective charging. Fast chargers are not compatible.

# MAGNETIC CHARGING CABLE

Delivers IPX7 waterproof rating, bring outstanding performance even in humid environment. More reliable than other charging methods.

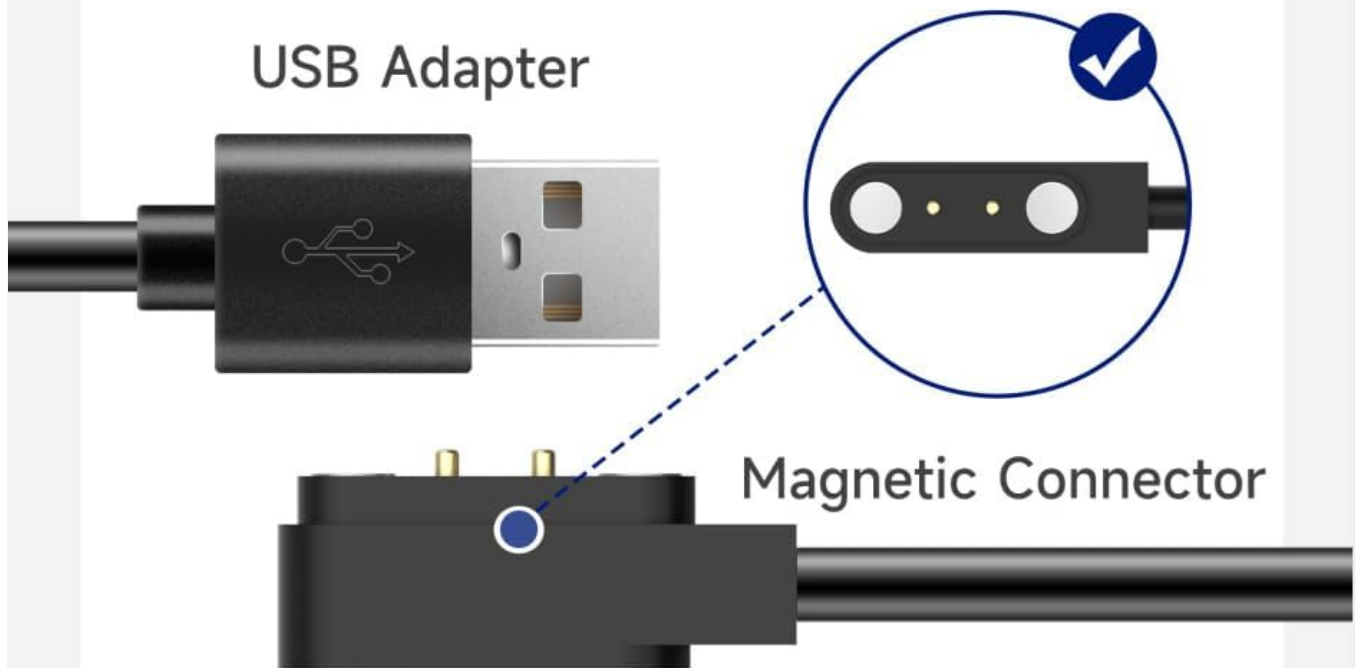

(You will need a 5V USB adapter, that not included in the package)

Image: Close-up of the magnetic charging cable and the corresponding port on the dispenser.

3. **Fill with Soap:** Remove the top section of the dispenser. Pour your preferred liquid soap into the reservoir. The dispenser is suitable for all liquid soaps. Do not overfill.
4. **Reassemble:** Securely reattach the top section to the base.

## OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button located on the top of the dispenser to turn it on or off.
2. **Dispensing Soap:** Place your hand under the dispenser nozzle. The infrared sensor will detect your hand and automatically dispense soap.
3. **Adjusting Dispensing Volume:** The dispenser offers 5 levels of adjustable dispensing volume. To change the volume, briefly press the power button while the dispenser is on. Each press will cycle through the different levels, indicated by a light indicator. Choose a smaller amount for handwashing or increase for tasks like dishwashing.
4. **Child Lock Function:** The dispenser features a child lock function to prevent accidental activation. Refer to the detailed user guide (if provided separately) for specific instructions on how to activate and deactivate this feature.

## MAINTENANCE

To ensure the longevity and optimal performance of your AIKE soap dispenser, follow these maintenance guidelines:

- **Cleaning:** The dispenser boasts an IPX7 waterproof rating, allowing you to confidently rinse it with water to keep it clean and new.



Image: The dispenser is shown with water droplets, highlighting its IPX7 waterproof capability for easy cleaning.

- **Anti-Fingerprint Coating:** The stainless steel base undergoes a heat treatment, providing resistance against fingerprints and stains, while also imparting a consistent black style.
- **Refilling:** Refill the soap reservoir as needed. Avoid letting the dispenser run completely dry to prevent air from entering the pump mechanism.
- **Storage:** If storing for an extended period, ensure the dispenser is clean and dry.

## TROUBLESHOOTING

If you encounter any issues with your AIKE soap dispenser, please refer to the following common solutions:

- **Dispenser Not Activating:**
  - Ensure the dispenser is powered on.
  - Check if the battery is charged. Recharge if necessary.

- Verify that there are no obstructions blocking the sensor.
- **No Soap Dispensed or Weak Flow:**
  - Check the soap level in the reservoir and refill if low.
  - Ensure the soap is not too thick. If it is, dilute it slightly with water.
  - Check for any clogs in the nozzle.
- **Accidental Dispensing:**
  - Ensure the child lock function is activated if you wish to prevent unintended use.
  - Make sure the dispenser is placed in an area where objects or hands will not accidentally trigger the sensor.

For further assistance, please contact AIKE customer support.

SPECIFICATIONS

| Feature                        | Detail                         |
|--------------------------------|--------------------------------|
| Model Number                   | AK1337                         |
| Color                          | Anti-fingerprint Black Coating |
| Material                       | Stainless Steel, Plastic       |
|                                | 4.57"L x 3"W x 8.06"H          |
| Product Dimensions (L x W x H) |                                |

|                        |                                                                                    |  |
|------------------------|------------------------------------------------------------------------------------|--|
|                        |  |  |
| Liquid Volume Capacity | 413.65 Milliliters (approx. 14 fl.oz.)                                             |  |
| Item Weight            | 11.6 ounces                                                                        |  |
| Waterproof Rating      | IPX7                                                                               |  |
| Battery Type           | 1 Lithium Polymer battery (included)                                               |  |
| Charging               | Magnetic Charging Cable (5V USB adapter required, not included)                    |  |

### WARRANTY AND SUPPORT

AIKE provides a one-year warranty for this product, which includes replacement charging cables. This ensures your peace of mind regarding the product's quality and performance.

For any warranty claims, technical support, or inquiries, please contact AIKE customer service through the platform where you purchased the product or refer to the contact information provided in your product packaging.

### IMPORTANT SAFETY INFORMATION

- Do not immerse the entire unit in water beyond its IPX7 rating.
- Use only liquid soap. Do not use abrasive cleaners or solvents on the dispenser.
- Keep out of reach of small children to prevent misuse, even with the child lock function.

- Ensure the charging port is dry before connecting the magnetic charging cable.

© 2025 AIKE. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question