



Manuals.plus /

› **Outsunny** /

› Outsunny 10' x 10' Pop Up Canopy Tent with Netting Instruction Manual

Outsunny 840-014V01MX

Outsunny 10' x 10' Pop Up Canopy Tent with Netting Instruction Manual

Model: 840-014V01MX

1. INTRODUCTION

Thank you for choosing the Outsunny 10' x 10' Pop Up Canopy Tent with Netting. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your canopy tent. Please read all instructions carefully before use and retain this manual for future reference.

This canopy tent is designed to provide temporary shade and shelter for outdoor activities such as garden gatherings, patio use, camping, and market events. It features a pop-up design for easy setup and includes mesh sidewalls for insect protection.



Image 1.1: The Outsunny 10' x 10' Pop Up Canopy Tent with Netting, shown fully assembled in a garden setting, providing shade over an outdoor dining area.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- **Never leave your outdoor tent canopy unattended.** Always take it down before a major storm, strong winds, or heavy rain rolls through.
- **Always use the included stakes and guy ropes** to secure the canopy firmly to the ground. In windy conditions, additional anchoring (e.g., sandbags, weights) is recommended.
- **Two people are required for installation** to ensure safe and proper setup and disassembly.
- Ensure the setup area is clear of obstructions, overhead power lines, and uneven surfaces.
- Keep children and pets away from the canopy during setup and disassembly.
- Do not use open flames or heating appliances inside or near the canopy.
- **California Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Pop-Up Frame (1)
- Canopy Top (1)
- Mesh Sidewalls (4)
- Carry Bag (1)
- Tie Ropes (4)
- Ground Anchor Stakes (8)

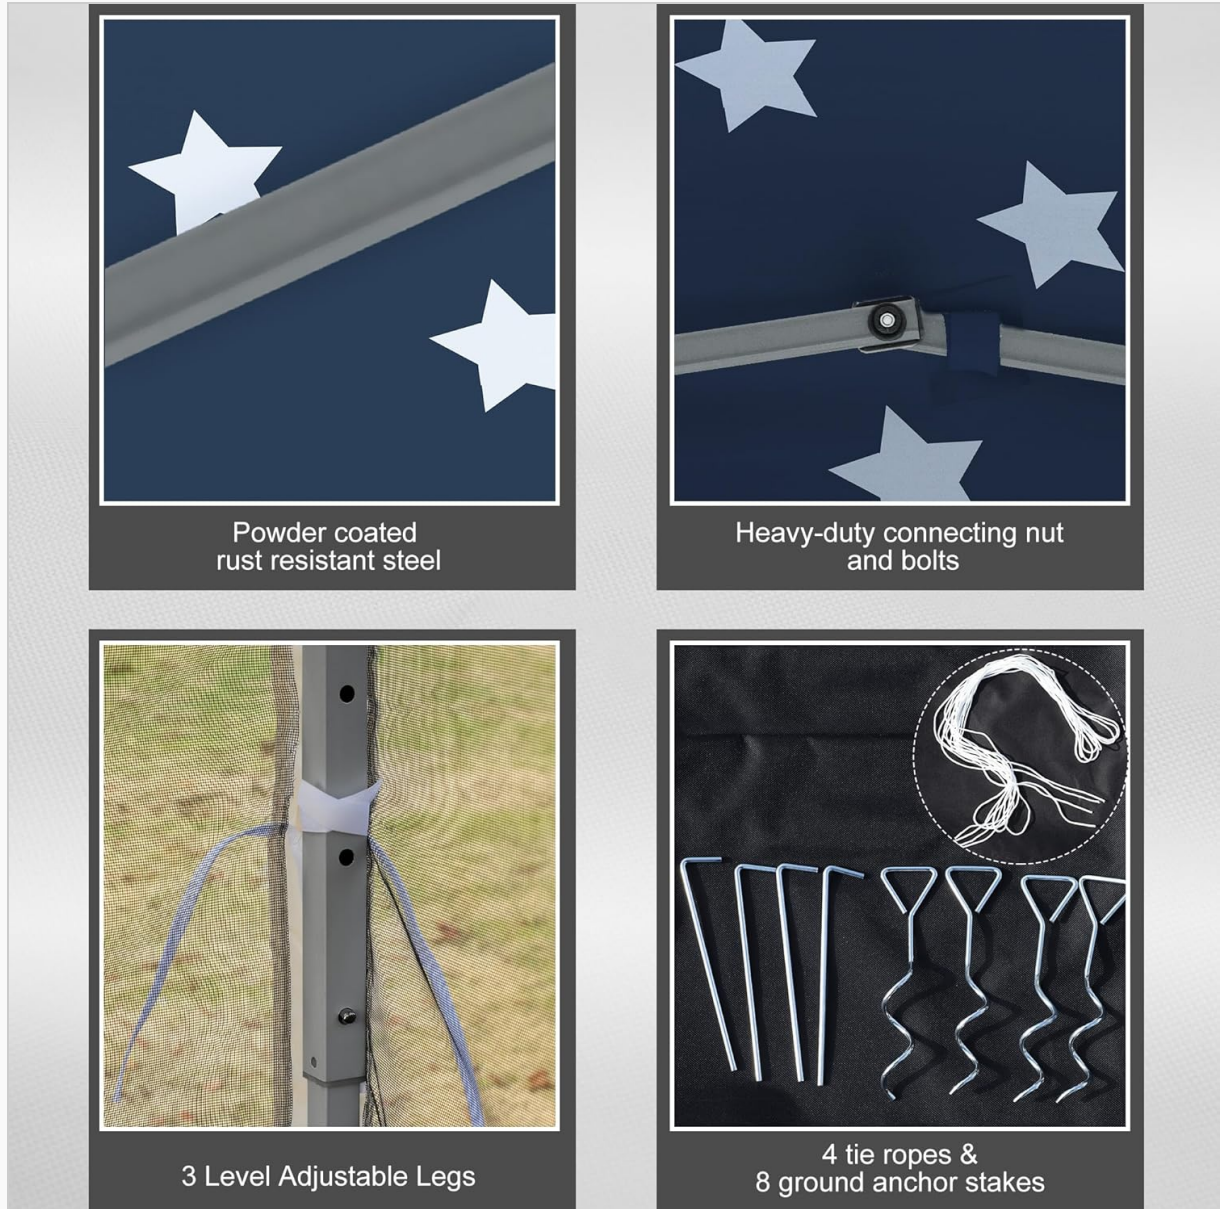


Image 3.1: Detailed view of key components: powder-coated steel frame, heavy-duty connecting nuts and bolts, 3-level adjustable legs, and the included 4 tie ropes and 8 ground anchor stakes.

4. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly. Remember, two people are required for safe installation.

1. **Unpack:** Remove the folded frame and canopy top from the carry bag.
2. **Expand Frame:** With a partner, stand on opposite sides of the frame. Slightly lift and pull the outer legs apart until the frame is partially expanded. Do not fully extend the legs yet.
3. **Attach Canopy Top:** Drape the canopy top over the partially expanded frame. Secure the corners of the canopy to the frame's corner posts using the hook and loop fasteners. Ensure the canopy is centered and taut.

4. **Fully Extend Frame:** Continue to pull the outer legs apart until the frame is fully extended and the central locking mechanism clicks into place.
5. **Adjust Height:** Press the push-button on each leg to adjust the height to your desired level. Ensure all four legs are set to the same height for stability.
6. **Attach Mesh Sidewalls:** If desired, attach the four mesh sidewalls to the frame using the integrated hook and loop fasteners. The sidewalls feature zipper doors for easy access.
7. **Secure Canopy:** Use the provided tie ropes and ground anchor stakes to firmly secure the canopy to the ground. Attach ropes to the canopy corners and stake them into the ground at an angle.



Image 4.1: Visual guide illustrating the four main steps for setting up the pop-up canopy tent, from removing it from the carry bag to attaching the sidewalls.



Image 4.2: An illustration demonstrating the ease of assembly, highlighting opening the frame, adding the canopy, and adjusting the height with a push-button mechanism.

5. OPERATING INSTRUCTIONS

5.1. Height Adjustment

The canopy features 3-level adjustable legs. To adjust the height, locate the push-button on each leg. Press the button and slide the inner leg up or down to the desired height. Ensure all four legs are locked into the same position for stability.

5.2. Using Mesh Sidewalls

The four mesh sidewalls provide protection from insects while allowing airflow. They attach to the canopy frame using hook and loop fasteners. Each sidewall includes a zipper door for convenient entry and exit. When not needed, the sidewalls can be rolled up and secured to the canopy legs with ties, as shown in Image 5.1.



Image 5.1: A mesh sidewall rolled up and secured to a canopy leg, demonstrating how to keep the entrance open.

6. DISASSEMBLY AND STORAGE

To ensure the longevity of your canopy tent, proper disassembly and storage are crucial.

1. **Remove Accessories:** Detach all mesh sidewalls, tie ropes, and ground stakes.
2. **Lower Height:** Press the push-buttons on each leg and fully retract the inner legs to the lowest position.
3. **Collapse Frame:** With a partner, stand on opposite sides and push the frame inwards, allowing it to collapse. Ensure all locking mechanisms are disengaged.
4. **Remove Canopy Top:** Carefully remove the canopy top from the collapsed frame.
5. **Clean and Dry:** Thoroughly clean all fabric components and allow them to air dry completely before folding. Storing a damp canopy can lead to mold and mildew.
6. **Fold and Store:** Fold the canopy top and mesh sidewalls neatly. Place them, along with the collapsed frame, tie ropes, and stakes, into the provided carry bag.



Image 6.1: The Outsunny 10' x 10' Pop Up Canopy Tent with Netting alongside its compact black carry bag, demonstrating portability.

7. MAINTENANCE

- **Cleaning:** Clean the Oxford fabric canopy and mesh sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely.
- **Frame Care:** The steel frame is powder-coated for rust resistance. Wipe down the frame with a damp cloth as needed. Inspect for any signs of rust or damage, especially at connecting points.
- **Drying:** Always ensure all fabric components are completely dry before folding and storing to prevent mold, mildew, and fabric degradation.
- **Seam Sealing:** For enhanced water resistance, especially in prolonged light rain, consider applying a tent seam sealer to the stitched seams of the canopy top.
- **Inspection:** Regularly inspect the canopy for any tears, loose stitching, or damaged frame parts. Address any issues promptly to prevent further damage.

CATHEDRAL STYLE ROOF



Silver Coated Oxford



Heat Reducing



Steel Frame Support

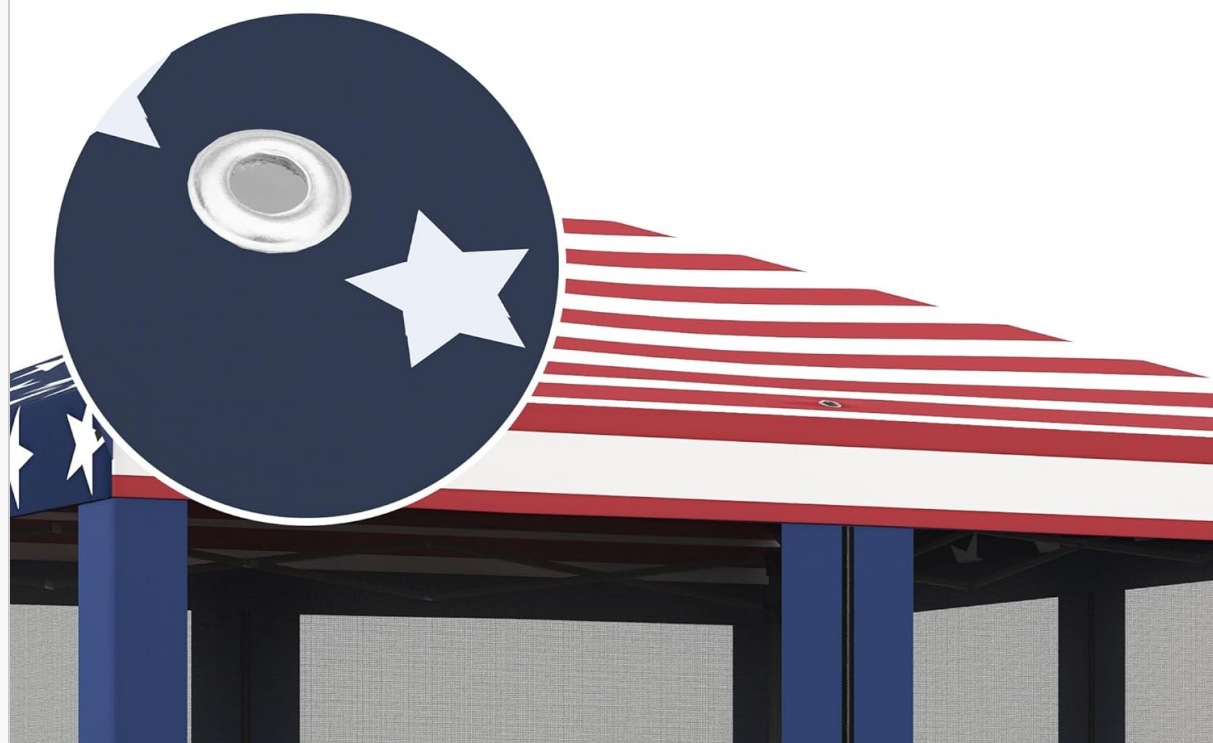


Image 7.1: Detail of the canopy roof, showing the silver-coated Oxford fabric, steel frame support, and a drain hole designed to prevent water accumulation.

8. TROUBLESHOOTING

- **Canopy unstable in wind:** Ensure all tie ropes and ground stakes are properly installed and taut. Consider using additional weights (e.g., sandbags) on the legs in windy conditions. Always take down the canopy in strong winds.
- **Water pooling on canopy top:** Ensure the canopy top is stretched tautly over the frame. The canopy is designed with drain holes to prevent excessive water accumulation; ensure these are clear.
- **Difficulty collapsing frame:** Ensure all leg height adjustment buttons are fully depressed and the frame's central locking mechanism is disengaged. Two people should work together to collapse the frame evenly.
- **Small drips from seams during rain:** This is common with sewn fabric products. Applying a seam sealer (see Maintenance section) can improve water resistance at the seams.

9. SPECIFICATIONS

Feature	Specification
Brand	Outsunny
Model Number	840-014V01MX
Product Dimensions (L x W x H)	116.25" x 116.25" x 102.25" (approx. 9.7 ft x 9.7 ft x 8.5 ft)
Floor Area	94 Square Feet
Item Weight	29.5 Pounds
Frame Material	Alloy Steel (Powder Coated)
Canopy Material	Oxford Fabric (Silver Coated)
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	Yes
Number of Guylines	4
UPC	196393011188



Image 9.1: Dimensional overview of the canopy tent when assembled and the compact size of its carry bag for transport.

10. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact the manufacturer, Aosom LLC, or visit the official Outsunny brand store. Keep your purchase receipt for any warranty claims.

You can find more information and contact details on the [Outsunny Brand Store](#).