

SUPER LINT SL-1

SUPER LINT Electric Fabric Shaver SL-1 User Manual

Model: SL-1

For optimal performance and longevity, please read this manual carefully before use.

1. INTRODUCTION

The SUPER LINT Electric Fabric Shaver SL-1 is designed to efficiently remove pilling, lint, and fuzz from various fabrics, restoring them to a fresh appearance. This 2-in-1 device combines a powerful fabric shaver with an electrostatic brush for comprehensive fabric care.

2. SAFETY INFORMATION

- Keep out of reach of children.
- Do not use on wet fabrics.
- Ensure the mesh cover is securely attached before operation to prevent injury and ensure proper function. The device will automatically power off if the cover or blade is not correctly installed.
- Always place the fabric on a hard, flat surface when shaving to protect the fabric from damage.
- Do not press too hard on the fabric to avoid damage.
- Unplug the device before cleaning or replacing blades.

3. PACKAGE CONTENTS

- SUPER LINT Electric Fabric Shaver (Main Unit)
- Electrostatic Brush (integrated into handle)
- USB Charging Cable
- Cleaning Brush
- Replacement 6-leaf Blades (2 units)
- Travel Bag
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SUPER LINT Fabric Shaver.



Image 1: Product Structure Diagram. This image illustrates the main components of the fabric shaver, highlighting the large cover with three hole sizes, the upgraded 6-leaf blade, the double protection with suction device, the speed shift button, and the safety protection switch.

- **Honeycomb Mesh Cover:** Detachable stainless steel micro-arc mesh cover with 3 sizes of holes to capture various lint fuzz.
- **6-Leaf Blade:** Rust-proof, upgraded 6-leaf blade for efficient trimming.
- **Speed Shift Button:** One-push control for adjusting speed settings.
- **LED Digital Display:** Shows remaining battery level (0-100) and current speed gear.
- **Electrostatic Brush:** Integrated into the handle, used to remove static electricity after shaving.
- **Safety Protection Switch:** Automatically powers off if the mesh cover or blade is not properly installed.
- **USB-C Charging Port:** For convenient recharging.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fabric shaver. The LED display will show the battery level.

1. Connect the provided USB charging cable to the device's USB-C port.
2. Plug the other end into a USB power source (e.g., laptop, power bank, 5V/1A charger adapter).
3. The LED display will show the charging progress. A full charge is indicated by "100" on the display.



Image 2: USB Charging. The image displays the fabric shaver connected to a USB power source, indicating its rechargeable nature and the LED battery display.

5.2 Electrostatic Brush Access

The electrostatic brush is conveniently stored within the handle.

1. Gently pull off the bottom cap of the handle.
2. Slide out the electrostatic brush.
3. After use, fold the brush and slide it back into the handle, then replace the cap.

USB Charging



Image 3: Accessory Storage Bin. This image demonstrates how the electrostatic brush, cleaning brush, and USB cable are stored within the device's handle.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Adjustment

1. Press the power button once to turn on the device at speed 1.
2. Press the power button again to cycle through speed 2, then speed 3.
3. Press the power button a fourth time to turn off the device.
4. The LED display will show the current speed setting (01, 02, 03).



Image 4: Speed Settings. This image illustrates the three speed gears (Gear 1 for protective clothing, socks, leggings; Gear 2 for delicate repair, sweaters, woolen coats; Gear 3 for professional & efficient use on plush toys, cloth furniture).

6.2 Fabric Shaving

1. Lay the garment or fabric flat on a hard, smooth surface. Ensure there are no wrinkles.
2. Select the appropriate speed setting based on the fabric type:
 - **Speed 1:** For delicate items like protective clothing, socks, and leggings.
 - **Speed 2:** For general use on sweaters, woolen coats, and items requiring delicate repair.
 - **Speed 3:** For heavy-duty use on plush toys, couch, cushions, blankets, and furniture.
3. Gently glide the shaver over the pillied areas, applying light pressure. Avoid pressing too hard.
4. Move the shaver in circular motions or back and forth, ensuring even coverage.

Your browser does not support the video tag.

Video 1: Electric Lint Remover Rechargeable Fabric Shaver for Clothes. This video demonstrates the fabric shaver in action, showing its effectiveness on various clothing items.

6.3 Using the Electrostatic Brush

1. After shaving, use the electrostatic brush (located in the handle) to effectively relieve static electricity and remove any remaining loose lint.

2. Gently brush the fabric surface in one direction.

7. MAINTENANCE

7.1 Cleaning the Device

Regular cleaning ensures optimal performance and extends the life of your shaver.

1. Ensure the device is turned off and unplugged.
2. Unscrew the mesh cover by turning it counter-clockwise.
3. Carefully remove the 6-leaf blade.
4. Empty the collected lint from the lint compartment into a trash bin.
5. Use the provided small cleaning brush to remove any remaining lint from the mesh cover, blades, and inside the device.
6. Reattach the blade and then screw the mesh cover back on clockwise until secure.

Your browser does not support the video tag.

Video 2: How to change lint blades! This video provides a clear demonstration of how to remove and replace the blades, and how to clean the device.

7.2 Blade Replacement

Replace blades when you notice a decrease in shaving efficiency.

1. Follow steps 1-3 from "Cleaning the Device" to remove the old blade.
2. Carefully place a new 6-leaf blade onto the spindle.
3. Reattach the mesh cover by screwing it clockwise until it clicks securely into place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully using the provided USB cable.
Device does not turn on.	Mesh cover or blade is not properly installed.	Ensure the mesh cover is securely screwed on and the blade is correctly seated. The safety switch prevents operation if not properly assembled.
Reduced shaving efficiency.	Blades are dull or lint compartment is full.	Clean the lint compartment and blades. If efficiency does not improve, replace the blades with new ones.
Fabric damage.	Excessive pressure or uneven fabric surface.	Always use on a flat surface with light pressure. Avoid using on delicate fabrics at high speeds.

9. SPECIFICATIONS

- **Model Number:** SL-1
- **Product Dimensions:** 4.33 x 0.79 x 4.72 inches
- **Item Weight:** 12.3 ounces
- **Battery:** 1 Lithium Ion battery (included)

- **Charging:** USB-C (5V/1A adapter recommended)
- **Blade Type:** 6-leaf, rust-proof
- **Motor Speed:** Up to 8500 RPM
- **Speed Settings:** 3 adjustable speeds
- **Material:** Stainless Steel (mesh cover), Alloy Steel (handle)
- **Color:** Black
- **UPC:** 741365408963

10. WARRANTY AND SUPPORT

SUPER LINT is committed to providing high-quality products. We offer a 100% SATISFACTION GUARANTEE.

- If there is any problem with the quality of your fuzz remover fabric shaver, we promise to reship or refund for free.
- For further assistance or inquiries, please contact our customer support.