



Manuals.plus /

› Panasonic /

› Panasonic 6.5 Kg 5 Star Fully-Automatic Top Load Washing Machine NA-F65LF3CRB User Manual

Panasonic NA-F65LF3CRB

Panasonic 6.5 Kg 5 Star Fully-Automatic Top Load Washing Machine NA-F65LF3CRB User Manual

Model: NA-F65LF3CRB

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic 6.5 Kg Fully-Automatic Top Load Washing Machine, model NA-F65LF3CRB. Please read this manual thoroughly before using the appliance and retain it for future reference.

1.1 Product Overview

The Panasonic NA-F65LF3CRB is a 6.5 Kg capacity fully-automatic top load washing machine designed for efficient and thorough cleaning. It features a 5-star energy rating for optimal efficiency and a maximum spin speed of 700 RPM for faster drying. Key technologies include Active Foam Wash for deep stain removal and Aqua Spin Rinse for water saving. The machine offers 12 wash programs to cater to various fabric types and washing needs.



Figure 1.1: Front view of the Panasonic NA-F65LF3CRB 6.5 Kg Fully-Automatic Top Load Washing Machine in Charcoal Inox Grey.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the machine before cleaning or performing any maintenance.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.

3. SETUP AND INSTALLATION

3.1 Unpacking and Included Components

Carefully unpack the washing machine. Ensure all components are present:

- 1 Washing Machine Unit
- 1 Water Inlet Pipe (1.25 meters)
- 1 Drain Pipe (0.8 meter)
- Rat Mesh
- Warranty Card
- User Manual (this document)

3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and access. The dimensions of the unit are approximately 58.5 cm (Depth) x 52.5 cm (Width) x 91 cm (Height).



Figure 3.1: Side view illustrating the washing machine's dimensions (95.0 cm height, 52.5 cm width, 58.5 cm depth) and key features like 12 wash programs, anti-bacterial water inlet, and child lock.

3.3 Water and Drain Connections

1. Connect the water inlet pipe to a cold water tap and to the water inlet valve on the back of the washing machine. Ensure connections are tight to prevent leaks.
2. Position the drain pipe to allow for proper water drainage. Ensure it is securely placed to prevent dislodgement during operation.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a knob control console for selecting wash programs and settings.



Figure 4.1: Top view of the washing machine showing the control panel with program selections and the interior drum.

4.2 Loading Laundry

Open the top lid and load clothes loosely into the drum. Do not overload the machine; the maximum capacity is 6.5 Kg. For optimal washing, ensure clothes can move freely.

4.3 Adding Detergent and Softener

Add the appropriate amount of detergent to the detergent dispenser. If using fabric softener, add it to the designated softener compartment.

4.4 Wash Programs

The washing machine offers 12 wash programs. Select the desired program using the control knob:

- **Normal:** For daily laundry.
- **Eco Wash:** Energy-saving wash cycle.
- **Quick Wash:** For lightly soiled items requiring a fast cycle.
- **Soak:** For heavily soiled items requiring pre-soaking.
- **Jeans:** Optimized for denim fabrics.
- **Bed Sheet:** For larger items like bed sheets.
- **Delicates:** Gentle wash for delicate fabrics.
- **Dynamic Spin:** Enhanced spin cycle for faster drying.
- **Wash+Rinse:** Performs wash and rinse cycles.
- **Wash+Spin:** Performs wash and spin cycles.
- **Rinse+Spin:** Performs rinse and spin cycles.
- **Tub Hygiene:** For cleaning the washing machine tub.



Figure 4.2: Detailed view of the control panel displaying the 12 available wash programs.

4.5 Key Features

- **Active Foam Wash Technology:** This system creates fine, high-density foam before the washing cycle begins. The foam effectively lifts, separates, and removes dirt particles from deep within fabric fibers.

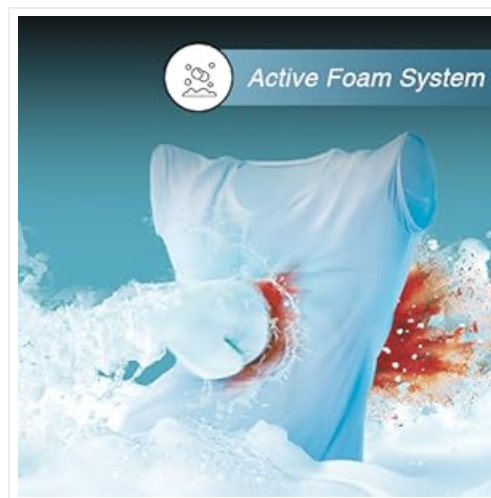


Figure 4.3: Illustration of the Active Foam System generating foam for effective cleaning.

- **Aqua Spin Rinse:** For the first rinse, a powerful shower over a wide area effectively washes away foam. This method achieves water savings of up to 28% compared to conventional rinsing by soaking.



Figure 4.4: Visual representation of the Aqua Spin Rinse feature, highlighting water saving.

- **Quick Wash:** This program allows for a faster wash cycle, suitable for lightly soiled clothes. The machine can weigh the load and select the appropriate water level and wash time automatically.



Figure 4.5: Inside view of the washing machine drum during a Quick Wash cycle.

- **Dynamic Spin:** This feature enhances the spin cycle to dry clothes up to 20% faster.



Figure 4.6: Visual demonstrating the Dynamic Spin feature for accelerated drying.

- **Antibacterial Water Inlet:** Helps maintain hygiene by preventing bacterial growth in the water inlet.



Figure 4.7: Image illustrating the Antibacterial Water Inlet, promoting hygienic washing.

- **Child Lock:** Prevents accidental operation by children.
- **Auto Power Off with Memory Backup:** The machine automatically turns off after a cycle and retains settings in case of a power interruption.
- **Sazanami Drum:** Designed for gentle yet effective washing, protecting fabrics from damage.

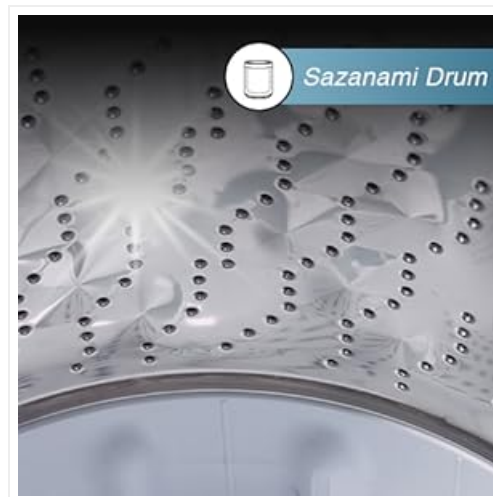


Figure 4.8: Close-up of the Sazanami Drum's unique texture, designed for gentle washing.

- **Big Lint Filter:** A large capacity lint filter collects lint and can be easily cleaned.



Figure 4.9: Image showing the Big Lint Filter, designed for efficient lint collection.

- **Motor Overload Protection:** Protects the motor from damage due to excessive load.



Figure 4.10: Illustration of the motor with overload protection, ensuring durability.

5. MAINTENANCE AND CARE

5.1 Cleaning the Lint Filter

Regularly clean the Big Lint Filter to ensure efficient operation. Remove the filter, clear accumulated lint, and rinse it under running water. Reinstall the filter securely.

5.2 Cleaning the Washing Machine

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- Run the "Tub Hygiene" program periodically to clean the inner drum and prevent odor buildup.
- Clean the detergent and softener dispensers to prevent residue accumulation.

5.3 Winterization (if applicable)

If the machine is to be stored in an area subject to freezing temperatures, drain all water from the machine to prevent damage.

6. TROUBLESHOOTING

Before contacting service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, power outage.	Check power connection, ensure lid is fully closed, check household power supply.
No water filling	Water tap closed, water inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check water supply.
Machine vibrates excessively	Uneven load, machine not level, transit bolts not removed.	Redistribute laundry, adjust leveling feet, ensure transit bolts are removed (if applicable).
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Straighten drain hose, clean drain pump filter (refer to service manual for location).
Error Alarm displayed	Specific error code.	Refer to the full user manual for specific error code meanings and solutions.

If the problem persists after attempting these solutions, please contact customer service.

7. SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model	NA-F65LF3CRB
Capacity	6.5 Kilograms
Maximum Rotational Speed	700 RPM
Installation Type	Freestanding
Form Factor	Top-Loading
Special Features	Child Lock, High Efficiency, Active Foam Wash, Aqua Spin Rinse, Antibacterial Water Inlet, Auto Power Off with Memory Backup, Big Lint Filter, Sazanami Drum, Drydynamic Spin
Colour	Charcoal Inox Grey
Control Console	Knob
Number of Wash Programs	12
Access Location	Top Load
Certification	5 Star Energy Rating
Material	Metal
Item Weight	28 kg
Product Dimensions (LxWxH)	58.5 x 52.5 x 91 Centimeters



Figure 7.1: The 5 Star Energy Savings Guide, indicating high efficiency.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Panasonic washing machine comes with a manufacturer's warranty:

- **Product Warranty:** 2 years
- **Motor Warranty:** 10 years

Please refer to the included warranty card for detailed terms and conditions.



Figure 8.1: Visual representation of the 2-year product warranty and 10-year motor warranty.

8.2 Customer Support

For service, support, or inquiries, please contact Panasonic customer service. Contact details can be found on your warranty card or the official Panasonic website.

Manufacturer: Panasonic Life Solutions India Private Limited

Address: 12th floor, Ambience Tower, Ambience Island, NH-8, Gurugram, Haryana-122002, India