

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jectse](#) /

› **Jectse High Performance 1080P Mini LED Projector Instruction Manual**

Jectse Jectse3giz17bkpy

Jectse High Performance 1080P Mini LED Projector Instruction Manual

Model: Jectse3giz17bkpy

1. SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Do not expose the projector to rain or moisture to prevent fire or electric shock.
- Do not open the projector casing. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power adapter supplied with the projector.
- Avoid direct eye exposure to the projector lens when the lamp is on.
- Keep the projector away from heat sources and direct sunlight.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Jectse Mini LED Projector
- 1 x Remote Control (2 AAA batteries not included)
- 1 x AV Line (3-in-1 RCA cable)
- 1 x Instruction Manual
- 1 x Power Adapter

PACKAGE LIST



Projector



Instruction Manual



Power Adapter



AV Cable



Remote Control

Figure 2.1: Contents of the Jectse Mini LED Projector package.

3. PRODUCT OVERVIEW

The Jectse Mini LED Projector is a compact and portable device designed for various multimedia applications. It features a 1080P resolution, LED light source, and multiple connectivity options.



Figure 3.1: Front and top view of the Jectse Mini LED Projector.

3.1 Projector Components

EASY OPERATION

Equipped with HD Multimedia Interface, AV, USB interface

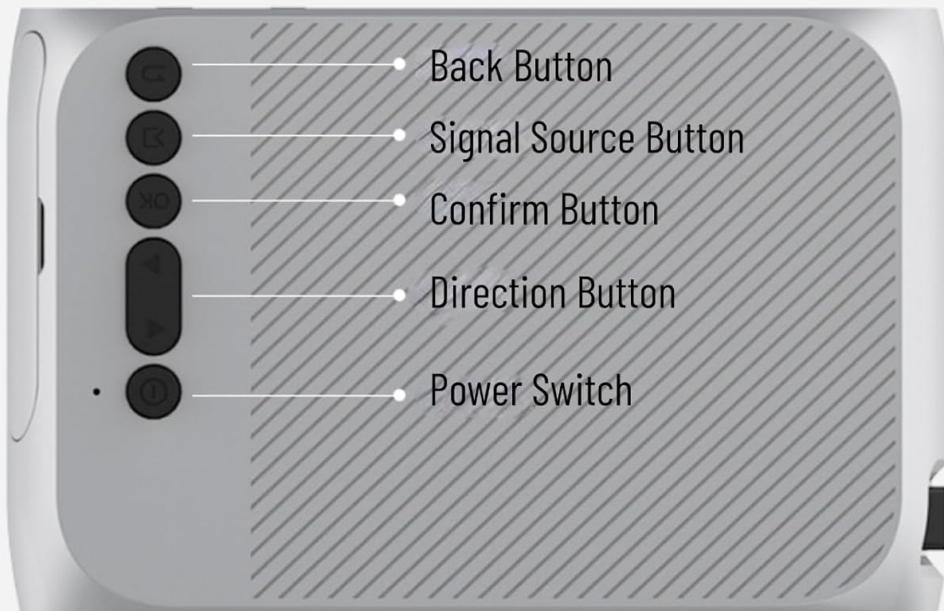


Figure 3.2: Top panel controls of the Jectse Mini LED Projector.

- **Lens:** Projects the image onto the screen.
- **Ventilation Grille:** Ensures proper airflow for cooling.
- **Control Buttons:** (Refer to Figure 3.2) For basic navigation and power control.
- **Focus Wheel:** Adjusts image clarity.



Figure 3.3: Rear and side view with input/output ports.

3.2 Input/Output Ports

- **HD Multimedia Interface (HDMI):** For connecting devices like laptops, gaming consoles, and media players.
- **AV Port:** For connecting older devices using the included AV cable.
- **USB Port:** For connecting USB drives to play media files directly.
- **Power Input:** For connecting the power adapter.
- **Audio Output (3.5mm Jack):** For connecting external speakers or headphones.

4. SETUP

4.1 Placement

Place the projector on a stable, flat surface. Ensure there is adequate space around the projector for ventilation. The ideal projection distance is between 1.5 to 2 meters for optimal image size and clarity.



Figure 4.1: Recommended projection distance and screen sizes.

4.2 Power Connection

1. Connect the power adapter to the projector's power input port.
2. Plug the power adapter into a suitable electrical outlet (100-240V).

4.3 Connecting Input Sources

The projector supports HD Multimedia Interface, AV, and USB inputs.

STRONG COMPATIBILITY



Figure 4.2: Projector compatibility with various devices.

- **HD Multimedia Interface:** Connect an HD Multimedia Interface cable from your source device (e.g., laptop, game console) to the projector's HD Multimedia Interface port.
- **AV:** Connect the included AV cable to the projector's AV port and the corresponding audio/video output ports on your source device.
- **USB:** Insert a USB flash drive into the projector's USB port.

4.4 Focus Adjustment

After powering on the projector, rotate the focus wheel (usually located near the lens) until the projected image appears clear and sharp.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **To Power On:** Press the Power Switch button on the projector or the power button on the remote control.
- **To Power Off:** Press the Power Switch button again. The projector will shut down.

5.2 Source Selection

After powering on, use the "Signal Source Button" on the projector or the "Source" button on the remote control to cycle through available input sources (HD Multimedia Interface, AV, USB).

5.3 Menu Navigation

Use the Direction Buttons and Confirm Button on the projector or the arrow keys and OK button on the remote control to navigate through the projector's on-screen menu for settings adjustments (e.g., picture mode, aspect ratio, sound settings).

5.4 Remote Control Usage

Insert two AAA batteries (not included) into the remote control. Point the remote control towards the projector's IR receiver to operate functions such as power, source selection, volume, and menu navigation.

6. MAINTENANCE

6.1 Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive cleaners or excessive force, as this can scratch the lens.

6.2 General Cleaning

Wipe the exterior of the projector with a soft, dry cloth. Do not use liquid cleaners or solvents. Ensure the ventilation grilles are free from dust and debris to maintain optimal cooling.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image projected	<ul style="list-style-type: none">Power not connectedIncorrect input source selectedSource device not powered on or connected	<ul style="list-style-type: none">Check power cable and adapter connection.Press the "Signal Source Button" to select the correct input.Ensure the source device is on and connected properly.
Image is blurry	<ul style="list-style-type: none">Focus not adjustedProjector too close/far from screen	<ul style="list-style-type: none">Rotate the focus wheel until the image is clear.Adjust projection distance (1.5-2m recommended).
No sound	<ul style="list-style-type: none">Volume too low or mutedAudio cable not connected (for AV input)Source device audio output issue	<ul style="list-style-type: none">Increase volume on projector or remote. Check mute status.Ensure AV audio cables are securely connected.Check audio settings on your source device.
Remote control not working	<ul style="list-style-type: none">Batteries are dead or incorrectly insertedObstruction between remote and projector	<ul style="list-style-type: none">Replace batteries (2 AAA) and ensure correct polarity.Remove any objects blocking the IR signal path.

8. SPECIFICATIONS

Feature	Detail
Brand	Jectse
Model Number	Jectse3giz17bkpy
Resolution	1920*1080p
Light Source	LED
LED Life	3000 hours
Projection Distance	1.5-2m
Projection Ratio	1.6:1
Aspect Ratio	16:9
Power Input	100-240V
Product Size	13 x 8.5 x 5 cm (approx. 5.1 x 3.3 x 2 inches)
Item Weight	1.1 pounds
Connectivity Technology	HD Multimedia Interface, AV, USB
Special Features	Adjustable, Portable Design

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Jectse website. Keep your proof of purchase for warranty claims.