

[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic 7 Kg 5 Star Fully-Automatic Top Load Washing Machine User Manual

Panasonic NA-F70LF3CRB

Panasonic 7 Kg 5 Star Fully-Automatic Top Load Washing Machine User Manual

Model: **NA-F70LF3CRB**

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Panasonic 7 Kg 5 Star Fully-Automatic Top Load Washing Machine. Please read it thoroughly before using the appliance and keep it for future reference. This washing machine is designed to provide excellent wash quality and ease of use, featuring advanced technologies like Active Foam Wash and an Antibacterial Water Inlet.



Figure 1: Front view of the Panasonic NA-F70LF3CRB Washing Machine. This image shows the overall design and color of the appliance.

Safety Information

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded power outlet. Do not use extension cords or adapters. Disconnect power before any maintenance or cleaning.
- **Water Connection:** Connect the water inlet pipe securely to prevent leaks. Ensure water pressure is within the recommended range.
- **Child Safety:** This appliance is equipped with a **Child Lock** feature. Activate it to prevent accidental operation by children. Never allow children to play with or inside the washing machine.
- **Placement:** Install the machine on a stable, level surface to minimize vibration and noise during operation. Ensure

adequate clearance around the machine for ventilation.

- **Load Capacity:** Do not overload the machine beyond its 7 Kg capacity to ensure optimal washing performance and prevent damage.

PRODUCT OVERVIEW

Familiarize yourself with the key components and innovative features of your Panasonic washing machine.



12 WASH
PROGRAMS



ANTI BACTERIAL
WATER INLET



CHILD LOCK



Figure 2: Side view illustrating key features and dimensions (95.0 cm H x 52.5 cm W x 58.5 cm D). Icons highlight 12 Wash Programs, Anti Bacterial Water Inlet, and Child Lock.

Key Features:

- **Active Foam Wash Technology:** This system creates fine, high-density foam before the washing cycle begins,

lifting and separating dirt particles from deep within fabric fibers for superior cleaning.



Figure 3: Active Foam System in action, demonstrating how foam penetrates fabrics to remove dirt.

- **Aqua Spin Rinse:** A powerful shower over a wide area effectively washes away foam during the first rinse, leading to water savings of up to 28% compared to conventional rinsing methods.



Figure 4: Top view of the washing machine's interior, highlighting the Active Foam System and Aqua Spin Rinse features.

- **12 Wash Programs:** A variety of programs to suit different fabric types and washing needs, including Quick Wash, Delicates, Eco Wash, and Tub Hygiene.

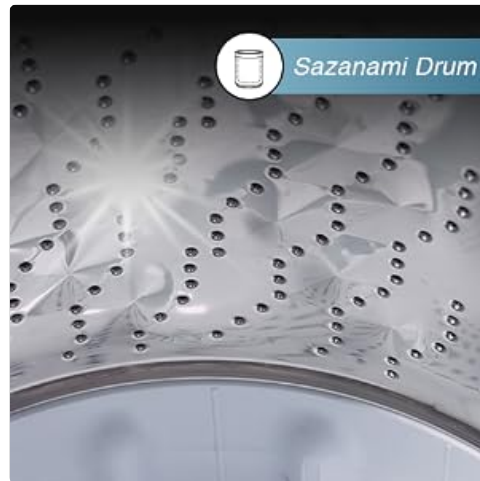


Figure 5: Detailed view of the control panel displaying the 12 available wash programs.

- **Sazanami Drum:** Designed with dimples and ridges to gently yet effectively remove dirt, protecting fabrics from damage.



Figure 6: Close-up of the Sazanami Drum's unique texture, designed for gentle yet effective washing.

- **Big Lint Filter:** A large capacity lint filter ensures effortless cleaning and effectively collects lint, which can be easily washed away with water.



Figure 7: The Big Lint Filter, designed for easy removal and cleaning of lint.

- **Antibacterial Water Inlet:** Helps maintain hygiene by preventing bacterial growth in the water inlet.



Figure 8: Icon representing the Anti Bacterial Water Inlet feature.

- **Auto Power Off with Memory Backup:** The machine automatically powers off after a cycle and retains settings in case of a power interruption.



Figure 9: Visual representation of the Auto Power Off and Auto Re-start features.

- **Dynamic Spin:** High spin speed (700 RPM) for faster drying of clothes.

Panasonic

NO.1
APPLIANCES BRAND
JAPAN

This spinner
is a great all-rounder.

DRY YOUR CLOTHES UP TO 20%* FASTER.

DRYNAMIC
SPIN



*Terms & Conditions Apply.

Figure 10: Illustration of the Drynamic Spin technology, emphasizing faster drying.

SETUP AND INSTALLATION

Before first use, ensure proper installation of your washing machine.

Included Components:

- 1 x Washing Machine Unit
- 1 x Water Inlet Pipe (1.25 meters)
- 1 x Drain Pipe (0.8 meter)
- 1 x Rat Mesh
- 1 x Warranty Card
- 1 x User Manual (this document)

Installation Steps:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any transit damage.
2. **Placement:** Choose a flat, stable surface. Adjust the leveling feet at the bottom of the machine to ensure it is perfectly level. This is crucial to prevent excessive vibration during operation.
3. **Water Connection:** Connect the water inlet pipe to a cold water tap and to the designated inlet on the back of the washing machine. Ensure connections are tight to prevent leaks.



Figure 11: Rear view of the washing machine, showing the water inlet and drain pipe connections.

4. **Drainage:** Position the drain pipe into a suitable drain or sink, ensuring it is secured to prevent dislodgement during drainage.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for effective use of your washing machine.

1. **Loading Laundry:** Open the lid and place clothes loosely into the drum. Do not overload.
2. **Adding Detergent:** Add appropriate amounts of detergent and fabric softener to their respective compartments. The machine has separate inlets for powder detergent, liquid detergent, and fabric conditioner.
3. **Selecting a Program:** Use the control knob to select one of the 12 available wash programs. The machine can weigh the load and suggest an appropriate water level.

- Normal
- Eco Wash
- Quick Wash
- Soak
- Jeans
- Bed Sheet
- Delicates
- Drynamic Spin
- Wash+Rinse
- Wash+Spin
- Rinse+Spin
- Tub Hygiene

- 4. **Starting the Wash:** Press the "Start/Pause" button to begin the cycle.
- 5. **Child Lock:** To activate the Child Lock, refer to your control panel instructions. This feature locks the control panel to prevent accidental changes during operation.
- 6. **After Washing:** Once the cycle is complete, the machine will automatically power off. Remove laundry promptly.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

- **Cleaning the Lint Filter:** Regularly remove and clean the Big Lint Filter to prevent lint buildup and ensure efficient drainage.
- **Tub Hygiene Program:** Utilize the dedicated "Tub Hygiene" wash program periodically to clean the washing machine drum and prevent mold or odor buildup.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- **Detergent Dispenser:** Clean the detergent and fabric softener dispensers regularly to prevent residue buildup.

TROUBLESHOOTING

Refer to this section for solutions to common issues. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed properly, program not selected.	Check power connection, ensure lid is fully closed, select a wash program.
Excessive vibration/noise	Machine not level, unbalanced load, transit bolts not removed.	Adjust leveling feet, redistribute laundry evenly, ensure all transit bolts are removed during installation.

Problem	Possible Cause	Solution
Water leakage	Loose inlet/drain hose connections, clogged drain filter.	Tighten hose connections, clean the Big Lint Filter.
Clothes not clean	Overloading, insufficient detergent, incorrect program.	Reduce load size, use recommended detergent amount, select appropriate wash program.
Error Alarm displayed	Specific malfunction.	Refer to the specific error code in the full user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	NA-F70LF3CRB
Capacity	7 Kilograms
Energy Rating	<p>5 Star (Best in class efficiency)</p>  <p>The image shows the Energy Savings Guide logo for a 5-star rating. It features a semi-circular arrangement of five stars, with the top star being the largest and the others decreasing in size. The stars are numbered 1 through 5. Below the stars, the text 'MORE STARS MORE SAVINGS' is written. At the bottom, 'ENERGY SAVINGS GUIDE' is displayed. A small icon of a washing machine is visible in the top left corner of the logo.</p>
Maximum Rotational Speed	700 RPM
Wash Programs	12 (Normal, Eco Wash, Quick, Soak, Jeans, Bed Sheet, Delicates, Drynamic Spin, Wash+Rinse, Wash+Spin, Rinse+Spin, Tub Hygiene)
Dimensions (LxWxH)	58.5 x 52.5 x 95 Centimeters
Item Weight	29 kg
Material	Metal body, Stainless Steel drum
Color	Charcoal Inox Grey
Special Features	Child Lock, High Efficiency, Active Foam Wash, Aqua Spin Rinse, Antibacterial Water Inlet, Auto Power Off with Memory Backup, Big Lint Filter, Sazanami Drum

Figure 12: The 5 Star Energy Savings Guide rating for this appliance.

Feature	Detail
Controller Type	Fully Automatic, Knob Control

WARRANTY AND SUPPORT

Your Panasonic washing machine comes with comprehensive warranty coverage:

- **Product Warranty:** 2 years on the entire product.
- **Motor Warranty:** 10 years on the motor.



Figure 13: Visual representation of the product and motor warranty periods.

For warranty claims, technical assistance, or service requests, please refer to the contact information provided on your warranty card or visit the official Panasonic India website. Ensure you have your product model number and purchase details ready when contacting support.

Manufacturer: Panasonic Life Solutions India Private Limited

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question