

KAFF KET 60A

KAFF K-Series KET 60A T-Shape Filterless Auto Clean Kitchen Chimney User Manual

Model: KET 60A

INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your new KAFF K-Series KET 60A T-Shape Filterless Auto Clean Kitchen Chimney. Please read this manual thoroughly before using the appliance to ensure safe and efficient operation. Retain this manual for future reference.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the power supply matches the voltage specified on the appliance rating label.
- Installation must be performed by a qualified technician in accordance with local regulations.
- Do not operate the chimney if the power cord is damaged.
- Keep children away from the appliance during operation and cleaning.
- Do not flambé under the chimney.
- Clean the oil collector regularly to prevent grease buildup and fire hazards.
- Ensure adequate ventilation in the room when the chimney is in use, especially if other fuel-burning appliances are present.
- Disconnect the power supply before any cleaning or maintenance.

PRODUCT OVERVIEW

Key Features

- T-Shape Kitchen Chimney with Filterless Technology
- Dry Heat Auto Clean Function
- High Air Suction Capacity: 1450 m³/hr

- 60 CM Size, Wall Mounted Design
- Thermostatic Touch Panel with 3 Speed Gesture Motion Control
- Low Noise Level: 58-63 dBA (max)
- Integrated LED Lighting
- Built-In Sleek Oil Collector

Components Included in the Box

- 1x KAFF K-Series KET 60A T-Shape Kitchen Chimney
- 1x Kitchen Chimney Exhaust Duct Pipe
- 1x User Manual/Warranty Card
- 1x Wall Mounting Bracket
- Screws and Rawl Plugs for installation

Product Views and Features



Figure 1: Front view of the KAFF K-Series KET 60A Kitchen Chimney, showcasing its T-shape design and control panel.

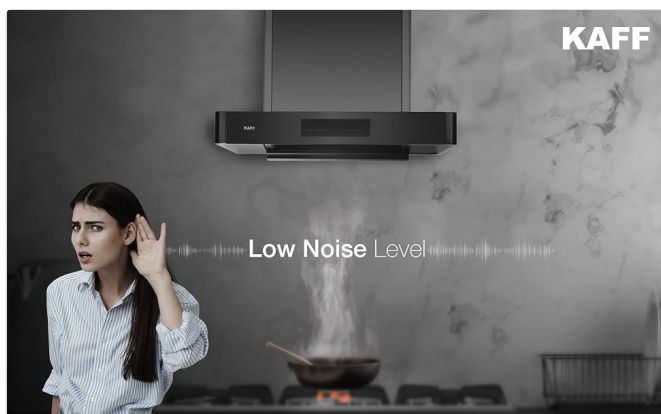


Figure 2: Illustration of the powerful 1450 m³/hr air flow capacity, effectively removing smoke and odors.



Figure 3: Detail of the energy-saving frosted LED light, providing illumination for your cooking area.



Figure 4: Depiction of the sleek touch panel and its 3 gesture control functionality for easy operation.

SETUP AND INSTALLATION

The KAFF K-Series KET 60A Kitchen Chimney is designed for wall-mounted installation. For optimal performance and safety, professional installation is highly recommended.

Installation Steps (Overview):

1. **Preparation:** Ensure the installation area is clear and the wall is structurally sound to support the chimney's weight (approx. 15 kg). Verify power outlet proximity.
2. **Mounting Bracket Installation:** Securely attach the provided wall mounting bracket to the wall using the supplied

screws and rawl plugs, ensuring it is level and at the correct height above the cooking surface. Refer to the detailed installation diagram in the separate installation guide for precise measurements.

3. **Ducting Connection:** Connect the exhaust duct pipe to the chimney's outlet and route it to the external ventilation point. Ensure the ducting is as straight and short as possible to maximize suction efficiency.
4. **Chimney Mounting:** Carefully lift and mount the chimney onto the installed wall bracket. Ensure it is securely seated.
5. **Electrical Connection:** Connect the chimney to a grounded electrical outlet (220 Volts, 50 Hz).
6. **Final Checks:** Test all functions (lights, fan speeds, auto-clean) to ensure proper operation before first use.

Note: A detailed installation guide with diagrams is included with your product. Please consult it for specific measurements and safety clearances.

OPERATING INSTRUCTIONS

Your KAFF K-Series KET 60A Chimney features a user-friendly thermostatic touch panel and gesture motion control for convenient operation.

Control Panel Functions:

- **Power On/Off:** Touch the power icon to turn the chimney on or off.
- **Fan Speed Control:** Adjust the suction power through 3 available speeds using the touch controls or gesture motion.
 - *Gesture Control:* Wave your hand from left to right to increase fan speed, and right to left to decrease fan speed.
- **Light Control:** Touch the light icon to turn the LED lights on or off.
- **Auto Clean Activation:** Press the auto-clean button to initiate the dry heat auto-clean cycle.

For best results, turn on the chimney a few minutes before you start cooking and let it run for a few minutes after you finish to ensure all smoke and odors are cleared.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your chimney.

Dry Heat Auto Clean Function:

This chimney features an advanced dry heat auto-clean technology. When activated, a heating element melts and dislodges oil and grease particles from the internal components. These particles then collect in the removable oil collector.

- **Frequency:** Activate the auto-clean function regularly, depending on your cooking frequency and type (e.g., once every 1-2 weeks for regular use).
- **Oil Collector Cleaning:** The oil collector should be emptied and cleaned periodically.
 1. Ensure the chimney is off and cool.
 2. Carefully remove the oil collector from its housing.
 3. Dispose of the collected oil and wash the collector with warm, soapy water. Rinse thoroughly and dry before reinserting.

General Cleaning:

- **Exterior:** Wipe the stainless steel and black finish surfaces with a soft, damp cloth and mild detergent. Avoid

abrasive cleaners or scouring pads.

- **LED Lights:** Gently wipe the LED light covers with a soft, dry cloth.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Chimney not turning on.	No power supply; loose connection; tripped circuit breaker.	Check power cord connection; ensure power outlet is functional; reset circuit breaker.
Low suction power.	Ducting obstruction; improper ducting installation; oil collector full.	Check ducting for blockages; ensure ducting is correctly installed; clean the oil collector.
Unusual noise during operation.	Loose components; foreign object in fan; motor issue.	Ensure all parts are securely fastened; inspect for foreign objects (with power off); if noise persists, contact service.
Auto-clean not functioning.	System error; insufficient power.	Ensure stable power supply; try restarting the chimney; if issue persists, contact service.

If the problem persists after attempting these solutions, please contact KAFF customer support.

SPECIFICATIONS

Attribute	Detail
Model	KET 60A
Type	T-Shape Kitchen Chimney
Air Flow Capacity	1450 m³/hr (CMPH)
Filter Type	Filterless
Auto Clean Technology	Dry Heat Auto Clean
Size	60 CM
Mounting Type	Wall Mount
Control Type	Thermostatic Touch Panel with 3 Speed Gesture Motion Control
Noise Level	58 dB (Max 63 dBA)
Lighting	LED
Material	Stainless Steel
Voltage	220 Volts

Attribute	Detail
Frequency	50 Hz
Wattage	232 Watts
Item Weight	15 kg
Product Dimensions (LxWxH)	50 x 59.5 x 65 Centimeters
Included Components	1x Kitchen Chimney, 1x Kitchen Chimney Exhaust Duct Pipe, 1x Warranty Card.

WARRANTY AND SUPPORT

Warranty Information:

Your KAFF K-Series KET 60A Kitchen Chimney comes with a comprehensive warranty:

- **2 Years Comprehensive Warranty** on the product.
- **Lifetime (10 Years) Warranty** on the motor.

Please retain your purchase receipt and warranty card for any warranty claims.

Customer Support:

For any queries, service requests, or technical assistance, please contact KAFF customer care:

- **Toll-Free Number:** 18001802221
- **Email:** customercare@kaff.in
- **Manufacturer:** Kaff Appliances (I) Pvt. Ltd.
- **Visit the KAFF Store:** [KAFF Official Store on Amazon.in](#)

© 2025 KAFF Appliances (I) Pvt. Ltd. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question