

## HiSpyCam S36

# HiSpyCam S36 Hidden Camera Clock Instruction Manual

Model: S36

## 1. INTRODUCTION

---

Thank you for choosing the HiSpyCam S36 Hidden Camera Clock. This device combines the functionality of a digital clock with a discreet Full HD 1080P camera, offering reliable indoor home security monitoring. It features Wi-Fi connectivity for remote access, night vision capabilities, and motion detection alerts. Please read this manual carefully to ensure proper setup and operation.

## 2. PACKAGE CONTENTS

---

- HiSpyCam S36 Hidden Camera Clock
- USB Charging Cable
- Instruction Manual
- Micro SD Card (if included with purchase)

## 3. PRODUCT OVERVIEW

---

# FHD 1080P



**Figure 3.1:** Front view of the HiSpyCam S36 Hidden Camera Clock, showing the digital time display.

# Remote Access on the App



Figure 3.2: Side view of the camera clock, illustrating its compact design.

## 3.1 Components

- **Front:** Digital Clock Display, Hidden Camera Lens
- **Back/Side:** Power ON/OFF Switch, Micro USB Charging Port, Micro SD Card Slot, Reset Button

Your browser does not support the video tag.

**Video 3.1:** An unboxing and overview of the HiSpyCam S36 Hidden Camera Clock, detailing its physical components and initial power-on process.

## 4. SETUP INSTRUCTIONS

---

### 4.1 Initial Power On

1. Remove the back cover of the device.
2. Locate the Power ON/OFF switch and slide it to the 'ON' position. Indicator lights will illuminate, and the clock display will show '00:00'.
3. Replace the back cover.

### 4.2 App Installation

1. Scan the QR code provided in the quick start guide or search for "HomeEye" in your device's app store (Google Play for Android, App Store for iOS).
2. Download and install the "HomeEye" application.

### 4.3 Connecting to Camera's Wi-Fi (AP Mode)

This mode allows direct connection to the camera's Wi-Fi hotspot for local viewing without an internet connection.

1. Open the "HomeEye" app and tap "Add Now".
2. Select "AP Distribution Network".
3. Go to your phone's Wi-Fi settings and connect to the camera's Wi-Fi network (usually starts with "AYS-" followed by numbers/letters).
4. Return to the "HomeEye" app. The camera should now be connected in AP mode.

### 4.4 Connecting to Home Wi-Fi (Remote Access)

For remote viewing and full functionality, connect the camera to your home Wi-Fi network.

1. While connected in AP mode, navigate to the camera settings within the "HomeEye" app.
2. Select "Wi-Fi Settings".
3. Choose your home Wi-Fi network from the list and enter the password.
4. The camera will attempt to connect to your home Wi-Fi. Once successful, you can access the camera remotely via the app.

### 4.5 Setting Password

It is highly recommended to set a strong password for your camera to protect your privacy and security.

1. In the camera settings within the "HomeEye" app, select "Change Password".
2. Enter a new password and confirm it.
3. Save the changes.

### 4.6 Setting Time

Ensure the clock displays the correct time for accurate recording timestamps.

1. In the camera settings within the "HomeEye" app, select "Time Settings".
2. Choose your local time zone.
3. The clock display on the device will automatically adjust.

Your browser does not support the video tag.

**Video 4.1:** A detailed guide on setting up the HiSpyCam S36, including app installation, Wi-Fi connection, and time synchronization.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Live View

Once connected, open the "HomeEye" app and select your camera from the device list to view the live feed.

# Remote Access on your Smartphone

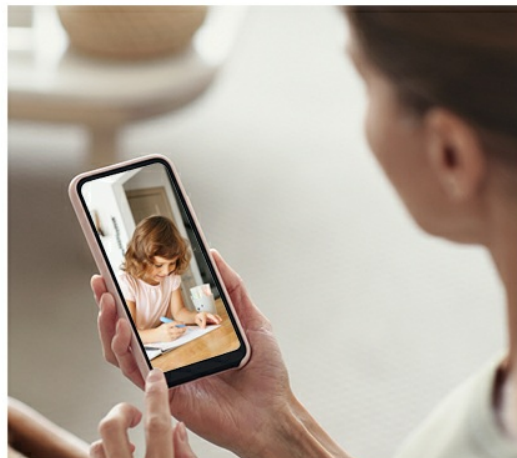


Figure 5.1: Remote access to the camera's live feed via the smartphone application.



Figure 5.2: Demonstration of the Full HD 1080P video quality provided by the camera.

## 5.2 Recording Video & Taking Photos

The app interface provides options to manually start/stop video recording and capture still images directly from the live view.

## 5.3 Motion Detection Settings

Configure the camera to detect motion and send alerts to your phone.

1. In the camera settings, go to "Alarm Settings".
2. Enable the "Motion Detection Switch".
3. Adjust motion detection sensitivity (Low, Medium, High) and alarm recording duration as needed.

# 3 WAYS OF CONNECTIONS

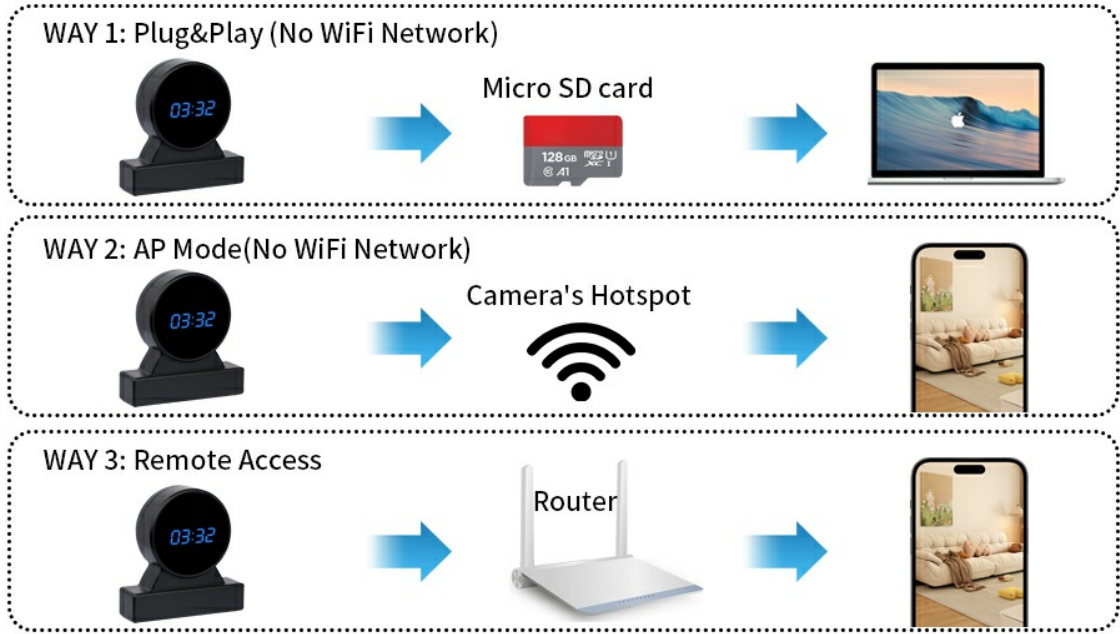 


Figure 5.3: An example of a motion detection alert and push notification received on a smartphone.

## Motion Detection Push

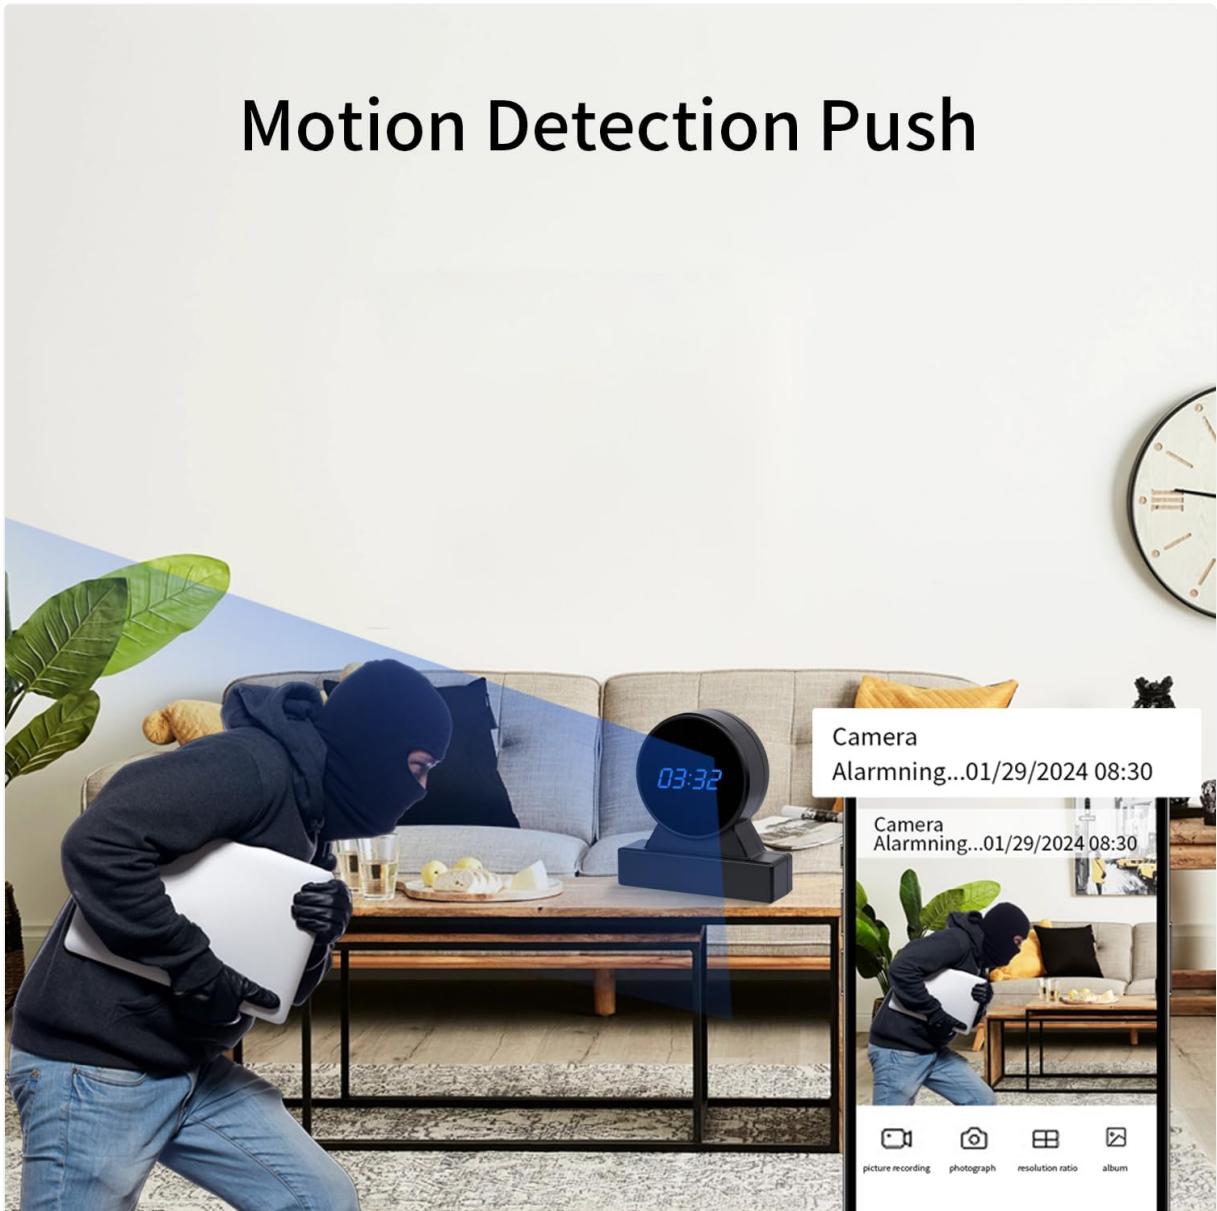 


Figure 5.4: A close-up of a smartphone displaying a motion detection alert from the camera.

## 5.4 Night Vision

The camera is equipped with infrared night vision for clear recording in low-light conditions.

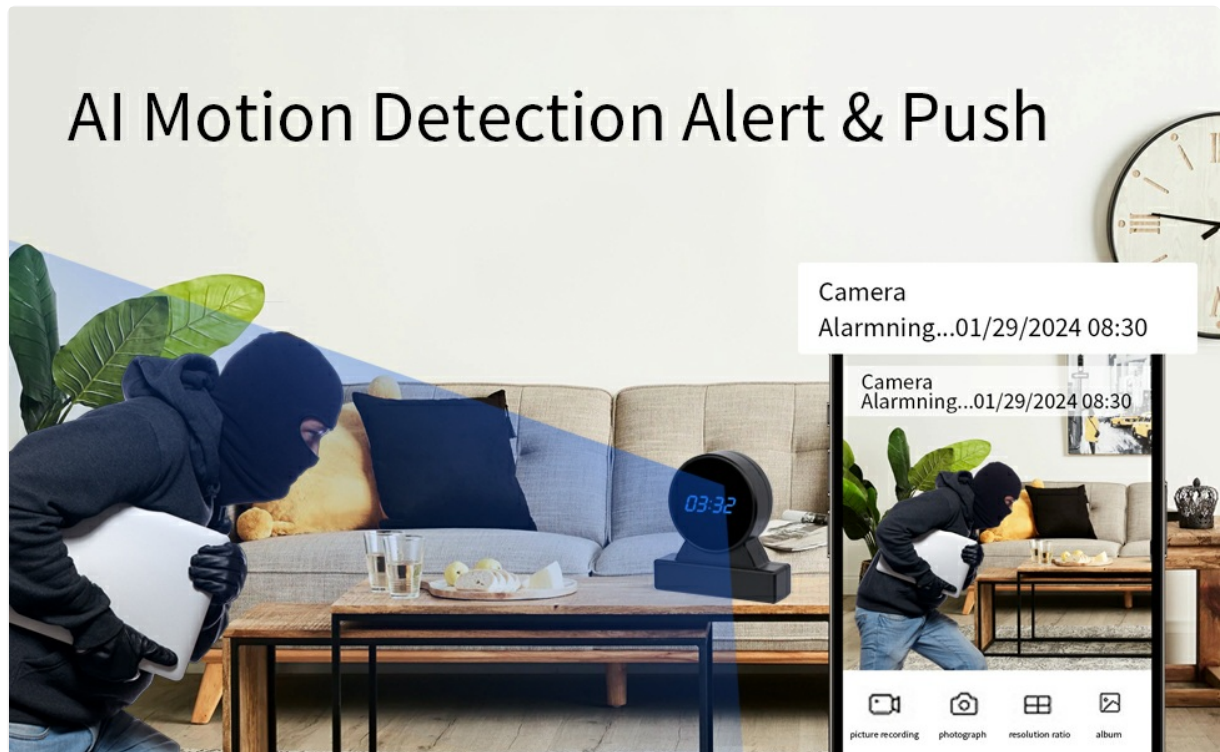


Figure 5.5: The camera clock demonstrating its strong night vision capabilities in a dark environment.

## 5.5 Audio Monitoring

The app allows you to listen to audio from the camera's environment. Ensure the microphone setting is enabled in the app.

## 5.6 Indicator Light and Clock Screen Control

You can turn off the indicator lights and the clock display via the app for more discreet operation.

Your browser does not support the video tag.

Video 5.1: A demonstration of the HiSpyCam S36's features, including live view, recording, and app settings for discreet operation.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** For optimal battery life, charge the device regularly. Avoid fully discharging the battery for extended periods.

## 7. TROUBLESHOOTING

---

Issue	Possible Solution
-------	-------------------

Issue	Possible Solution
Camera not connecting to Wi-Fi	Ensure the camera is within range of your Wi-Fi router. Verify the Wi-Fi password is correct. Try resetting the camera using the reset button.
No live feed in the app	Check your internet connection. Ensure the camera is powered on and connected to Wi-Fi. Restart the app and the camera.
SD card not recording	Ensure the SD card is inserted correctly and is not full. Format the SD card through the app settings. Check recording settings (e.g., motion detection recording).
Clock display is incorrect	Adjust the time zone settings in the "HomeEye" app.

## 8. SPECIFICATIONS

---

- **Brand:** HiSpyCam
- **Model Number:** S36
- **Item Dimensions (L x W x H):** 2 x 2 x 2 inches
- **Video Resolution:** Full HD 1080P
- **Viewing Angle:** 140-Degree (approximate, based on product images)
- **Night Vision:** Yes (5 IR LEDs)
- **Connectivity:** Wi-Fi Wireless
- **Storage:** Micro SD Card (up to 128GB, not always included)
- **Features:** Motion Detection, Remote Access, Nanny Cam Functionality
- **Power Source:** Rechargeable Battery / Micro USB

## 9. WARRANTY AND SUPPORT

---

The HiSpyCam S36 Hidden Camera Clock comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact HiSpyCam customer support directly.

For technical assistance, troubleshooting, or any product-related inquiries, please visit the official HiSpyCam website or contact their customer service team. Contact information can typically be found on the product packaging or the manufacturer's website.