

[Manuals.plus](#) /

> [BubbaCare](#) /

> BubbaCare Electric Nail Clipper & Trimmer D604 User Manual

BubbaCare D604

BubbaCare Electric Nail Clipper & Trimmer D604 User Manual

Model: D604 | Brand: BubbaCare

INTRODUCTION

Thank you for choosing the BubbaCare Electric Nail Clipper & Trimmer. This device is designed to provide a safe and efficient solution for nail care, integrating both trimming and polishing functions. It features two speed settings and is suitable for individuals of all ages, including babies, children, adults, and seniors with weak hands. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Keep out of reach of children. This device is not a toy. Children under 12 should not use it alone.
- Use only as directed in this manual.
- Do not use near water or in wet areas to prevent electrical shock.
- Unplug the device from the power outlet when not in use or before cleaning.
- Consult a healthcare professional if you have any medical conditions that may affect nail care, such as diabetes or circulatory problems.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure the device is fully charged before first use for optimal performance.

PRODUCT FEATURES

- **2-Speed Safety Nail Clipper:** Built-in blade design prevents accidental finger injury. Offers low and high-speed modes.
- **Cutter and Polisher 2-in-1:** Combines nail trimming and polishing functions for complete nail care.
- **Bass Work and Hygiene:** Operates quietly (under 40dB) and includes a chip reservoir to collect nail debris, ensuring a clean environment.
- **Fast Charge & LED Light:** Type-C fast charging provides long battery life (1 hour charge for a month of use). Integrated LED soft light assists in low-light conditions.

- **Suitable For All Ages:** Simple one-button operation makes it easy for children, adults, and seniors to use independently.

PRODUCT APPEARANCE AND COMPONENTS

Familiarize yourself with the different parts of your Bubbacare Electric Nail Clipper & Trimmer:



Image: Detailed view of the electric nail clipper highlighting its various components.

Component List

No.	Component
1	Polisher Switch
2	Trimmer Switch
3	Indicator Light
4	Cover
5	Finger Position

No.	Component
6	Nail Clipper
7	Floodlight
8	Nail Polisher
9	Storage Box
10	Charging Port

SETUP

Before using your electric nail clipper for the first time, ensure it is fully charged.

1. **Unboxing:** Carefully remove all components from the packaging. Verify that all items listed in the package contents are present.



Package List:

- 1x Nail Clipper
- 1x Charging Cable
- 1x Cleaning Brush
- 1x User Manual

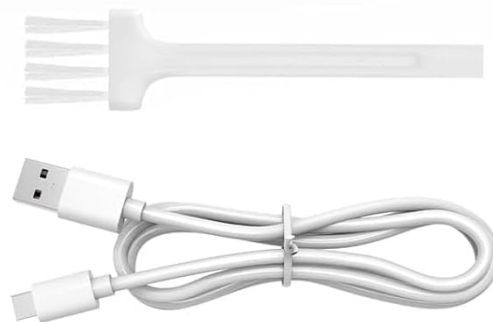


Image: The package includes the nail clipper, USB cable, cleaning brush, and user manual.

2. **Charging:** Connect the provided USB Type-C cable to the charging port (10) on the device and to a suitable USB power source (e.g., computer, adapter, power bank). The indicator light (3) will show charging status. A full charge takes approximately 1-2 hours and provides up to a month of use.

Type-C Fast Charging

The build-in 500 mAh battery supports 4-6 Hours long lasting, and can be recharged from a PC , adapter , or power bank via attached Type-C cable.

500
mAh
Rechargeable
Battery

1-2
Hours
Charging
Time

4-6
Hours
Long
Working



Image: The device features a Type-C charging port for convenient and fast charging.

OPERATING INSTRUCTIONS

The Bubbacare Electric Nail Clipper & Trimmer offers both trimming and polishing functions with adjustable speeds.

1. **Power On/Off:** Press and hold the power button (part of the Trimmer Switch 2) for a few seconds to turn the device on or off. The indicator light (3) will illuminate when on.
2. **Adjusting Speed:** The device has two speed levels. After turning it on, press the power button again to switch between low and high-speed modes.
3. **Using the LED Light:** The integrated floodlight (7) automatically turns on when the device is operating, providing better visibility for precise nail care.

Trimming Nails

1. Ensure the device is powered on.
2. Gently insert your fingernail into the nail trimming opening (part of 6, Nail Clipper).
3. Move your finger slightly left and right to allow the clipper to trim the nail evenly. The device will automatically collect the trimmed nail debris in the storage box (9).

4. Repeat for all nails.



Image: The device features distinct switches for nail trimming and polishing, along with two speed settings for customized use.

Polishing Nails

1. Ensure the device is powered on.
2. Gently press the Polisher Switch (1) to activate the nail polisher (8).
3. Carefully place your nail against the polishing surface to smooth and shine your nails.
4. Repeat for all nails as desired.

Video Demonstration

Watch the official product videos for a visual guide on how to use your electric nail clipper:

Your browser does not support the video tag.

Video: A comprehensive demonstration of the Automatic Electric Nail Clipper with LED Light and 2 Speeds, showcasing its features and ease of use.

Your browser does not support the video tag.

Video: A concise demonstration of the Automatic Electric Nail Clipper, highlighting its core functions and benefits.

MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your device.

1. **Emptying the Nail Debris Storage Box:** The device features a built-in storage box (9) that automatically collects nail chips. To empty it, gently pull up the lid from the left side or push the right side of the lid to open the storage box. Dispose of the collected debris.



Image: Instructions on how to open the integrated nail storage box for easy cleaning and disposal of nail debris.

2. **Cleaning the Blades:** Use the provided cleaning brush to remove any remaining nail dust or debris from the trimming and polishing areas.
3. **General Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Storage:** Store the device in a cool, dry place away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter any issues with your Bubbacare Electric Nail Clipper & Trimmer, please refer to the

following table:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device is off.	Charge the device fully. Press and hold the power button to turn it on.
Nails are not trimming effectively.	Nail debris accumulation or improper nail insertion.	Clean the cutting head and storage box. Ensure nails are inserted correctly into the opening. Try the high-speed mode.
Nail polishing is not effective.	Polishing head is worn or dirty.	Clean the polishing head. Ensure proper contact with the nail.
Device makes unusual noise.	Internal obstruction or damage.	Turn off the device and check for any visible obstructions. If the problem persists, discontinue use and contact customer support.
Indicator light not working.	Device is off or battery is completely drained.	Charge the device. Turn the device on. If still not working, contact customer support.

SPECIFICATIONS

Feature	Detail
Model	D604
Battery	1 Lithium Polymer battery (included)
Charging Port	Type-C
Charging Time	1-2 Hours
Working Time	Up to 1 month (based on typical use)
Noise Level	Less than 40dB
Net Weight	120g (4.23 ounces)
Dimensions	8cm x 5.5cm (3.15 x 2.2 inches)
Blade Material	Stainless Steel
Material	Plastic

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or any questions not covered in this manual, please contact Bubbacare customer service through your retailer or the official Bubbacare website. Please retain your proof of purchase for warranty purposes.