



Manuals.plus /

› Plimpton /

› Plimpton PlimPad P3 Android Tablet User Manual

Plimpton PlimPad P3

Plimpton PlimPad P3 Android Tablet User Manual

Model: PlimPad P3

1. INTRODUCTION

Thank you for choosing the Plimpton PlimPad P3 Android Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully to ensure optimal performance and longevity of your tablet.

 
2. PRODUCT OVERVIEW

Key Features:

- **Display:** 10.1-inch 1280x800 IPS HD Glass Screen for immersive viewing.
- **Performance:** Android 11 OS, Quad-core processor, 3GB RAM, 32GB internal storage (expandable up to 512GB via Micro SD card, not included).
- **Connectivity:** Latest Wi-Fi 6 technology for stable and fast connections, Bluetooth 5.0.
- **Battery:** 6000mAh battery providing 6-8 hours of usage.
- **Design:** Durable metal body with dual stereo speakers.
- **Cameras:** 8MP rear camera and 2MP front camera.

Visual Guide:

Google Mobile Service

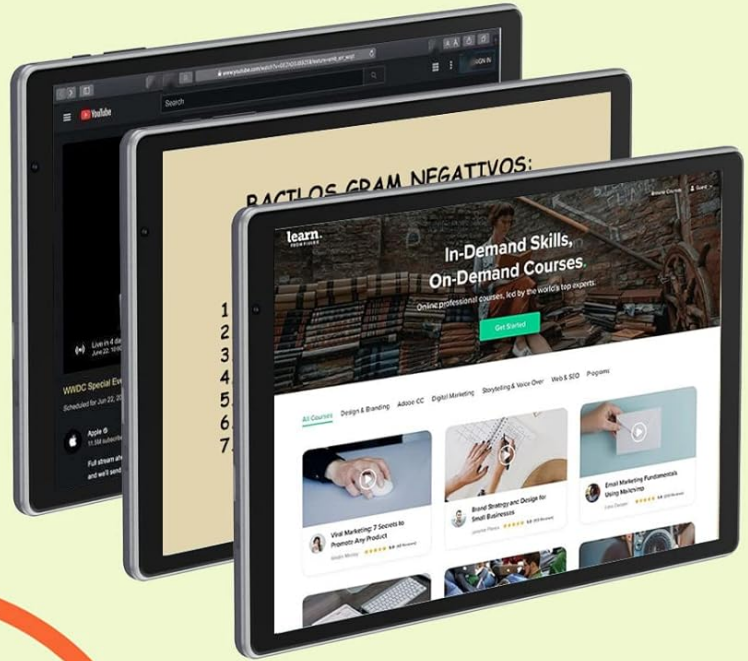

Android 11 Highlights

Conversations



Content Capture



Predictive Tools



Accessibility



Device Controls



Privacy & Security



Phones ready for Android 11



Image: Overview of Android 11 features, including Conversations, Content Capture, Predictive Tools, Accessibility, Device Controls, Privacy & Security, and Phones ready for Android 11.

RAM

3GB

ROM

32GB

Expandable

512GB

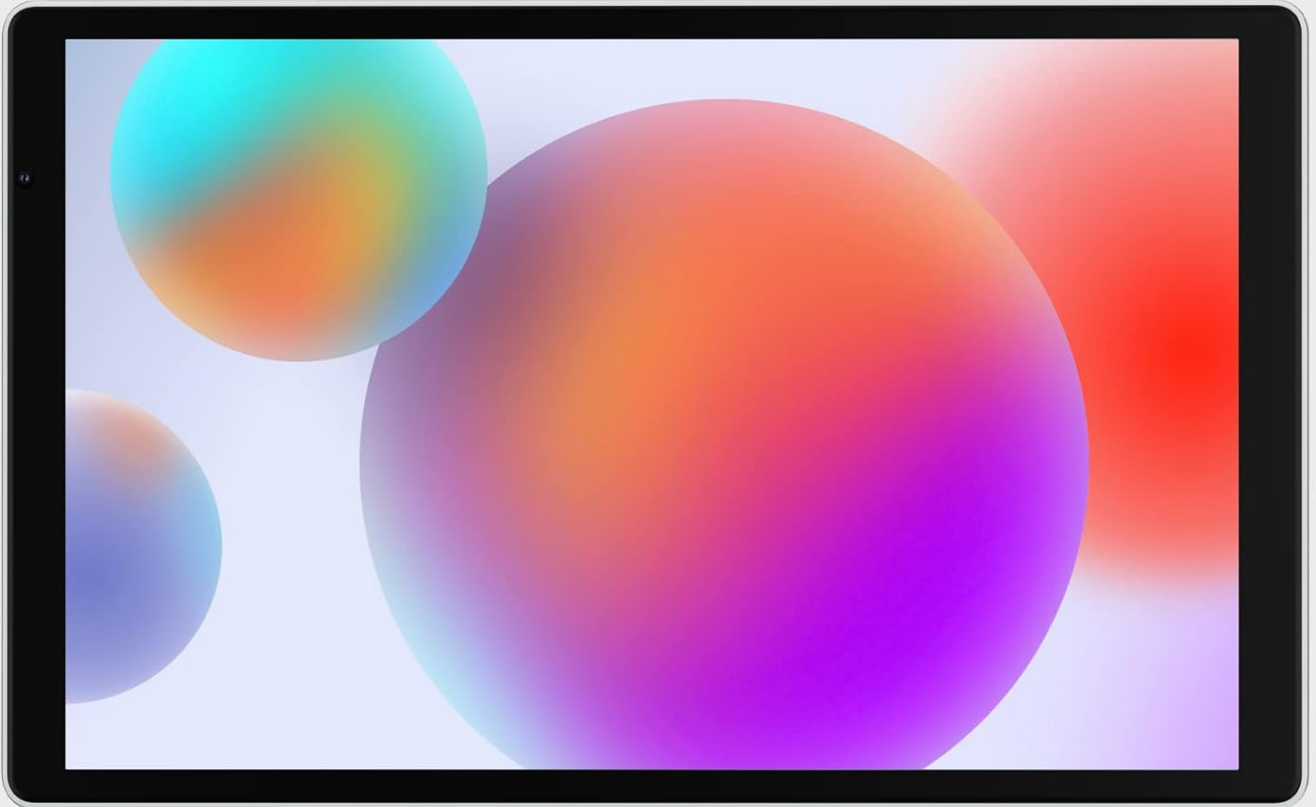 


Image: Illustrates the tablet's memory specifications: 3GB RAM, 32GB ROM, and expandable storage up to 512GB.

10.1 inch 1280 x 800 IPS Screen

Wide Screen Bringing Immersive Feeling



Image: The 10.1-inch 1280 x 800 IPS screen displaying a vibrant image of a snowboarder, highlighting its immersive viewing experience.

WiFi 5 5GHz 867 Mbps
WiFi 6 5GHz 1201 Mbps



Image: Compares Wi-Fi 5 (5GHz, 867 Mbps) and Wi-Fi 6 (5GHz, 1201 Mbps) speeds, demonstrating the faster connectivity of Wi-Fi 6.

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge your PlimPad P3 tablet. Connect the included Type-C charging cable to the tablet's charging port and the other end to a power adapter. A full charge typically takes 2-3 hours. The tablet includes a 6ft (1.8m) charging cable for convenience.



6000
mAh



Type-C

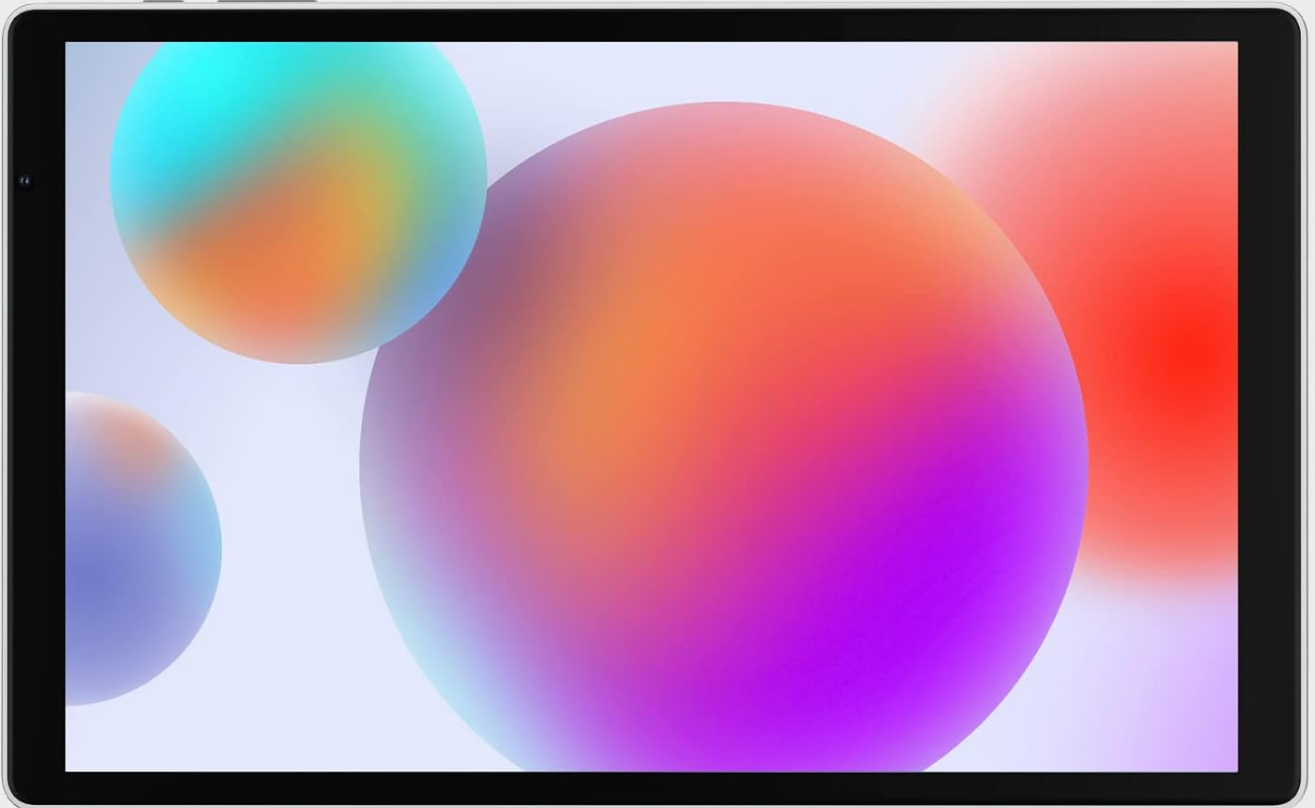 


Image: Shows the tablet's 6000mAh battery capacity and the Type-C charging port.

3.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the Plimpton logo appears on the screen.
- **To Power Off:** Press and hold the power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

3.3 Initial Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup:

1. Select your preferred language.
2. Connect to a Wi-Fi network. Ensure your router supports Wi-Fi 6 for optimal performance.
3. Sign in with your Google account or create a new one. This is necessary to download apps from the Google Play Store.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password) for security.

3.4 Inserting a Micro SD Card

To expand storage, insert a Micro SD card (up to 512GB, not included) into the designated slot. Gently push the card until it clicks into place. The tablet will recognize the card, and you can then use it for storing photos, videos, music, and documents.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The PlimPad P3 uses touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

4.2 Wi-Fi Connectivity

To connect to Wi-Fi:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

4.3 Bluetooth Pairing

To pair with a Bluetooth device:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure the other Bluetooth device is in pairing mode.
4. Select the device from the list of available devices and follow any on-screen prompts to complete pairing.

4.4 Camera Usage

The tablet features an 8MP rear camera and a 2MP front camera.

1. Open the **Camera** app.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

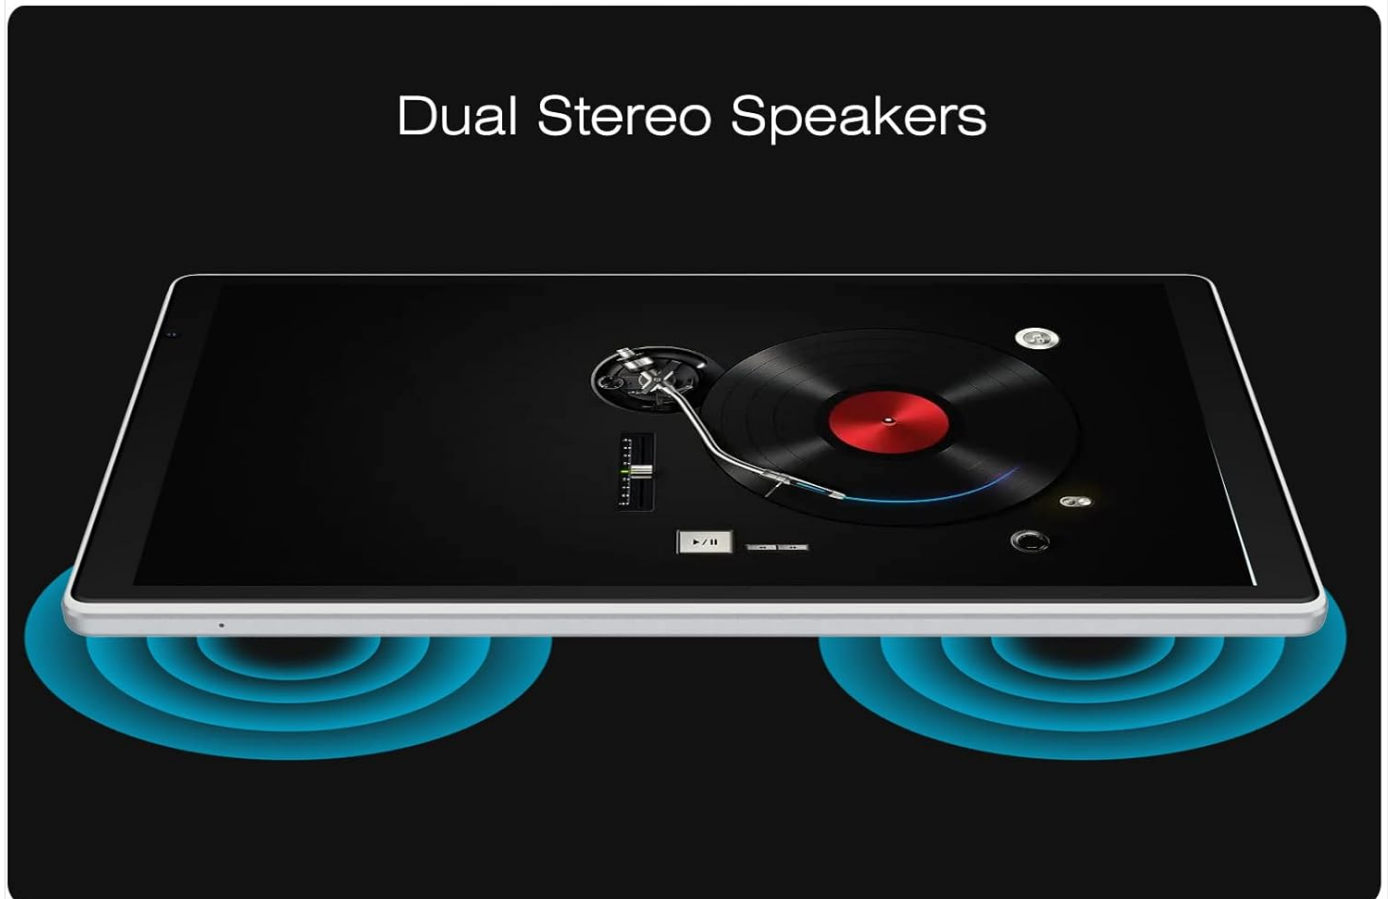


Image: Details of the tablet's 8MP rear camera and its 9mm thickness, along with a visual representation of the dual stereo speakers.

4.5 Managing Storage

To check and manage your tablet's storage:

1. Go to **Settings > Storage**.
2. Here you can see the usage of internal storage and any inserted SD card.
3. You can free up space by uninstalling unused apps, deleting old files, or moving files to the SD card.

5. MAINTENANCE

5.1 Cleaning the Device

To clean your tablet:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.

- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

5.2 Battery Care

To maximize battery life and performance:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original charger and cable provided.
- If storing the tablet for an extended period, charge it to about 50% before turning it off.

5.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security patches.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates.

6. TROUBLESHOOTING

Common Issues and Solutions:

- **Tablet does not turn on:** Connect the tablet to the original charger and charge for 2-3 hours. Most startup issues are due to a low battery.
- **Tablet is slow or unresponsive:** Close unused apps, clear cache, or restart the device. Ensure you have sufficient free storage space.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled, restart your router, or forget and reconnect to the network.
- **Apps crashing:** Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear cache/Clear data), or reinstall the app.

If you encounter issues not covered here, please refer to the Warranty and Support section for assistance.

7. SPECIFICATIONS

| Feature | Detail |
|------------------------|---|
| Brand | Plimpton |
| Model | PlimPad P3 |
| Operating System | Android 11 |
| Display Size | 10 inches |
| Display Resolution | 1280x800 Pixels (IPS HD) |
| Processor | Quad-Core (Allwinner) |
| Graphics Coprocessor | PowerVR GE8300 |
| RAM | 3GB |
| Internal Storage (ROM) | 32GB |
| Expandable Storage | Up to 512GB (Micro SD card) |
| Connectivity | Wi-Fi 6, Bluetooth 5.0 |
| Rear Camera | 8MP |
| Front Camera | 2MP |
| Battery Capacity | 6000mAh (22.8Wh) |
| Average Battery Life | 8 hours |
| Dimensions | 24.33 x 15.14 x 0.89 cm |
| Weight | 930 grams |
| Special Features | Metal cover, Stereo speakers, USB OTG support |

8. WARRANTY AND SUPPORT

The Plimpton PlimPad P3 Android Tablet comes with a **1-year warranty**. Additionally, a **30-day hassle-free return and exchange policy** is provided.

For any questions or assistance, please do not hesitate to contact our customer service. We aim to resolve your issues within 24 hours.

Customer Service Contact: Please refer to the contact information provided with your purchase documentation or visit the official Plimpton support website.

