

PRUNUS J-328

PRUNUS J-328 Portable FM Radio User Manual

MODEL: J-328

Introduction

Thank you for purchasing the PRUNUS J-328 Portable FM Radio. This compact and versatile device offers FM radio reception, TF card playback, and recording capabilities. This manual provides essential information for proper setup, operation, and maintenance of your radio. Please read it thoroughly before use.

Product Overview



Figure 1: Front view of the PRUNUS J-328 Portable FM Radio, showcasing its compact red design, digital display, and control buttons.

Included Components:

- PRUNUS J-328 Radio Unit
- Charging Cable
- User Manual (this document)

Setup

1. Charging the Battery

The radio is equipped with a built-in rechargeable battery. Connect the provided charging cable to the radio's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show

charging status. Ensure the radio is fully charged before first use for optimal battery life.

2. Inserting a TF Card

To use the recording or MP3 playback functions, insert a TF (MicroSD) card into the designated slot on the radio. Ensure the card is inserted correctly until it clicks into place.

3. Powering On/Off

Locate the ON/OFF switch on the radio. Slide the switch to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

Operating Instructions

1. FM Radio Operation

アクセスしやすい放送局



1回長押しと全部の放送局

注意:
放送局の順番を手動で変更することはできません。

周波数を直接入力する

8+7+8 87.8MHzへ
9+0+8 90.8Mhzへ
9+0+5 90.5Mhzへ
.....

Figure 2: The radio display showing FM frequency and buttons for automatic station search and direct frequency input.

- **Automatic Station Search and Save:** In FM mode, press and hold the 'SCAN' button for 3 seconds. The radio will automatically search for available FM channels, save them, and assign a channel number.
- **Direct Frequency Input:** To tune to a specific frequency, use the numeric keypad to enter the desired frequency (e.g., 905 for 90.5 MHz).
- **Switching Between Saved Stations:** Use the 'Previous' (◀◀) and 'Next' (▶▶) buttons to navigate through saved stations.
- **Volume Control:** Adjust the volume using the dedicated volume control knob or buttons (refer to device layout for exact location).
- **Headphone Use:** For private listening, plug 3.5mm headphones into the headphone jack.

2. Recording Function



Figure 3: The radio displaying the recording timer, with the 'REC' button indicating active recording.

- **FM Recording:** Ensure a TF card is inserted. While listening to an FM station, press the 'REC' button to start recording the broadcast. Press 'REC' again to stop.
- **Music Recording:** The device supports recording from external sources via AUX input or internal audio. Refer to

the device interface for specific recording options.

3. MP3 Playback (TF Card)

With a TF card containing MP3 audio files inserted, the radio can function as an MP3 player. Use the 'MODE' button to switch to TF card playback mode. Use the 'Previous' (◀◀) and 'Next' (▶▶) buttons to navigate tracks.

4. AUX Input

Connect an external audio device (e.g., smartphone, MP3 player) to the radio's AUX port using a 3.5mm audio cable. Switch the radio to AUX mode using the 'MODE' button to play audio from the connected device through the radio's speaker.

Features



Figure 4: Icons illustrating the radio's compatibility with FM radio reception, TF card playback, and AUX input for various audio sources.

- **High Sensitivity Reception:** Equipped with a DSP chip, the radio offers enhanced reception and a stable signal for

FM broadcasts (76-108MHz).

- **Clear Sound Quality:** The integrated speaker delivers clear audio. The 3.5mm headphone jack allows for stereo sound with compatible headphones.
- **Portability:** With dimensions of 47x16x92mm and a weight of approximately 70g, this pocket-sized radio is lightweight and easy to carry, ideal for various indoor and outdoor activities. A strap is included for convenience.
- **Hidden Antenna:** The radio features a portable hidden antenna for a sleek and compact design.



Figure 5: The compact size of the PRUNUS J-328 radio, shown with its dimensions and compared to a credit card for scale.

隠しアンテナ

ポータブル隠しアンテナを装備し、
シンプルでスタイリッシュ。



Figure 6: A hand holding the PRUNUS J-328 radio, illustrating its portability and the integrated strap, which also houses the hidden antenna.

Specifications

Feature	Specification
Model Number	J-328
Brand	PRUNUS
Tuner Type	FM (76-108MHz)
Display Type	LCD
Power Source	Battery Powered (Rechargeable)

Connectivity	AUX Input, TF Card Slot
Material	Acrylonitrile Butadiene Styrene (ABS)
Dimensions (L x W x H)	47mm x 16mm x 92mm
Product Weight	70 grams
Features	Portable, Rechargeable, Lightweight, FM Recording, Music Recording

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the radio's exterior. Avoid using abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the radio regularly, even if not in use for extended periods.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **No Power:** Ensure the battery is charged. Check the ON/OFF switch is in the 'ON' position.
- **Poor FM Reception:** Extend the antenna fully. Try moving to a different location. Perform an automatic station search to rescan channels.
- **No Sound:** Check the volume level. Ensure headphones are properly connected if in use, or disconnected if using the speaker.
- **TF Card Not Detected:** Ensure the TF card is inserted correctly. Try reinserting the card. Verify the card is not damaged or corrupted.
- **Recording Not Working:** Ensure a TF card is inserted and has sufficient free space.

Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact PRUNUS customer support. If you encounter any issues not covered in this manual, please reach out to the retailer or manufacturer for assistance.

© 2024 PRUNUS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question