

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HoneyGuaridan](#) /
- › [HoneyGuaridan Automatic Pet Feeder User Manual](#)

## HoneyGuaridan A56D

# HoneyGuaridan Automatic Pet Feeder User Manual

Model: A56D

## INTRODUCTION

---

Thank you for choosing the HoneyGuaridan Automatic Pet Feeder. This device is designed to provide convenient and reliable feeding for your cats and dogs, ensuring they receive their meals on schedule. It features programmable feeding times, portion control, voice recording, and dual power supply options for peace of mind. Please read this manual carefully before use to ensure proper operation and maintenance.

## SAFETY INFORMATION

---

- This appliance is for indoor use only.
- Do not immerse the main unit in water or any other liquid.
- Keep out of reach of children and pets when not in use or during assembly.
- Use only dry pet food with a kibble size between 0.19 and 0.47 inches (0.5-1.2 cm) to prevent jamming.
- Ensure the power adapter cable is not chewed by pets.
- Always unplug the feeder before cleaning.
- Do not use abrasive cleaners or harsh chemicals.

## PACKAGE CONTENTS

---

- Automatic Pet Feeder Main Unit
- Food Container (6L capacity)
- Lid with Desiccant Compartment
- Food Dispenser Base
- Two-way Food Splitter
- 2 Stainless Steel Bowls
- Power Adapter
- User Manual

## PRODUCT OVERVIEW

Familiarize yourself with the components of your new pet feeder:



HoneyGuardan Automatic Pet Feeder with two stainless steel bowls, filled with dry pet food.

- **Food Container:** Transparent container for storing dry pet food.
- **Control Panel:** Digital display and buttons for programming and operation.
- **Dispenser Outlet:** Where food is dispensed.
- **Two-way Splitter:** Divides food into two bowls (removable for single bowl use).

- **Stainless Steel Bowls:** Removable bowls for pet food.
- **Power Port:** For connecting the power adapter.
- **Battery Compartment:** Located at the bottom for backup power.

## SETUP

---

### 1. Unpacking and Assembly

1. Remove all components from the packaging.
2. Place the main unit on a flat, stable surface.
3. Attach the food container to the main unit, ensuring it is securely seated.
4. Insert the two-way food splitter into the dispenser outlet if you intend to use two bowls. If using one bowl, omit this step.
5. Place the stainless steel bowls under the dispenser outlets.

# 6L Large Capacity & 2 in 1 Use

① ≈2.2kg Dry Food  
(varies by kibble size)



Cats  
28 Days



Small &  
Medium Dogs  
12 Days

② The entire food container  
can be easily removed for  
regular cleaning.

③ Super Easy to be Switched  
Between 2 Bowls and 1 Bowl



**Take down the two-way splitter, it becomes a usual feeder for one pet.**

Visual representation of the 6L capacity and the feeder's dimensions. Shows how the food container can be removed for cleaning and how to switch between two bowls and one bowl setup by removing the two-way splitter.

## 2. Power Supply

The feeder supports dual power supply for continuous operation.

- **Adapter Power:** Connect the power adapter to the feeder's power port and plug it into a wall outlet.
- **Battery Backup:** For backup power during outages, install 3 x D-size batteries (not included) into the battery compartment at the bottom of the unit. It is recommended to use both power sources simultaneously.

# Dual Power Supply

Never miss a meal even during unexpected power outage

 D Battery ×3 (Not Included)

 Power Adapter



Diagram showing the dual power options: D batteries (not included) and power adapter, ensuring continuous operation even during power outages.

### 3. Filling the Food Container

1. Open the lid of the food container.
2. Pour dry pet food into the container. Ensure the kibble size is appropriate (0.19-0.47 inches).
3. Place the desiccant packet into the designated compartment on the underside of the lid to maintain food freshness.

4. Close the lid securely to keep food fresh and prevent pets from accessing it.

# FRESHNESS IN EVERY BITE



With desiccant



No desiccant





Image showing the desiccant compartment on the lid, designed to keep food fresh and dry. Comparison of kibble with and without desiccant.

## OPERATING INSTRUCTIONS

---

### 1. Control Panel Overview

The control panel features a digital display and several buttons for programming:

- **MENU Button:** Enters programming mode and confirms settings.
- **UP/DOWN Buttons:** Adjust values (time, portions, meals).
- **RECORD Button:** Records or plays voice messages.
- **MANUAL FEED Button:** Dispenses food manually.
- **LOCK Button:** Prevents accidental button presses.

### 2. Setting the Current Time

1. Press and hold the **MENU** button until the hour digit flashes.
2. Use the **UP/DOWN** buttons to set the current hour.
3. Press **MENU** to confirm and move to the minute setting.
4. Use the **UP/DOWN** buttons to set the current minute.
5. Press **MENU** to save the time setting.

### 3. Programming Feeding Schedule

You can program up to 6 meals per day.

# Automaticly Feed Your Pets on Schedule



Timed  
Feeding



1-6 Meals  
per Day



0-24 Porti-  
ons per Meal



1 Portion  
≈ 6g



Diagram illustrating timed feeding options: 1-6 meals per day, 0-24 portions per meal, with 1 portion approximately 6g. A cat is shown eating from the feeder.

1. Press the **MENU** button repeatedly until 'Meal 1' appears on the display.
2. Use **UP/DOWN** to set the desired feeding time for Meal 1 (hour then minute). Press **MENU** after each setting.
3. Next, set the number of portions for Meal 1 (1-24 portions). One portion is approximately 5-6 grams, depending on kibble size. Use **UP/DOWN** and press **MENU**.


- Repeat steps 2-3 for 'Meal 2' through 'Meal 6' as needed. If a meal is not set, it will not dispense food.
- After setting all desired meals, press **MENU** to exit programming mode.

#### 4. Voice Recording

Record a 10-second voice message to call your pets at meal times.

## Customized 10s Meal Call

Record Your Personal Voice & Call You Pets Come to Eat  
Disable Speaker: Press the microphone button 2 times

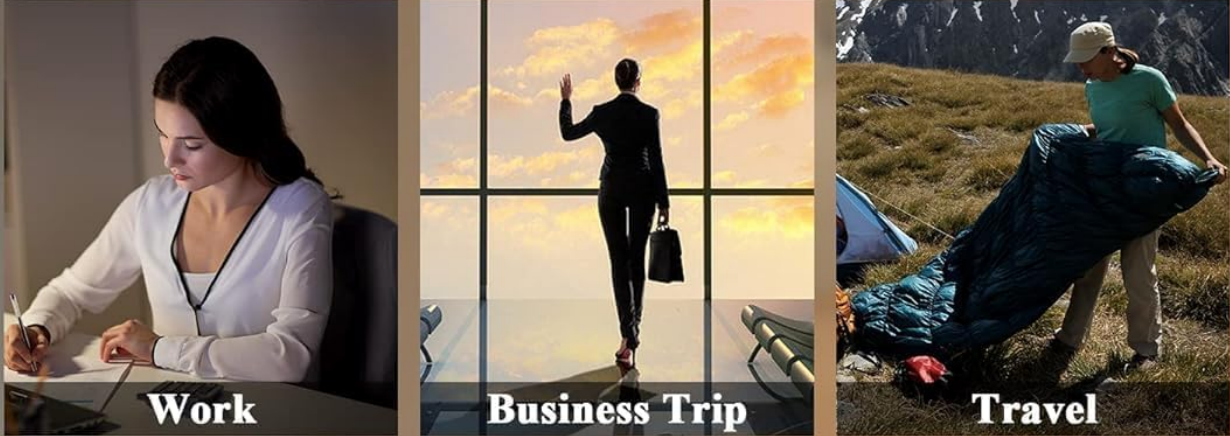

**Work** **Business Trip** **Travel**

🔊/🔇 : Baby, time to eat!




Illustration of the voice recording feature, allowing users to record a 10-second message to call pets for meals. Shows scenarios like

working, business trips, and travel where this feature is useful. A cat is shown near the feeder.

1. Press and hold the **RECORD** button until you hear a beep.
2. Speak your message into the microphone (located near the control panel) within 10 seconds.
3. Release the **RECORD** button to save the message. The message will play automatically during each scheduled feeding.
4. To disable the voice message, press the **RECORD** button twice quickly. Repeat to re-enable.

## 5. Manual Feeding

To dispense food instantly, press the **MANUAL FEED** button. Each press will dispense one portion of food.

## MAINTENANCE

---

### 1. Cleaning

Regular cleaning ensures hygiene and proper functioning.

1. Unplug the feeder from the power outlet and remove any batteries.
2. Remove the food container, lid, two-way splitter, and stainless steel bowls.
3. These removable parts are washable. They can be placed on the top rack of a dishwasher or hand-washed with mild soap and water.
4. The main unit (base with control panel) should **not** be immersed in water. Wipe it clean with a soft, damp cloth.
5. Ensure all parts are completely dry before reassembling and refilling with food.

### 2. Desiccant Replacement

The desiccant packet helps keep food fresh and dry. Replace it every 1-2 months, or as needed, depending on humidity levels.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food container empty; Kibble jammed; Power issue; Incorrect schedule.	Refill food container; Check kibble size and clear any blockages; Ensure power adapter is connected or batteries are installed; Verify feeding schedule settings.
Display is off.	No power.	Check power adapter connection; Ensure batteries are installed and have charge.
Voice message not playing.	Message not recorded; Feature disabled.	Record a new voice message; Press the RECORD button twice to re-enable.
Food gets stuck or dispenses unevenly.	Kibble size too large/small; Food too moist; Dispenser dirty.	Use recommended kibble size; Ensure food is dry and use desiccant; Clean the dispenser outlet.

## SPECIFICATIONS

---

Feature	Specification
---------	---------------

Feature	Specification
Model Number	A56D
Capacity	6 Liters (approx. 2.2 kg dry food)
Product Dimensions (L x W x H)	30 x 19 x 34.8 cm
Weight	2.06 kg
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Black
Power Supply	Power Adapter (included), 3 x D-size Batteries (not included)
Meals per Day	1-6 meals
Portions per Meal	0-24 portions (approx. 5-6g per portion)
Voice Recording	10 seconds
Recommended Kibble Size	0.19 - 0.47 inches (0.5 - 1.2 cm)
Care Instructions	Removable parts washable; Main unit wipe clean only.