

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Anker](#) /

> [Anker Power Bank Powercore 10000mAh 22.5W Portable Charger A1388 User Manual](#)

Anker A1388

Anker Power Bank Powercore 10000mAh 22.5W Portable Charger

Model: A1388 - User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Anker Power Bank Powercore 10000mAh 22.5W Portable Charger (Model A1388). Please read it thoroughly before using the product and retain it for future reference.



Image: The Anker Power Bank A1388, a black portable charger with a digital display showing "100%" charge, and a built-in lanyard USB-C cable. The Anker logo is visible on the front.

PACKAGE CONTENTS

Ensure all items are present in your package:

- Anker Power Bank (10,000mAh, 22.5W)
- USB-C Lanyard Cable (built-in)
- Instruction Manual (this document)



Image: A graphic illustrating key features of the Anker Power Bank. It highlights the built-in lanyard charging cable (PD 60W, 25 cm), PD 22.5W output, 10000mAh capacity, and the LED display. It also mentions Power Delivery 3.0 and Quick Charge 3.0 compatibility.

PRODUCT OVERVIEW

Familiarize yourself with the components of your power bank:

- **LED Digital Display:** Shows the remaining battery percentage.
- **USB-C Port:** Functions as both input (for recharging the power bank) and output (for charging devices).
- **USB-A Port:** Functions as an output for charging devices.
- **Built-in Lanyard USB-C Cable:** Provides convenient charging and carrying.
- **Power Button:** Activates the power bank and display.

SETUP

Initial Charging of the Power Bank

Before first use, fully charge your Anker Power Bank. This ensures optimal performance and battery longevity.

1. Connect the built-in USB-C lanyard cable or a separate USB-C cable to the power bank's USB-C port.

2. Connect the other end of the cable to a compatible USB wall charger (not included).
3. The LED digital display will show the charging progress. A full recharge typically takes approximately 3.5 hours.



Image: A graphic indicating "Fast Recharge" with the text "Fully recharged in 3.5 hrs" next to an image of the Anker Power Bank with its LED display showing "100%".

OPERATING INSTRUCTIONS

Charging Devices

The power bank can charge various devices, including smartphones, tablets, and other USB-powered gadgets.

1. Connect your device to the power bank using the built-in USB-C lanyard cable or a separate USB-A to device cable.
2. The power bank will automatically begin charging. If not, press the power button once to activate charging.
3. The LED display will show the power bank's remaining battery level.

PD 20W Fast Charge for iPhone

Charge to 55% in 30 Mins for iPhone 15



Image: A graphic demonstrating PD 20W fast charging for iPhone, showing an iPhone 15 charging to 55% in 30 minutes using the Anker Power Bank.

22.5W Max SCP Fast Charge

Charge to 43% in 30 Mins for Huawei Mate 60 Pro



Image: A graphic illustrating 22.5W Max SCP fast charging, showing a Huawei Mate 60 Pro charging to 43% in 30 minutes using the Anker Power Bank.

Simultaneous Charging

You can charge two devices concurrently using the USB-A and USB-C output ports.

Charge 2-Device Simultaneously

Efficient charging, save time



Image: A graphic showing the Anker Power Bank simultaneously charging a smartphone and a tablet. The image highlights the USB-A output (22.5W) and USB-C input/output (20W) ports.

Trickle-Charging Mode

For low-power devices such as earbuds or smartwatches, activate trickle-charging mode to prevent overcharging and ensure stable power delivery.

1. Press and hold the power button for 2 seconds to enter trickle-charging mode. The LED display will show a specific indicator (e.g., a green light or a slow-blinking number, refer to product for exact indicator).
2. Connect your low-power device.
3. To exit trickle-charging mode, press the power button once.

Checking Battery Level

Press the power button once to view the remaining battery percentage on the LED digital display.

SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to your device:

- Do not expose the power bank to extreme temperatures (hot or cold), direct sunlight, or humid environments.

- Avoid dropping, puncturing, or disassembling the device.
- Keep out of reach of children.
- Use only original or certified cables for charging and recharging.
- Do not use if the power bank is damaged or swollen.
- Dispose of the power bank according to local regulations.
- The power bank complies with airplane standards for carry-on luggage.

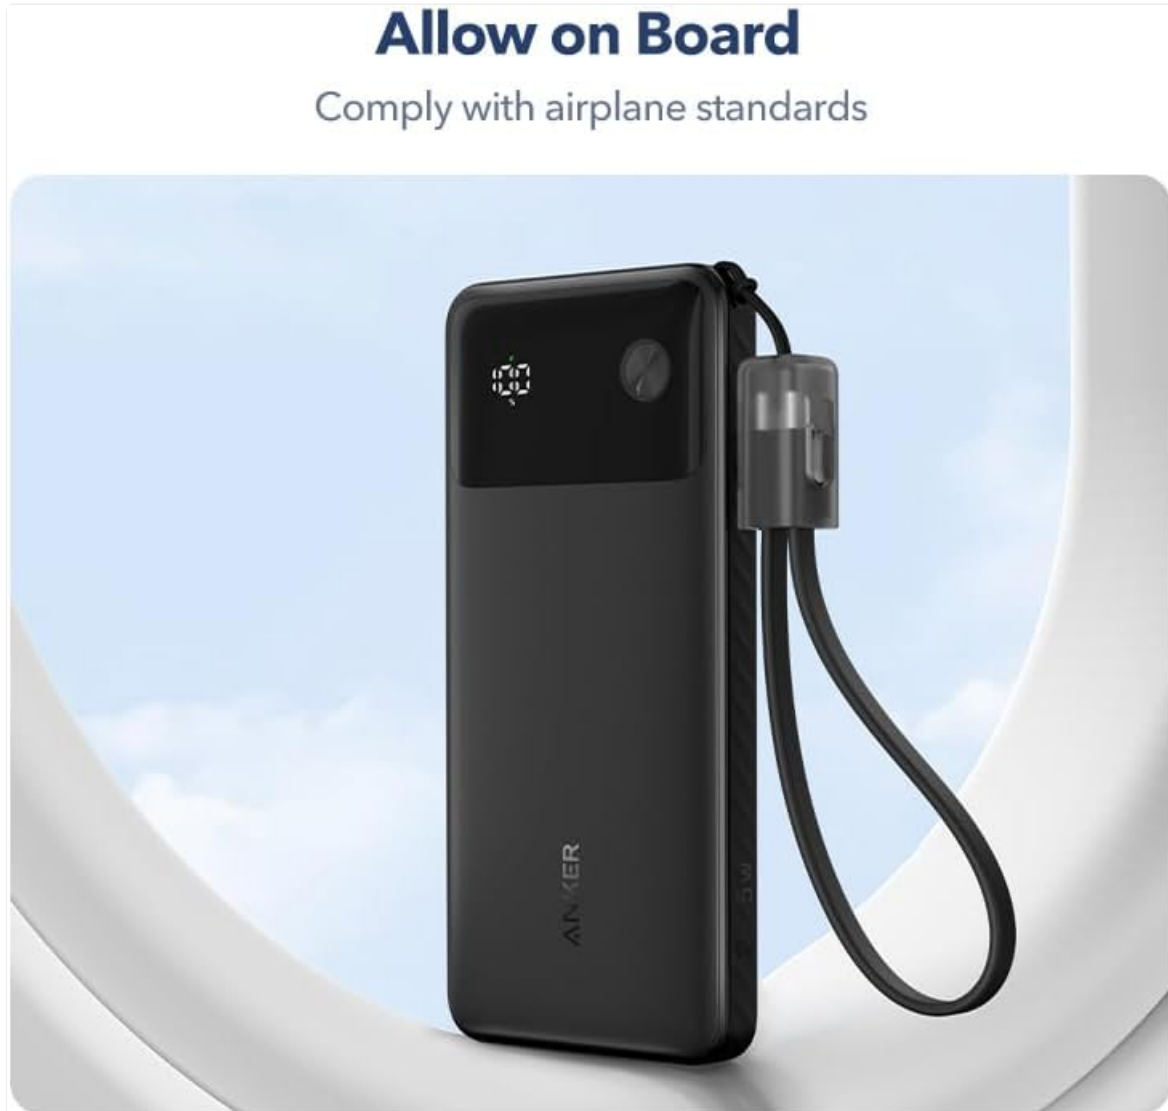


Image: A graphic showing the Anker Power Bank in an airplane cabin setting, with the text "Allow on Board" and "Comply with airplane standards", indicating its suitability for air travel.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use liquid cleaners or aerosols.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and corrosive materials. For long-term storage, it is recommended to charge the power bank to approximately 50-75% every 3-6 months.

TROUBLESHOOTING

Power bank not charging devices:

- Ensure the power bank is sufficiently charged.

- Press the power button to activate output.
- Check if the charging cable is securely connected to both the power bank and the device.
- Try a different charging cable or port.

Power bank not recharging:

- Ensure the charging cable is securely connected to the power bank's USB-C input port and the wall charger.
- Verify that the wall charger is functioning correctly and connected to a power source.
- Try a different USB-C cable or wall charger.

Slow charging:

- Ensure you are using a fast-charging compatible cable and wall adapter for optimal speed.
- Charging multiple devices simultaneously may reduce individual charging speeds.

SPECIFICATIONS

Model Number	A1388
Battery Capacity	10,000mAh
USB-C Input	20W Max
USB-C Output	20W Max
USB-A Output	22.5W Max
Total Output	22.5W Max
Dimensions	11.43 x 7.11 x 3.05 cm
Weight	273 g
Special Features	Digital Display, Over Charging Protection, Fast Charging, Built-In Cable
Connector Type	USB Type A, USB Type C

Universal Compatibility

For Phone



iPhone Series



Xiaomi



Huawei



vivo



oppo



Samsung

For iPad / Laptop



iPad series



Macbook series

Small Current Device



Airpods



Speaker



Watch

Image: A graphic illustrating the universal compatibility of the Anker Power Bank with various devices, including iPhone series, Xiaomi, Huawei, vivo, oppo, Samsung phones, iPad series, Macbook series, Airpods, speakers, and smartwatches.

WARRANTY AND CUSTOMER SUPPORT

Anker provides a limited warranty for this product. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Anker website. If you encounter any issues or have questions regarding your Anker Power Bank, please contact Anker customer support for assistance.

You can typically find contact information for customer support on the Anker website or through the retailer where you purchased the product.