

[Manuals.plus](#) /

› [ZURU](#) /

› ZURU MAX-Dino Adventure Playset Instruction Manual

ZURU 83160-V2

ZURU MAX-Dino Adventure Playset Instruction Manual

Model: 83160-V2

INTRODUCTION

Welcome to the exciting world of the ZURU MAX-Dino Adventure Playset! This comprehensive set, featuring 552 pieces, allows you to build and create thrilling dinosaur-themed adventures. Assemble your vehicles, dinosaurs, and accessories to embark on epic missions and imaginative play.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Always supervise young children during play. Ensure all small pieces are kept away from infants and toddlers to prevent accidental ingestion. Inspect all components regularly for damage and discontinue use if any parts are broken or pose a hazard.

WHAT'S IN THE BOX

Your ZURU MAX-Dino Adventure Playset includes the following components:

- Building bricks for assembling a large off-road vehicle.
- Building bricks for assembling a helicopter.
- Building bricks for assembling a motorcycle.
- Large red T-Rex figure.
- Small blue dinosaur figure.
- Tree accessory.
- Radar dish accessory.
- Instruction manual (this document).



Image: Overview of the ZURU MAX-Dino Adventure Playset components and packaging.



Image: Rear view of the product box, illustrating the assembled models and their features.

SETUP AND ASSEMBLY

Follow these steps to assemble your ZURU MAX-Dino Adventure Playset:

1. **Unpack Components:** Carefully remove all pieces from the box and sort them by type or color to facilitate assembly.
2. **Consult Building Instructions:** Refer to the separate, detailed building instruction booklet included in your box for step-by-step guidance on assembling the off-road vehicle, helicopter, and motorcycle. Each model has its own specific assembly sequence.
3. **Assemble Figures and Accessories:** The dinosaur figures and tree accessory typically come pre-assembled or require minimal attachment of limbs or bases.
4. **Verify All Parts:** Before beginning, ensure all 552 pieces are present by cross-referencing with the parts list in the building instruction booklet.



Image: Assembled dinosaur figures and the front section of the off-road vehicle.

OPERATING THE PLAYSET

Once assembled, the ZURU MAX-Dino Adventure Playset is ready for imaginative play. Here are some tips for operation:

- **Vehicle Play:** The off-road vehicle, helicopter, and motorcycle are designed for free-rolling play. Push them along flat surfaces to simulate movement. The helicopter blades can be manually spun.
- **Dinosaur Interaction:** Position the dinosaur figures in various poses to create dynamic scenes. They can interact with the vehicles and accessories.
- **Scene Building:** Use the tree and radar dish accessories to enhance your play environment, creating a realistic dinosaur habitat or research outpost.
- **Creative Play:** Encourage open-ended play by combining elements of the playset in different scenarios. The set is compatible with major brick brands, allowing for expanded creative possibilities.



Image: Children engaging in imaginative play with the assembled playset.



Image: A child demonstrating interaction with the helicopter component of the playset.

MAINTENANCE

To ensure the longevity and cleanliness of your ZURU MAX-Dino Adventure Playset, follow these maintenance guidelines:

- **Cleaning:** Wipe down plastic components with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by thorough rinsing and air drying. Do not submerge electronic components (if any) in water.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation and color fading.
- **Inspection:** Periodically inspect all pieces for wear and tear, especially small connectors or moving parts. Replace any broken or damaged pieces if possible, or discontinue use if they pose a safety risk.
- **Disassembly:** If disassembling for storage, keep all small pieces together in a sealed container to prevent loss.

TROUBLESHOOTING

If you encounter any issues with your ZURU MAX-Dino Adventure Playset, consider the following:

- **Missing Pieces:** If you believe pieces are missing upon opening, double-check the packaging and sorting area. Refer to the parts list in the building instruction booklet. If pieces are genuinely missing, contact ZURU customer support.
- **Difficulty Assembling:** Ensure you are following the building instructions precisely. Sometimes, a piece may appear similar to another but has a slightly different connection point. Try re-orienting the piece or checking the next step in the manual.
- **Loose Connections:** If assembled parts feel loose, ensure all bricks are firmly pressed together. Some connections may require more force to snap into place.
- **Damaged Parts:** If any part is damaged during assembly or play, discontinue use of that specific part. Contact ZURU customer support for possible replacements.

SPECIFICATIONS

Feature	Detail
Product Name	ZURU MAX-Dino Adventure US-Series 1-(552 pcs) Box PLAYSET Assorted
Brand	ZURU
Model Number	83160-V2
Number of Pieces	552
Product Dimensions	2.99 x 12.99 x 19.02 inches
Item Weight	1.4 pounds
Recommended Age	3 years and up
Release Date	January 1, 2024

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this product at this time.

WARRANTY AND SUPPORT

For information regarding product warranty, replacement parts, or further support, please visit the official ZURU website or contact their customer service department. Specific warranty terms and contact details are typically provided on the manufacturer's packaging or official website.

You can often find more information by visiting the [ZURU Store on Amazon](#).