

Qoosea QLQKC906DVW

Qoosea Multi-Functional DVD CD Player User Manual

Model: QLQKC906DVW

1. INTRODUCTION

Thank you for purchasing the Qoosea Multi-Functional DVD CD Player. This device combines a DVD player, CD player, Bluetooth speaker, FM radio, USB media player, and alarm clock into a single compact unit. It supports various media formats and offers multiple connectivity options for an enhanced entertainment experience. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's lifespan.

2. SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the provided power adapter or one with identical specifications.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the device away from strong magnetic fields.
- When cleaning, use a soft, dry cloth. Do not use liquid or aerosol cleaners.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Qoosea Multi-Functional DVD CD Player
- Remote Control
- HDMI Cable
- AV Cable
- Power Adapter
- User Manual

4. PRODUCT OVERVIEW

The Qoosea Multi-Functional DVD CD Player is designed for versatile media playback. It features a compact desktop design with integrated speakers and various input/output ports.

Multifunctional Desk DVD CD

Player with Bluetooth



Image 1: Overview of the Qoosea Multi-Functional DVD CD Player and its key features.

4.1 Front Panel and Controls

The front panel includes the disc tray, display screen, and essential control buttons such as Power, Play/Pause, Stop, Skip, and Mode selection.

4.2 Rear Panel and Ports

The rear panel houses the connectivity ports for external devices.

Built-in HIFI Loud Speaker



Image 2: Detailed view of the player's connectivity ports and built-in speakers.

- **HDMI Output:** Connects to a TV or projector for high-definition video and audio.
- **AV Output:** Connects to older TVs or audio systems using the included AV cable.
- **USB Port:** For playing media files from a USB flash drive.
- **AUX Input/Output:** 3.5mm jack for connecting external audio sources or outputting audio to headphones/speakers.
- **DC Input:** For connecting the power adapter.

5. SETUP

5.1 Power Connection

1. Connect the power adapter to the DC input port on the back of the player.
2. Plug the power adapter into a standard wall outlet.

5.2 Connecting to a TV or Projector

You can connect the DVD CD player to a display device using either an HDMI cable or an AV cable.

EASY TO CONNECT

HDMI CABLE INCLUDED



Image 3: Connecting the player to a TV, projector, or PC monitor using the HDMI cable.

5.2.1 HDMI Connection (Recommended for HD Quality)

1. Connect one end of the HDMI cable to the HDMI output port on the player.
2. Connect the other end of the HDMI cable to an HDMI input port on your TV or projector.
3. Select the corresponding HDMI input on your TV/projector using its remote control.

5.2.2 AV Connection

1. Connect the AV cable to the AV output ports on the player (typically yellow for video, red/white for audio).
2. Connect the other end of the AV cable to the corresponding AV input ports on your TV.
3. Select the AV input on your TV using its remote control.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

- **Power On/Off:** Press the Power button on the unit or remote control.
- **Mode Selection:** Press the 'Mode' button to switch between DVD/CD, Bluetooth, FM Radio, and USB modes.
- **Volume Control:** Use the Volume +/- buttons on the unit or remote.

6.2 DVD/CD Playback

This player supports DVD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3, and JPEG formats, and is region-free.



Image 4: The player supports all regions and multiple formats for DVD and CD playback.

1. Ensure the player is in DVD/CD mode.
2. Gently insert a DVD or CD into the disc slot with the label side facing up. The player will automatically load the disc.
3. Playback should begin automatically. If not, press the Play button on the remote or unit.
4. Use the remote control for functions like Play, Pause, Stop, Skip, Fast Forward, Rewind, and Menu navigation.

6.3 Bluetooth Function

The player features Bluetooth 5.0 for both transmitting and receiving audio.

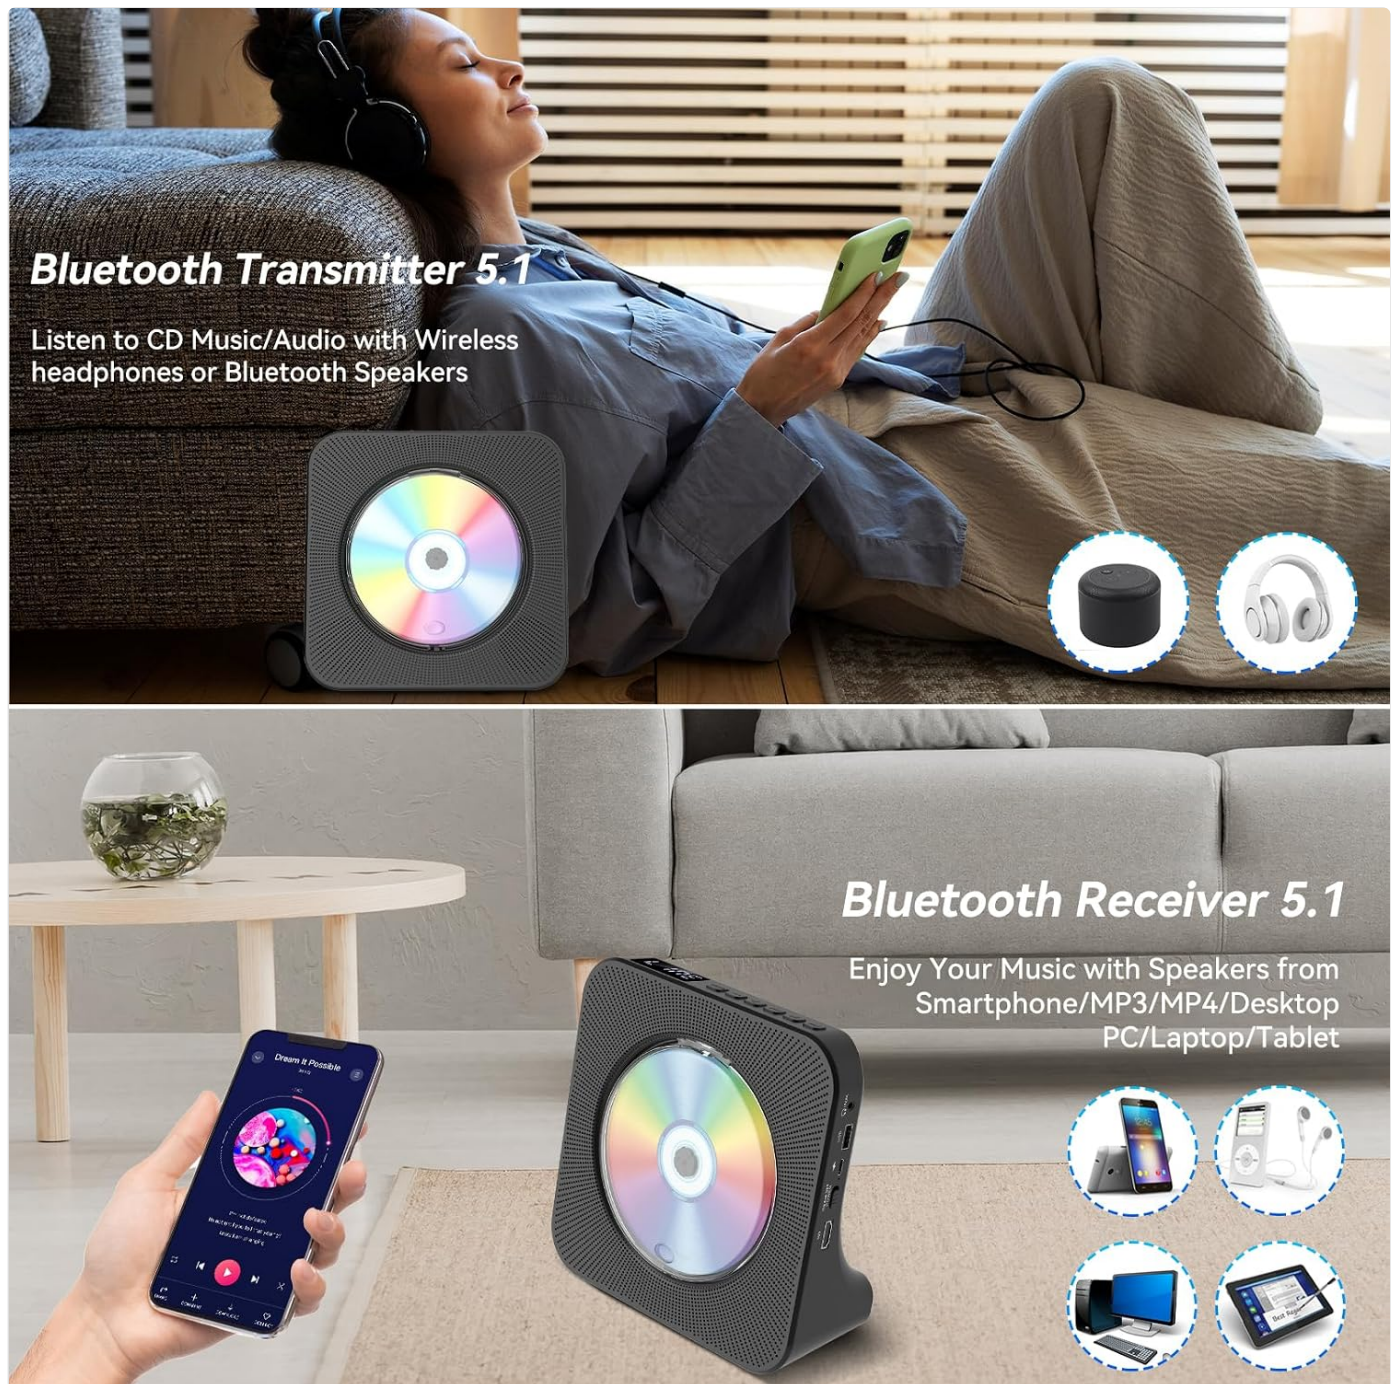


Image 5: The player functions as both a Bluetooth transmitter and receiver.

6.3.1 Bluetooth Receiver Mode (Playing audio from phone/laptop)

1. Switch the player to Bluetooth mode. The display will show 'BT'.
2. On your smartphone or other Bluetooth device, search for available devices and select 'Qoosea Player'.
3. Once paired, audio from your device will play through the player's speakers.

6.3.2 Bluetooth Transmitter Mode (Playing player audio to Bluetooth headphones/speakers)

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. Switch the player to Bluetooth mode.
3. Press and hold the Bluetooth pairing button on the player (if available, refer to specific button layout) or use the remote to initiate pairing.
4. The player will search for and connect to the nearest Bluetooth audio device.

6.4 FM Radio



Image 6: The player can be used as a CD player with remote control and as an FM radio.

1. Switch the player to FM Radio mode.
2. Press the 'Scan' button on the remote to automatically search and save available FM stations.
3. Use the 'Previous/Next' buttons to cycle through saved stations.
4. For manual tuning, use the appropriate buttons on the remote (refer to remote layout).

6.5 USB Playback

1. Insert a USB flash drive into the USB port on the player.
2. Switch the player to USB mode.
3. The player will automatically detect and display the media files. Use the remote to navigate and select files for playback.
4. Supported file formats include MP3, AVI, and JPEG.

6.6 Alarm Clock

The player includes an alarm clock function. Refer to the specific instructions in the remote control section of the full manual for setting the time and alarm.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the exterior of the player. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Clean discs with a soft, dry cloth from the center outwards. Avoid touching the playback surface.
- **Dust Cover:** Keep the protective dust cover closed when not in use to prevent dust accumulation in the disc slot.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Check power connections. Try a different outlet.
No video output	Incorrect input selected on TV; loose HDMI/AV cable.	Ensure correct TV input is selected. Check cable connections.
No audio	Volume too low; incorrect audio output settings; loose audio cables.	Increase volume. Check audio settings on player and TV. Ensure audio cables are secure.
Disc not playing	Disc is dirty, scratched, or incompatible format.	Clean the disc. Try a different disc. Ensure disc format is supported.
Bluetooth pairing issues	Device too far; not in pairing mode; interference.	Ensure devices are close. Put both devices in pairing mode. Restart devices.

9. SPECIFICATIONS

- **Brand:** Qoosea
- **Model Name:** QLQKC906DVW
- **Media Type:** DVD, CD, VCD, CD-G
- **Special Feature:** Region Free
- **Connectivity Technology:** Bluetooth 5.0, HDMI, USB, AV
- **Audio Output Mode:** Stereo
- **Supported Audio Format:** MP3
- **Supported File Formats:** MP3, AVI, JPEG
- **Video Output Resolution:** 1080p pixels
- **Total Number of HDMI Ports:** 1
- **Included Components:** HDMI Cable, AV Cable, Remote Control

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Qoosea customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question