

[Manuals.plus](#) /

> [SUPER LINT](#) /

> SUPER LINT Electric Fabric Shaver Electrostatic Brush M5 User Manual

SUPER LINT SL-1

SUPER LINT Electric Fabric Shaver Electrostatic Brush M5 User Manual

Model: SL-1

INTRODUCTION

This manual provides instructions for the safe and effective use of your SUPER LINT Electric Fabric Shaver Electrostatic Brush. Please read this manual thoroughly before operation and retain it for future reference.

PRODUCT FEATURES

- **2-in-1 Design:** Combines a fabric shaver blade with an electrostatic brush to remove pilling and reduce static electricity.
- **LED Digital Display:** Clearly shows remaining battery level (0-100) and selected speed gear.
- **3 Speed Settings:** Adjustable speeds for various fabric types and pilling levels.
- **Efficient and Durable:** Equipped with rust-proof 6-leaf blades and up to 8500 RPM rotation for effective lint removal.
- **Triple-Hole Mesh Cover:** Features a 70mm diameter micro-arc mesh cover with three hole sizes to capture different sized lint balls.
- **Double Safety Protection:** Automatic power-off when the mesh cover or blade is not properly installed, protecting both the user and the fabric.
- **Rechargeable:** Convenient USB charging (5V/1A) compatible with laptops, desktops, power banks, and charger adapters.

PACKAGE CONTENTS

Verify that all items are present in your package:

- SUPER LINT Electric Fabric Shaver (Main Unit)
- Electrostatic Brush (integrated into handle)

- USB Charging Cable
- Cleaning Brush
- Replacement Blades (2 units)
- Travel Bag



Image: Contents of the SUPER LINT Electric Fabric Shaver package.

SETUP

Charging the Device

Before first use, fully charge the fabric shaver. The LED display will show the battery level.

1. Locate the USB charging port on the device.
2. Connect the provided USB charging cable to the device and a compatible power source (e.g., laptop, power bank, 5V/1A charger adapter).

3. The LED display will show the charging progress. A full charge is indicated by '100' on the display.



Image: USB charging of the SUPER LINT Electric Fabric Shaver.

Accessing the Electrostatic Brush

The electrostatic brush is conveniently stored within the handle of the shaver.

1. Gently pull off the tail cover at the bottom of the handle.
2. Slide out the electrostatic brush from its compartment.
3. After use, fold the brush and slide it back into the handle, then replace the tail cover.

Accessory Storage Bin

Come with a clothes brush, clean brush and usb cable



Image: Accessing the electrostatic brush from the shaver's handle.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment

The device features a single button for power control and speed selection.

1. Press the power button once to turn on the device at Speed 1.
2. Press the button again to cycle through Speed 2, then Speed 3.
3. Press the button a fourth time to turn off the device.



Image: Fabric shaver in operation, demonstrating speed settings.

Using the Fabric Shaver

For optimal results and to prevent damage, follow these guidelines:

- Lay the fabric flat on a hard, smooth surface, ensuring there are no wrinkles.
- Select the appropriate speed setting for your fabric type. Speed 1 is suitable for protective clothing, socks, and leggings. Speed 2 is for delicate repairs on sweaters and woolen coats. Speed 3 is for professional and efficient removal on plush toys and cloth furniture.
- Gently glide the shaver over the pilled areas. Avoid pressing too hard to prevent fabric damage.
- After shaving, use the electrostatic brush to remove any remaining static electricity from the fabric.

Your browser does not support the video tag.

Video: Demonstration of the Electric Lint Remover in action on various fabrics.

MAINTENANCE

Cleaning the Lint Collector

Regular cleaning ensures optimal performance.

1. Ensure the device is turned off.
2. Unscrew the transparent mesh cover by turning it counter-clockwise.
3. Carefully remove accumulated lint from the collection bin.
4. Use the small cleaning brush to remove any lint stuck around the blades or inside the mesh cover.
5. Reattach the mesh cover by screwing it clockwise until secure.



Image: Internal structure of the fabric shaver, showing blades and safety features.

Blade Replacement

Replace blades when they become dull for continued efficiency.

1. Turn off the device and unscrew the mesh cover.
2. Gently pull the old blade assembly upwards to remove it.
3. Align a new blade assembly with the central shaft and press it down until it clicks into place.
4. Reattach the mesh cover securely.

TROUBLESHOOTING

- **Device not turning on:** Ensure the mesh cover is securely attached. The device has a safety feature that prevents operation if the cover is loose or removed. Check battery level on the LED display and recharge if necessary.
- **Poor lint removal:** The blades may be dull. Replace them with new ones. Ensure the fabric is laid flat and taut.
- **Device stops unexpectedly:** Check if the mesh cover is loose or if the battery is low.

SPECIFICATIONS

Model Number	SL-1
Product Dimensions	4.33 x 0.79 x 4.72 inches
Item Weight	12.3 ounces
Battery Type	1 Lithium Ion battery (included)
Charging Input	5V/1A (USB)
Blade Type	6-leaf, rust-proof
Mesh Cover Diameter	70mm
Material	Stainless Steel (blades), Alloy Steel (handle)

WARRANTY AND SUPPORT

SUPER LINT offers a 100% satisfaction guarantee. If there is any issue with the quality of your fabric shaver, please contact customer support for a free reshipment or refund.

For further assistance or inquiries, please refer to the contact information provided with your product packaging or visit the official SUPER LINT store on Amazon.