



Manuals.plus /

› LAPOOH /

› LAPOOH 4-Drawer Chest Instruction Manual, Oak Finish, Model BDGOITZJ242544ITWHHH

LAPOOH BDGOITZJ242544ITWHHH

LAPOOH 4-Drawer Chest Instruction Manual

Model: BDGOITZJ242544ITWHHH

1. INTRODUCTION

Thank you for purchasing the LAPOOH 4-Drawer Chest. This timeless piece is designed to provide ample storage and complement various rooms such as your living room, dining room, or hallway. Crafted from high-quality engineered wood and MDF, this cabinet is durable and easy to maintain. This manual provides essential information for safe assembly, operation, and care of your new furniture.



Image 1: Front view of the LAPOOH 4-Drawer Chest.

2. SAFETY INFORMATION

WARNING: To prevent tipping, this product must be used with the wall attachment device provided. Furniture tip-over can cause serious or fatal crushing injuries. Always secure the chest to the wall according to the assembly instructions.



Image 2: Anti-tip warning symbol.

- Do not allow children to climb on drawers or shelves.
- Place heavier items in the lowest drawers.
- Do not open more than one drawer at a time.
- Ensure the chest is placed on a level surface.

3. PACKAGE CONTENTS

Before beginning assembly, please check that all parts and accessories are present and undamaged. The delivery includes all necessary assembly accessories.

(Specific component list not provided, please refer to the separate parts list included in your package.)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of this chest is designed to be straightforward. We recommend two people for assembly to ensure stability and ease of handling. Please follow the detailed assembly instructions provided in the separate assembly guide included with your package.

General Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts using the provided parts list.
3. Assemble the main frame of the chest according to the diagrams.
4. Install the drawer slides onto the chest frame and the drawer sides.
5. Assemble the four drawers, ensuring the bottoms are securely in place.
6. Insert the assembled drawers into the chest frame.
7. Attach the handles to the drawers.
8. **Crucially, secure the chest to the wall using the provided anti-tip kit.**



Image 3: Detail of a drawer slide.

5. OPERATING INSTRUCTIONS

The LAPOOH 4-Drawer Chest is designed for easy and smooth operation. Each of the four drawers features handles for convenient opening and closing.

- To open a drawer, gently pull the handle outwards.
- To close a drawer, push it inwards until it is fully seated in the frame.
- Avoid forcing drawers open or closed. If a drawer is stiff, check for obstructions or ensure it is properly aligned on its slides.

- Distribute weight evenly within the drawers to prevent strain on the slides and maintain stability.



Image 4: Chest with one drawer partially open.

6. MAINTENANCE

To ensure the longevity and appearance of your LAPOOH chest, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Clean up spills immediately with a dry cloth to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood.
- **Hardware:** Periodically check and tighten any loose screws or fittings to ensure structural integrity.

7. TROUBLESHOOTING

If you encounter any issues with your chest, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drawer is stiff or difficult to open/close.	Obstruction in the drawer slide. Drawer not aligned correctly. Loose screws on drawer slides.	Remove any items blocking the slide. Re-align the drawer on its runners. Tighten all screws on the drawer slides and frame.
Chest feels wobbly or unstable.	Not on a level surface. Loose assembly screws. Anti-tip device not installed or secured.	Move to a level surface or use shims. Tighten all assembly screws. Ensure the anti-tip device is correctly installed and secured to the wall.

8. SPECIFICATIONS

Detailed specifications for your LAPOOH 4-Drawer Chest:

Brand	LAPOOH
Model Number	BDGOITZJ242544ITWHHH
Color	Oak
Material	Engineered wood, MDF
Overall Dimensions (L x W x H)	60 x 30.5 x 71 cm
Drawer Dimensions (W x D x H)	56.8 x 26.3 x 16.7 cm
Number of Drawers	4
Fixation Type	Floor mounting (with wall attachment)



Image 5: LAPOOH 4-Drawer Chest with key dimensions.

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any questions regarding assembly, missing parts, or product defects, please contact your retailer or the manufacturer directly. Keep your purchase receipt for any warranty claims.

For further assistance, please refer to the contact information provided with your purchase or visit the LAPOOH official website.