

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bayer](#) /

› [Bayer Design City Max Doll Pram 17533AA Instruction Manual](#)

Bayer 17533AA

Bayer Design City Max Doll Pram 17533AA Instruction Manual

Model: 17533AA

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Bayer Design City Max Doll Pram. Please read these instructions carefully before use to ensure safe and correct handling of the product. This doll pram is designed for dolls up to 46 cm in length and is suitable for children aged 3 years and up.

SAFETY INFORMATION

Warning! Not suitable for children under 3 years. Contains small parts. Choking hazard!

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Keep packaging materials away from children to prevent suffocation.
- Regularly check the product for any damage or loose parts. Discontinue use if damage is found.

PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- Doll Pram Frame with Wheels
- Pram Body / Seat Unit
- Adjustable Handlebar
- Integrated Basket
- Matching Doll Bag



Image 1: The Bayer Design City Max Doll Pram in pram configuration, shown with its matching accessory bag.

SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all parts from the packaging.
- 2. Unfold Frame:** Gently unfold the pram frame until it locks into place. Ensure all locking mechanisms are engaged.
- 3. Attach Wheels:** Securely attach the wheels to the designated axles on the pram frame. Ensure they click into place. The front wheels are designed to swivel for easy maneuverability.
- 4. Install Pram Body/Seat Unit:** Place the pram body onto the frame. It should securely clip into position.
- 5. Adjust Handlebar:** The handlebar height can be adjusted to suit the child's stature. Locate the adjustment buttons on either side of the handlebar and press them to extend or retract the handle. Release the buttons to lock the handle at the desired height.
- 6. Attach Accessory Bag:** The included bag can be hung on the handlebar or placed in the integrated basket.



Image 2: Side view of the doll pram, highlighting the frame and wheel assembly.

OPERATING INSTRUCTIONS

Converting from Pram to Buggy

The pram body can be easily converted into a seat unit (buggy configuration). Locate the release mechanisms on the sides of the pram body. Press these buttons and adjust the unit's position until it forms a seat. Ensure it locks securely in the new position.



Image 3: The doll pram configured as a buggy, showing the seat unit.

Adjusting the Hood

The hood can be adjusted to protect the doll from sun or wind. Gently push or pull the hood to the desired position. It will hold its position once released.

Using the Integrated Basket and Bag

The integrated basket located under the pram body provides storage for small items. The included accessory bag offers additional storage and can be carried separately or attached to the pram.



Image 4: The accessory bag, designed to match the doll pram.

CARE AND MAINTENANCE

- **Cleaning:** Wipe down the fabric and frame with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the doll pram in a clean, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically check all screws, bolts, and locking mechanisms to ensure they are tight and functioning correctly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Pram does not fold/unfold smoothly.	Locking mechanisms are stuck or not fully disengaged/engaged.	Ensure all release buttons are pressed or that the frame is aligned correctly. Do not force the mechanism.
Wheels are stiff or not swiveling.	Dirt or debris in the wheel mechanism; wheels not properly attached.	Clean around the wheel axles. Re-check that wheels are securely attached and click into place.
Pram body/seat unit is loose.	Not securely locked into the frame.	Ensure the unit is fully engaged with the frame's locking points. Listen for a click.

PRODUCT SPECIFICATIONS

Model Number: 17533AA

Brand: Bayer Design

Product Dimensions: 27.17 x 29.13 x 16.14 inches (L x H x W)

Item Weight: 8.54 pounds

Recommended Age: 3 years and up

Maximum Doll Size: 46 cm

Features: Height-adjustable handle, front swivel castors, convertible pram to buggy, integrated basket, matching bag.

WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the purchase documentation or contact Bayer Design customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.