

Philips S1151/03

Philips Electric Shaver S1151/03 User Manual

Model: S1151/03

1. IMPORTANT SAFETY INFORMATION

For your safety, please read all instructions carefully before using the Philips Electric Shaver S1151/03.

- Always unplug the shaver before rinsing it under water.
- Avoid using the shaver with charging accessories near water to prevent electrical hazards.
- Before each use, inspect the shaver and its charging cable for any signs of damage. Do not use if damaged.
- Keep the shaver out of reach of children.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Philips Electric Shaver S1151/03 is designed to provide a comfortable and efficient shaving experience. It features advanced ComfortCut blades, 3D floating heads, and is suitable for both wet and dry use.



Image 2.1: Philips Electric Shaver S1151/03 with its retail packaging, showcasing the shaver's design and key features.

Key Features:

- **ComfortCut Blades:** 27 self-sharpening blades designed for a smooth and even finish, maintaining sharpness for up to 2 years.
- **Wet and Dry Shaving:** Allows for convenient dry shaving or a refreshing wet shave with foam or gel, even in the shower.
- **3D Floating Heads:** Heads move independently in three directions to maintain optimal contact with facial contours, preventing nicks and cuts.
- **Rubber Grip:** Ergonomically designed handle with a rubberized texture for a secure and comfortable hold, even when wet.
- **One-Touch Open:** Shaver head opens easily with a single touch for quick rinsing under running water.
- **Waterproof (IPX7):** Fully washable and can be submerged in water up to 1 meter for 30 minutes, making cleaning simple and allowing for shower use.
- **Battery Indicator:** Displays battery status (low, empty, or charging) for timely recharging.
- **Cordless Operation:** Provides up to 40 minutes of cordless shaving from a 10-hour charge.

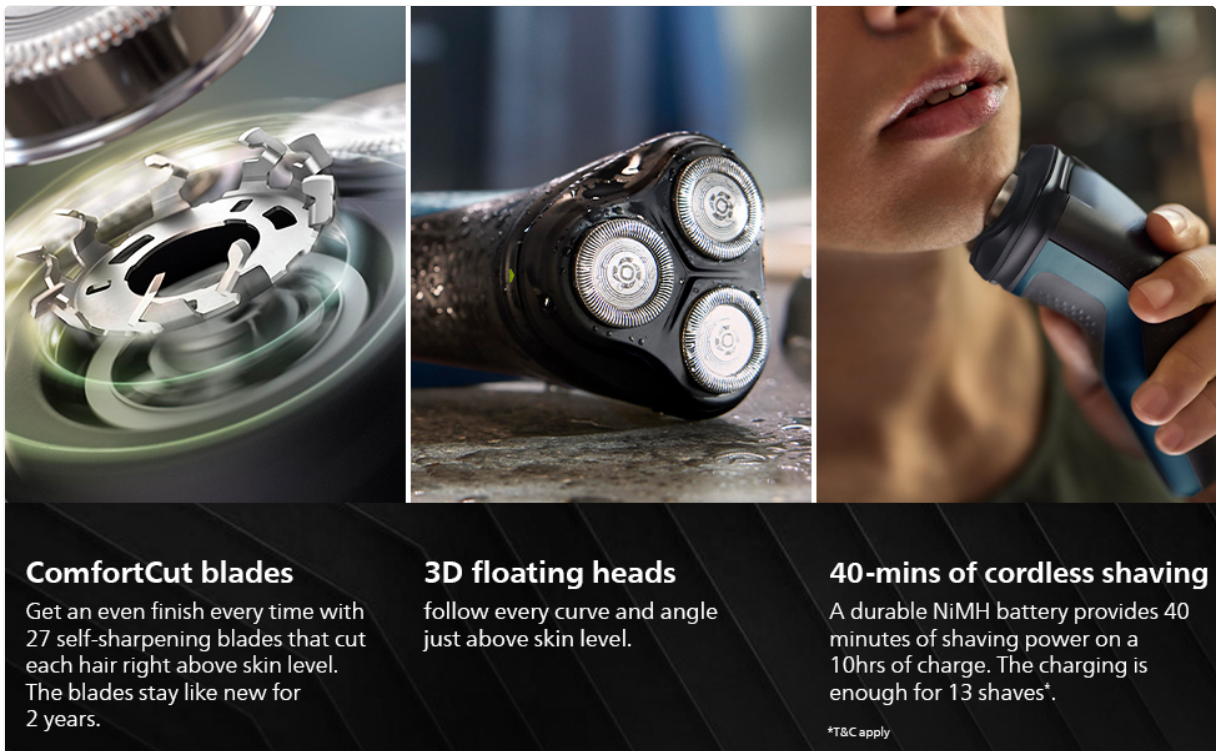


Image 2.2: This composite image highlights the ComfortCut blades, 3D floating heads, and the 40-minute cordless shaving capability of the Philips Shaver S1151/03.

3. SETUP

3.1 Initial Charging

1. Before first use, fully charge the shaver. Connect the USB-A charging cable to the shaver and a compatible USB power adapter (not included).
2. Plug the adapter into a power outlet. The battery indicator light will illuminate to show charging status.
3. A full charge takes approximately 10 hours and provides up to 40 minutes of cordless shaving time.
4. Ensure the shaver is dry before charging. Do not charge near water.

3.2 Preparing for First Use

- Remove all packaging materials.
- Ensure the shaver heads are clean and free from any debris.

4. OPERATING INSTRUCTIONS

4.1 Shaving Techniques

For optimal results, follow these guidelines:

- **Dry Shaving:** Ensure your face is clean and dry. Turn on the shaver and move the shaving heads in small, circular motions over your skin.
- **Wet Shaving:** Apply shaving foam or gel to your face. Turn on the shaver and move the shaving heads in small, circular motions. The shaver is waterproof, allowing for use in the shower.

Wet and Dry Shaving

at the sink or in the shower.

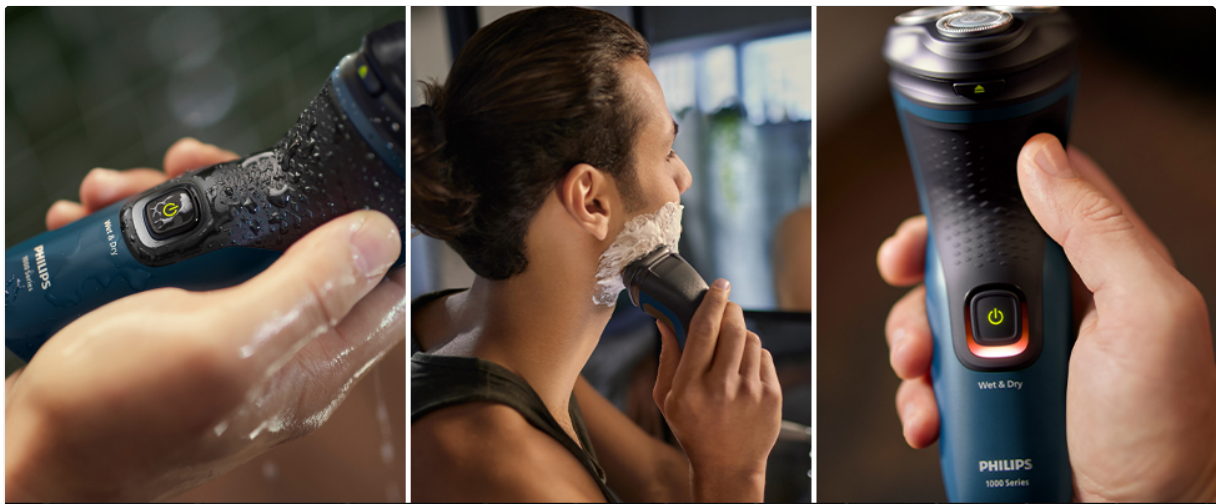


Image 4.1: Demonstrates the versatility of the Philips Shaver S1151/03, showing a user performing both a wet shave with foam and a dry shave.

4.2 Battery Indicator

The shaver features a battery indicator light that provides information on the battery status:

- **Solid Light:** Indicates the battery is sufficiently charged.
- **Flashing Light:** Indicates the battery is low and requires charging.
- **Charging Light:** Illuminates during charging and may change when fully charged (refer to specific model behavior in full manual if available).



Rubber grip

The ergonomic handle with rubber stays secure and comfortable, so you don't lose the grip even when it's wet.

Wet and dry shaving

Be it a dry shave or one with foam and gel, use it as per your convenience, even in the shower.

Battery indicator

The battery indicator lets you know if the battery is low, empty, or charging, so you get a heads up before you start trimming.

Image 4.2: This composite image illustrates the secure rubber grip, the option for wet shaving, and the battery indicator light on the Philips Shaver S1151/03.

5. MAINTENANCE

5.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the shaver and unplug it from the power source if charging.
2. Press the one-touch open button to release the shaver head assembly.
3. Rinse the shaver head and the hair chamber thoroughly under warm running water.
4. Shake off excess water and allow the shaver head to air dry before closing it.
5. For a more thorough cleaning, you can detach the individual shaving heads and rinse them separately.

One-touch Open

for easy cleaning.



Image 5.1: The Philips Shaver S1151/03 shown with its shaving head flipped open, demonstrating the one-touch open feature for easy cleaning under running water.

5.2 Blade Care

The ComfortCut blades are self-sharpening and designed to maintain their performance for up to 2 years. No regular sharpening is required. If you notice a decrease in shaving performance, consider replacing the shaving heads.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is empty.	Charge the shaver for at least 10 hours.
Shaver does not provide a close shave.	Shaver heads are dirty or worn.	Clean the shaver heads thoroughly. If performance does not improve, consider replacing the shaving heads.

Problem	Possible Cause	Solution
Shaver pulls hair.	Shaver heads are dirty or worn; hair might be too long.	Clean the shaver heads. For longer hair, trim it shorter before shaving. Consider replacing shaving heads if issue persists.
Battery indicator not working.	Shaver not connected properly or internal issue.	Ensure USB-A cable is securely connected. If problem persists, contact customer support.

7. SPECIFICATIONS

Model Number	S1151/03
Brand	Philips
Power Source	Battery Powered
Battery Life	Up to 30-40 Minutes (from a 10-hour charge)
Blade Material	Stainless Steel
Waterproof Rating	IPX7 (Submersible in 1 meter of water for up to 30 minutes)
Product Dimensions	8 x 10 x 10 cm
Item Weight	240 g
Included Components	Shaver, Battery (internal), USB-A Charging Cable
Country of Origin	Indonesia

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Philips Electric Shaver S1151/03 comes with a **2-year worldwide warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, neglect, accidents, or unauthorized repairs.

8.2 Customer Support

For further assistance, troubleshooting, or warranty claims, please contact Philips Customer Care:

- **Philips Customer Care:** 18001022929
- **WhatsApp Number:** 9311855819
- You can also visit the official [Philips Store on Amazon](#) for more product information and support.