

LG D4R3009NSWW

LG AI DD D4R3009NSWW Washer Dryer User Manual

Model: D4R3009NSWW

1. PRODUCT OVERVIEW

The LG AI DD D4R3009NSWW is a high-efficiency washer dryer designed to provide optimal fabric care and convenience. This appliance combines washing and drying functions, featuring advanced technologies for superior performance and energy saving.



Figure 1: Front view of the LG AI DD D4R3009NSWW Washer Dryer.

Key Features:

- **AI DD Technology:** LG's artificial intelligence detects fabric weight and type, then selects optimal wash movements from 20,000 combinations for enhanced fabric protection.
- **Eco Hybrid Technology:** Offers flexibility to choose between energy-saving Eco drying mode or faster Turbo drying mode.
- **Allergy Care Program:** Utilizes high temperatures to reduce 99.9% of allergy-causing dust mites, approved by the British Allergy Foundation (BAF).
- **Steam Wash:** Provides deep cleaning and sanitization using steam.
- **Inverter Direct Drive Motor:** Directly connected to the drum, ensuring high washing performance with reduced noise and vibrations.
- **Bubble Drum:** The unique 'bubble' drum shape protects fabrics by minimizing friction during washing and spinning.
- **Energy Efficiency:** The wash cycle is 10% more efficient than traditional Class A models.

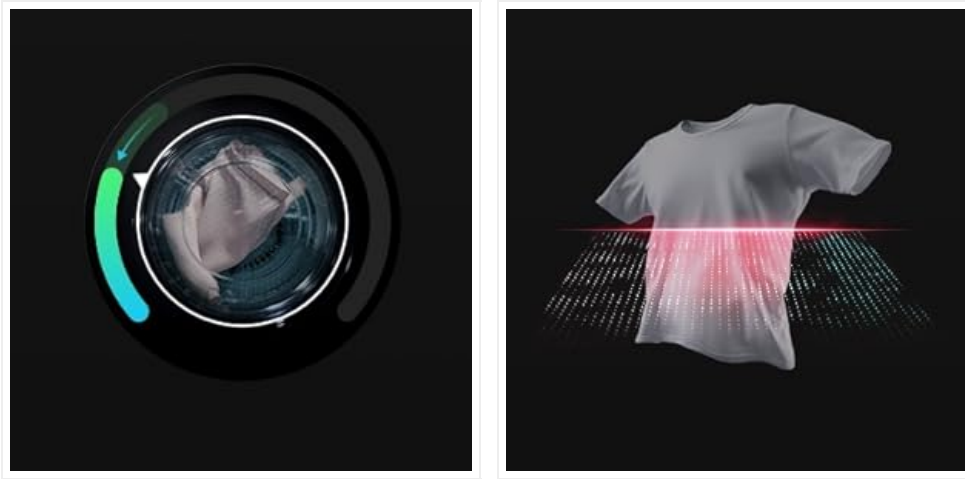 


Figure 2: Visual representations of AI DD and Steam Wash technologies.

2. SAFETY INFORMATION

Please read all safety instructions before using the appliance to prevent accidents and ensure proper operation. Keep this manual for future reference.

General Safety Warnings:

- Ensure the appliance is properly grounded to prevent electric shock.
- Do not allow children to play on or in the appliance. Supervise children when the appliance is in use.
- Keep flammable materials, such as gasoline or alcohol, away from the appliance.
- Do not wash or dry articles that have been soiled with vegetable oil or cooking oil. These items may spontaneously ignite.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged, malfunctioning, or has a damaged power cord. Contact qualified service personnel.
- Ensure all water connections are secure to prevent leaks.

3. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your washer dryer. Follow these guidelines carefully.

Unpacking:

1. Remove all packaging materials, including the polystyrene base and any protective film.
2. Locate and remove the transport bolts from the rear of the appliance. These bolts secure the drum during transit and must be removed before use. Keep them for future transport.

Location:

- Place the appliance on a solid, level floor. Avoid carpets or soft surfaces that could obstruct ventilation.
- Ensure there is adequate space around the appliance for air circulation and maintenance.
- Avoid direct sunlight or extreme temperatures.

Connections:

- Water Supply:** Connect the inlet hoses to the hot and cold water taps and to the corresponding inlets on the back of the machine. Ensure connections are tight to prevent leaks.
- Drain Hose:** Securely attach the drain hose to a standpipe or laundry tub, ensuring it is not kinked or blocked.
- Electrical:** Plug the power cord into a grounded electrical outlet. Do not use extension cords.

Scheda informativa del prodotto					
REGOLAMENTO DELEGATO (UE) 2019/2014 DELLA COMMISSIONE per quanto riguarda l'etichettatura energetica delle lavatrici per uso domestico e delle lavasciuga biancheria per uso domestico					
Nome o marchio del fornitore: LG Electronics					
Indirizzo del fornitore: EU representative of LG Electronics Inc., Krijgsman 1, 1186 DM Amstelveen, NL					
Identificativo del modello: D4R3009NSWW					
Parametri generali del prodotto:					
Parametro	Valore	Parametro	Valore		
Capacità nominale (kg)	Capacità nominale ^M	6,0	Dimensioni in cm	Altezza	85
	Capacità nominale di lavaggio ^M	9,0		Larghezza	60
				Profondità	57
Indice di efficienza energetica	EEI _{wh} ^M	46,7	Classe di efficienza energetica	EEI _{wh} ^M	A
	EEI _{wh} ^M	67,0		EEI _{wh} ^M	D
Indice di efficienza di lavaggio	I _{wh} ^M	1,031	Efficacia di risciacquo [g/kg di tessuti asciutti]	I _{wh} ^M	5,0
	I _{sp} ^M	1,031		I _{sp} ^M	5,0
Consumo di energia in kWh per ciclo, per il ciclo di lavaggio della lavasciuga biancheria per uso domestico con il programma eco 40-60 in una combinazione di carichi pieni e parziali. Il consumo energetico effettivo dipende dalle modalità d'uso dell'apparecchio.		0,444	Consumo di energia in kWh per ciclo, per il ciclo di lavaggio e asciugatura della lavasciuga biancheria per uso domestico in una combinazione di carichi pieni e mezzi carichi. Il consumo energetico effettivo dipende dalle modalità d'uso dell'apparecchio.		3,077
Consumo di acqua in litri per ciclo, per il programma eco 40-60 in una combinazione di carichi pieni e parziali. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.		50	Consumo di acqua in litri per ciclo, per il ciclo di lavaggio e asciugatura della lavasciuga biancheria per uso domestico in una combinazione di carichi pieni e mezzi carichi. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.		90
Temperatura massima all'interno dei tessuti trattati (°C) per il ciclo di lavaggio della lavasciuga biancheria per uso domestico con il programma eco 40-60					
Temperatura massima all'interno dei tessuti trattati (°C) per il ciclo di lavaggio della lavasciuga biancheria per uso domestico con il programma eco 40-60	Capacità nominale di lavaggio	31	Temperatura massima all'interno dei tessuti trattati (°C) per il ciclo di lavaggio della lavasciuga biancheria per uso domestico con il ciclo di lavaggio e asciugatura	Capacità nominale	24
	Metà	27		Metà	21
	Un quarto	25			
Velocità di centrifuga (giri/min) ^M	Capacità nominale di lavaggio	1.350	Grado ponderato di umidità residua (%) ^M	44,9	
	Metà	1.350			
	Un quarto	1.350			
Durata del programma eco 40-60 (ore:min)	Capacità nominale di lavaggio	3:48	Classe di efficienza della centrifuga ^M	A	
	Metà	2:54			
	Un quarto	2:22			
Emissioni di rumore aereo durante la fase di centrifuga per il ciclo di lavaggio eco 40-60 alla capacità nominale di lavaggio (dB(A) re 1 pW)		71	durata del ciclo di lavaggio e asciugatura (ore:min)	Capacità nominale	7:35
				Metà	4:35
Tipo	A libera installazione		Classe di emissioni di rumore aereo nella fase di centrifuga del programma eco 40-60 alla capacità nominale di lavaggio	A	
Modo spento (W) (se applicabile)		0,50	Modo stand-by (W) (se applicabile)	0,50	
Avvio ritardato (W) (se applicabile)		4,00	Modo stand-by in rete (W) (se applicabile)	n. a.	
Durata minima della garanzia offerta dal fornitore: 24 mesi					
Questo prodotto è stato progettato per liberare ioni d'argento durante il ciclo di lavaggio					
NO					
Informazioni supplementari:					
Link al sito web del fornitore che riporta le informazioni di cui all'allegato II, punto 9, del regolamento (UE) 2019/2023 della Commissione: https://www.lg.com/global/ajax/common_manual					
^M per il programma eco 40-60.					
^M per il ciclo di lavaggio e asciugatura.					
Modello immesso sul mercato dell'Unione da 10/05/2023					
					

Pagina 1 / 3

Pagina 2 / 3



Figure 3: Rear view of the appliance, illustrating connection points.

Leveling:

Use a spirit level to ensure the appliance is perfectly level. Adjust the leveling feet at the bottom of the machine as needed to prevent excessive vibration and noise during operation.

4. OPERATING INSTRUCTIONS

This section guides you through the daily use of your LG AI DD D4R3009NSWW washer dryer.

Control Panel Overview:



Figure 4: Control panel with cycle selector and digital display.

- **Cycle Selector Dial:** Turn the dial to select your desired wash or dry program.
- **Digital Display:** Shows remaining time, error codes, and selected options.
- **Function Buttons:** For selecting additional options like temperature, spin speed, steam, or delay start.
- **Start/Pause Button:** To begin or temporarily stop a cycle.

Loading Laundry:

1. Open the door and load items loosely into the drum. Do not overload the machine; refer to the capacity guidelines for optimal results (9kg wash, 6kg dry).
2. Ensure no items are caught in the door seal before closing the door firmly.



Figure 5: Interior of the washer dryer drum.

Adding Detergent and Softener:

1. Pull out the detergent dispenser drawer.
2. Add the appropriate amount of detergent to the main wash compartment.
3. Add fabric softener to the softener compartment (marked with a flower symbol). Do not exceed the maximum fill line.
4. Gently push the dispenser drawer back into place.



Figure 6: Detergent dispenser drawer.

Selecting and Starting a Cycle:

1. Turn the cycle selector dial to choose your desired wash or wash+dry program (e.g., Cotton, Mixed Fabrics, Easy Care, AI Wash, Allergy Care).
2. Adjust any additional options such as temperature, spin speed, or steam if available for the selected cycle.
3. Press the **Start/Pause** button to begin the cycle. The machine will automatically detect the load and optimize settings with AI DD technology.

Drying Function (Eco Hybrid):

After a wash cycle, you can select a drying program. The Eco Hybrid technology allows you to choose:

- **Eco Mode:** For energy-efficient drying.
- **Turbo Mode:** For faster drying times.

Select the appropriate drying option based on your needs and press Start/Pause.

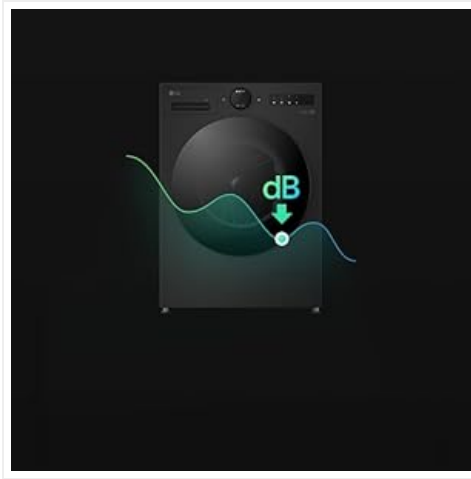 


Figure 7: The Inverter Direct Drive motor ensures quiet operation.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your appliance.

Cleaning the Drum:

Run a 'Tub Clean' or 'Drum Clean' cycle periodically (refer to your control panel for specific program names) to remove detergent residue and odors.

Cleaning the Detergent Dispenser:

1. Pull out the dispenser drawer completely.
2. Remove any removable inserts or compartments.
3. Rinse all parts under running water to remove detergent and softener buildup. Use a brush if necessary.
4. Wipe the drawer housing clean.
5. Reassemble and reinsert the drawer.

Cleaning the Drain Pump Filter:

The drain pump filter should be cleaned regularly to prevent blockages and ensure efficient draining.

1. Open the cover at the bottom front of the appliance.
2. Place a shallow tray or towel underneath to catch any residual water.
3. Slowly unscrew the filter cap counter-clockwise to drain water.
4. Remove the filter and clean it under running water, removing any lint or debris.
5. Reinsert the filter and screw the cap back on tightly. Close the cover.

Exterior Cleaning:

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Appliance does not start	Power cord unplugged; Door not closed properly; Cycle not selected; Start/Pause button not pressed.	Check power connection; Ensure door is latched; Select a cycle; Press Start/Pause.
Excessive vibration or noise	Appliance not level; Transport bolts not removed; Overloaded drum; Unbalanced load.	Adjust leveling feet; Remove transport bolts; Reduce load size; Redistribute laundry evenly.
Water leakage	Loose water inlet hoses; Clogged drain pump filter; Drain hose improperly installed.	Tighten hose connections; Clean drain pump filter; Ensure drain hose is secure and not kinked.
Poor washing results	Overloading; Insufficient detergent; Incorrect cycle selection; Water temperature too low.	Reduce load; Use correct amount of detergent; Select appropriate cycle; Check water temperature setting.
Poor drying results	Overloading; Incorrect drying cycle; Lint filter clogged (if applicable); Inadequate ventilation.	Reduce load; Select appropriate drying cycle; Clean lint filter; Ensure proper ventilation around the appliance.

If the problem persists after trying these solutions, please contact LG customer support.

7. SPECIFICATIONS

Technical details for the LG AI DD D4R3009NSWW Washer Dryer.

Feature	Value
Brand	LG
Model Number	D4R3009NSWW
Product Dimensions (L x W x H)	56.5 x 60 x 85 cm; 74 kilograms
Capacity (Wash)	9 Kilograms
Capacity (Dry)	6 Kilograms
Drum Material	Stainless Steel
Control Type	Voice, Dial
Access Location	Front Load
Voltage	230 Volts (AC)
Number of Washing Cycles	3 (Options include Cotton, Mixed Fabrics, Easy Care)
Number of Drying Cycles	3
Special Features	Steam Wash, Eco Hybrid Technology

Feature	Value
Included Components	Drain Hose
Batteries Required	No
Date First Available	29 February 2024

8. WARRANTY AND SUPPORT

LG provides a manufacturer's warranty for this product. Please refer to the warranty card included with your purchase or visit the official LG website for detailed warranty terms and conditions specific to your region.

Customer Support:

For technical assistance, service requests, or spare parts inquiries, please contact LG Customer Service. You can find contact information on the official LG website or in your product documentation.

Online Resources: For additional support, FAQs, and software updates, visit the official LG website www.lg.com

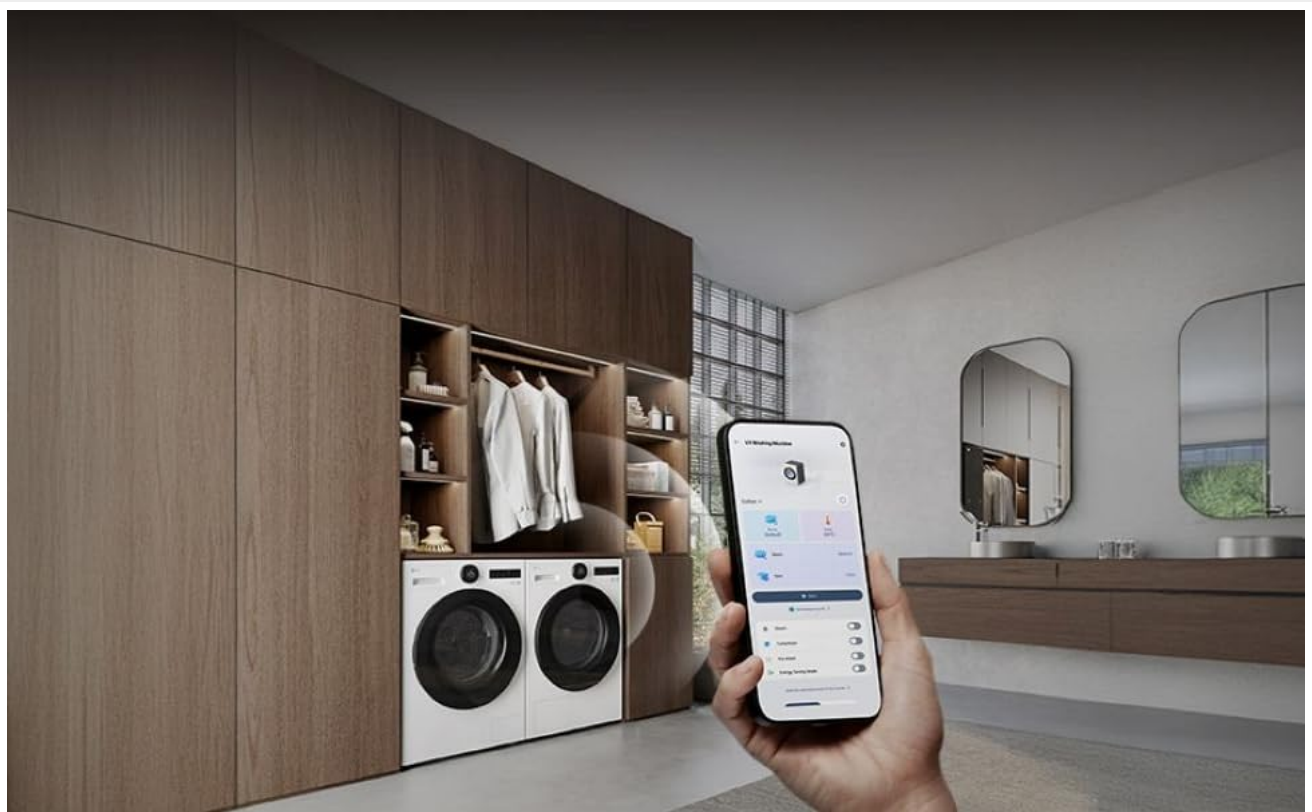 


Figure 8: Smart connectivity features may offer additional support and control options.

9. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller matching the specified criteria (m3u8 format and 'Seller' creator type) were found in the provided data. Please refer to the LG official website or authorized channels for any available video content.

