

Armocity B0CWRVBT1

Armocity 4-Tier AV Media Stand with Power Strips and LED Lights

Model: B0CWRVBT1

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Armocity 4-Tier AV Media Stand. This stand is designed to organize audio-visual equipment, featuring adjustable shelves, integrated power strips, and LED lighting. Please read these instructions carefully before assembly and use.

SAFETY INFORMATION

- **Weight Capacity:** Do not overload shelves. The maximum weight limit per shelf is 15 lbs (6.8 kg). Exceeding this limit may cause damage or injury.
- **Assembly:** Ensure all parts are securely fastened before placing any equipment on the stand.
- **Electrical Safety:** The integrated power strip is designed for indoor use only. Do not expose to moisture. Do not attempt to modify the power strip or LED lights.
- **Placement:** Place the stand on a flat, stable surface to prevent tipping.
- **Children and Pets:** Keep small parts and packaging materials away from children and pets during assembly.


SETUP AND ASSEMBLY

Assembly of the Armocity AV Media Stand is designed to be straightforward. All necessary parts and hardware are provided and labeled. Follow the included instructions carefully.

Components Overview

Before starting, verify that all components are present according to the packing list. The stand consists of engineered wood shelves, metal frame components, and hardware for assembly.

Product Dimensions

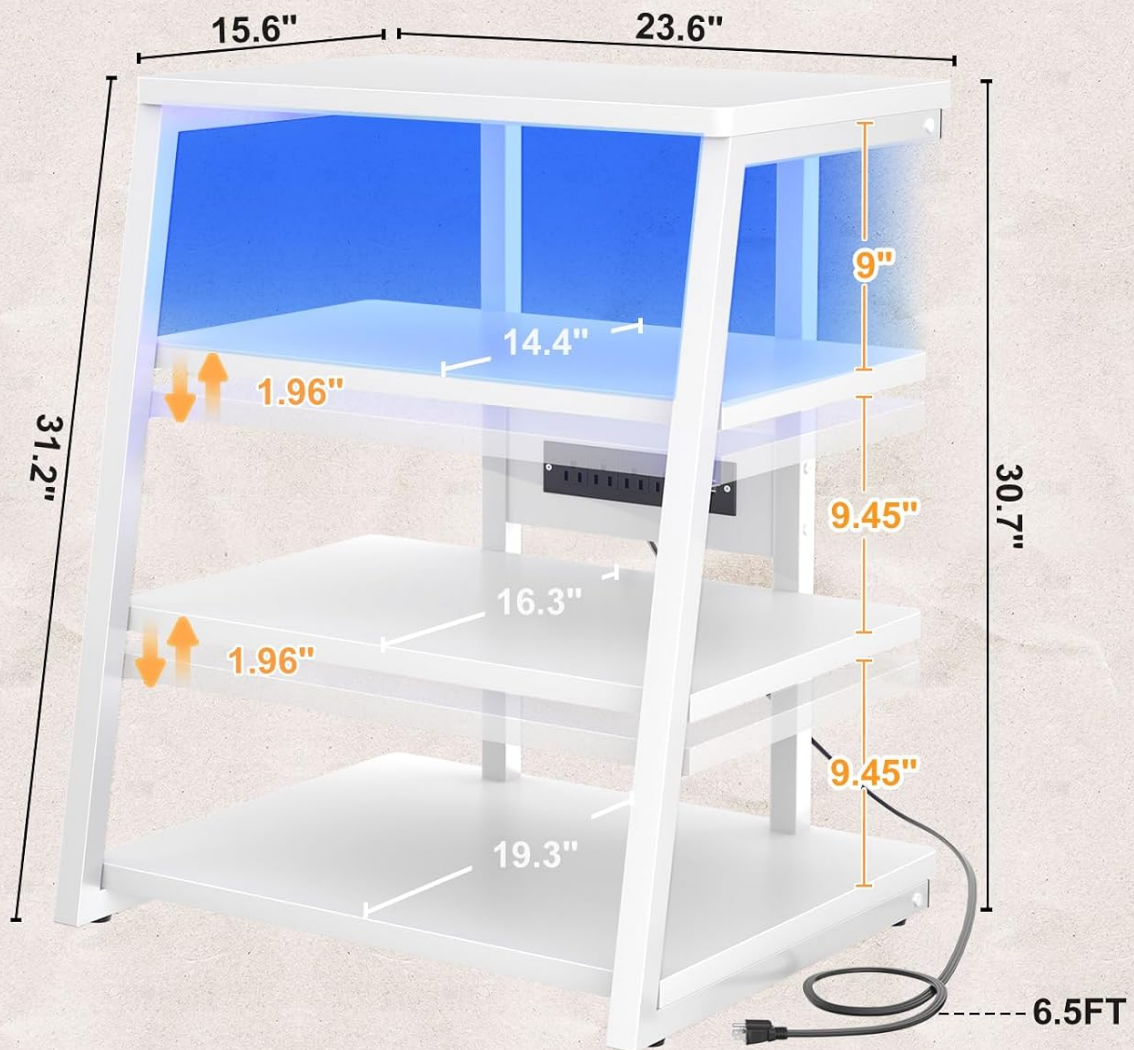

Plenty of Space

Image: Product Dimensions and Shelf Clearances. The stand measures 23.6 inches wide, 12 inches deep, and 30.7 inches high. Shelf heights are adjustable.

Assembly Steps

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify the metal frame pieces and the engineered wood shelves.
3. Attach the side frames to the base shelf using the provided hardware.
4. Install the adjustable shelves. The shelves can be positioned at various heights to accommodate different equipment sizes. Ensure the shelves are level and securely fastened.
5. Integrate the power strip unit into its designated slot.
6. Attach the LED light strip as per the separate LED light instructions (if provided).
7. Tighten all screws and connections to ensure stability.



Image: Shelf Thickness and Trapezoid Design. The shelves are 0.79 inches thick, contributing to the stand's durability.



Image: Space-Saving Integration and Adjustable Storage. This image highlights the built-in power strip and the flexibility of shelf placement.

OPERATING INSTRUCTIONS

Power Strip Usage

The media stand includes a built-in power station with 4 standard receptacles and 2 USB ports. Connect the stand's power cord to a wall outlet. You can then plug in your audio-visual equipment, gaming consoles, or other devices into the integrated outlets for convenient power access.

LED Light Operation

The integrated LED lights offer customizable illumination. Use the included remote control (if applicable) or integrated button to cycle through various modes:

- **Static Mode:** Select a single color to maintain a consistent ambiance.
- **Dynamic Modes:** Choose from 20 different dynamic lighting patterns to enhance your entertainment experience.

VIBRANT RGB LED PERFORMANCE

Dynamic Mode/Music Sync Mode
Suitable for game rooms and audio-visual rooms.



Image: Vibrant RGB LED Performance. This image demonstrates the LED lights in a dynamic setting.

MAINTENANCE

To ensure the longevity and appearance of your media stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.
- **Environmental Conditions:** Avoid placing the stand in direct sunlight or near heat sources, which can cause fading or warping.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stand feels wobbly or unstable.	Loose fasteners or uneven placement.	Ensure all screws are tightened. Place the stand on a level surface. Adjust leveling feet if present.
LED lights are not turning on.	Power cord not plugged in, loose connection, or remote control battery depleted.	Check if the power cord is securely plugged into a working outlet. Verify the LED strip connection. Replace remote control batteries if applicable.
Power strip outlets are not working.	Power cord not plugged in, circuit breaker tripped, or overloaded.	Ensure the stand's power cord is plugged into a live outlet. Check your home's circuit breaker. Reduce the number of devices plugged into the power strip.

SPECIFICATIONS

Feature	Detail
Model Number	B0CWRVBT1
Brand	Armocity
Material	Engineered Wood
Color	White
Product Dimensions (D x W x H)	12"D x 12"W x 30"H
Number of Shelves	4 (Adjustable)
Shelf Thickness	15 Millimeters (0.79 inches)
Special Features	Integrated Power Strips (4 receptacles, 2 USBs), LED Lights (Static & Dynamic Modes)
Mounting Type	Freestanding
Recommended Uses	Bedroom, Dorm, Living Room, Office
Required Assembly	Yes

WARRANTY AND SUPPORT

For any questions regarding your Armocity 4-Tier AV Media Stand, including assembly assistance, missing parts, or operational issues, please contact Armocity customer support. Refer to your purchase documentation for specific warranty details, as warranty terms may vary.

Manufacturer: Armocity

Contact Information: Please visit the official Armocity website or refer to the contact details provided with your product packaging for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question