



[Manuals.plus](#) /

> [DREAMWORKS GABBY'S DOLLHOUSE](#) /

> Gabby's Dollhouse Purrfect Party Playset 6071380: Rainbow Dollhouse with Gabby Figure, Furniture, and Sound Effects Instruction Manual

DREAMWORKS GABBY'S DOLLHOUSE 6071380

Gabby's Dollhouse Purrfect Party Playset 6071380 Instruction Manual

Model: 6071380 | Brand: DREAMWORKS GABBY'S DOLLHOUSE

1. INTRODUCTION

Welcome to the magical world of Gabby's Dollhouse! This Purrfect Party Playset (Model 6071380) is designed to provide hours of imaginative play. This manual provides essential information for setting up, operating, and maintaining your dollhouse to ensure a safe and enjoyable experience.

- 1 x Gabby Figure
- 10 x Assorted Accessories (e.g., balloon arch, kitten-shaped toilet, sink, chair, bed, buffet table, piano/DJ booth, gift bag)
- 2 x Surprise Dollhouse Boxes (containing a toy cake and a trophy)
- 1 x Sticker Sheet



Figure 3.1: Overview of the dollhouse and its 14 included accessories and furniture pieces.

4. SETUP

The Gabby's Dollhouse Purrfect Party Playset requires minimal assembly. Follow these steps to prepare your dollhouse for play:

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Battery Installation:** The dollhouse requires AAA batteries (not included) for sound effects. Locate the battery compartment, typically on the base of the dollhouse. Use a screwdriver to open the compartment, insert the batteries according to the polarity indicators (+/-), and secure the cover.
3. **Dollhouse Expansion:** The dollhouse may arrive in a folded state. Gently unfold the side panels to reveal all rooms and play areas.
4. **Accessory Placement:** Place the included furniture and accessories within the various rooms as desired.



LA CASA DE MUÑECAS MIDE +60 CM DE ALTO

Figure 4.1: The dollhouse stands over 60 cm (23.6 inches) tall when fully set up.

5. OPERATING INSTRUCTIONS

Explore the interactive features of your Gabby's Dollhouse:

5.1. Exploring the Rooms

The dollhouse features multiple themed rooms across its levels. Open the front panels to access and decorate each room.

3+



6 HABITACIONES PARA EXPLORAR Y DECORAR

Figure 5.1: The dollhouse offers 6 distinct rooms for exploration and decoration.



Figure 5.2: Detailed view of the Party Room, Elevator, Creative Room, Bathroom, and Bedroom, ready for decoration.

5.2. Interactive Sound Effects

Press the designated button on the dollhouse base to activate 6 different sound effects directly from the Gabby's Dollhouse series.



Figure 5.3: Press the button to activate sounds and music.

5.3. Cat-Themed Elevator

Use the cat-themed elevator to move your Gabby figure and other characters between the different floors of the dollhouse.

5.4. Secret Attic

Fold down the rainbow-colored roof to reveal a hidden attic play area on the top floor. This area can be used for additional imaginative scenarios.



Figure 5.4: Discover the secret attic by folding down the roof.

5.5. Dollhouse Deliveries

Just like in the show, you can use the delivery tower to send surprise accessories down to the dollhouse. Place a surprise box in the tower and press the button to release it.



Wie in der Serie gibt es eine Puppenhaus-Lieferung zum Öffnen

Figure 5.5: The dollhouse features a delivery tower for surprise accessories, just like in the series.

6. MAINTENANCE

To keep your Gabby's Dollhouse playset in optimal condition:

- **Cleaning:** Wipe the dollhouse and accessories with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the playset in a dry, cool place away from direct sunlight.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

If you encounter any issues with your playset, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound from dollhouse	Batteries are dead or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.
Elevator not moving smoothly	Obstruction or mechanism issue.	Check for any small objects blocking the elevator path. Ensure the elevator is properly seated on its track.
Surprise boxes not releasing	Box is jammed or mechanism is stuck.	Ensure the box is correctly placed in the delivery tower. Gently clear any obstructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	6071380
Brand	DREAMWORKS GABBY'S DOLLHOUSE

Feature	Detail
UPC	681147039674
Recommended Age	36 months - 6 years
Product Dimensions (L x W x H)	43.18 x 13.34 x 55.88 cm (17 x 5.25 x 22 inches)
Item Weight	3.17 kg (6.99 lbs)
Number of Pieces	15
Assembly Required	No
Batteries Required	Yes (AAA)
Batteries Included	No
Main Material	Plastic
Languages	English, Dutch

9. WARRANTY AND SUPPORT

This product is manufactured to high-quality standards. For any questions, concerns, or support needs regarding your Gabby's Dollhouse Purrfect Party Playset, please contact the manufacturer's customer service department. Keep your purchase receipt as proof of purchase.

- **Manufacturer:** DREAMWORKS GABBY'S DOLLHOUSE
- **Customer Service:** Refer to the product packaging or the official brand website for contact information.