

MAXDONE FNL009-EU

MAXDONE FNL009-EU A4 Laminator User Manual

Model: FNL009-EU

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the laminator and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Do not operate the laminator if the power cord or plug is damaged.
- Keep the laminator away from water or other liquids. Do not operate with wet hands.
- Ensure the laminator is placed on a stable, flat surface with adequate ventilation.
- Do not insert objects other than laminating pouches into the feed slot.
- The laminator surface becomes hot during operation. Avoid direct contact.
- Unplug the laminator when not in use or before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not attempt to disassemble or repair the laminator yourself. Contact qualified service personnel.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- MAXDONE FNL009-EU A4 Laminator
- Integrated Paper Cutter
- Corner Rounder Tool
- 20 Laminating Pouches (5 x A4, 5 x A5, 10 x A6)
- User Manual (This document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your MAXDONE A4 Laminator.



Image 3.1: MAXDONE FNL009-EU A4 Laminator and included accessories. The image displays the black laminator unit, an integrated paper cutter, a corner rounder tool, and a pack of 20 laminating pouches in A4, A5, and A6 sizes. Various documents and photos are shown being laminated, illustrating the product's function.

Key Components:

1. **Power Switch/Mode Selector:** Controls power and selects between COLD and HOT lamination modes.
2. **Power Indicator Light:** Illuminates when the device is powered on.
3. **Ready Indicator Light:** Illuminates green when the laminator has reached the optimal temperature for hot lamination.
4. **Feed Slot:** Where laminating pouches are inserted.
5. **Exit Slot:** Where laminated documents emerge.
6. **ABS Release Lever:** Used to clear jammed pouches.
7. **Integrated Paper Cutter:** Located on the top of the unit for trimming paper.
8. **Corner Rounder:** Separate tool for rounding sharp corners of laminated documents.

4. SETUP

1. **Unpack:** Carefully remove the laminator and all accessories from the packaging.
2. **Placement:** Place the laminator on a stable, flat, and heat-resistant surface. Ensure there is enough space around the unit for proper ventilation and for documents to pass through the feed and exit slots without obstruction.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Hot Lamination

Hot lamination is suitable for most standard documents, photos, and materials that are not sensitive to heat. Use laminating pouches with a thickness between 80 and 125 microns.

1. **Power On:** Flip the power switch to the "HOT" position. The power indicator light will illuminate.
2. **Preheating:** Allow the laminator to preheat for approximately 1-2 minutes. The ready indicator light will turn green when the optimal temperature is reached.
3. **Prepare Document:** Place your document or photo inside a laminating pouch, ensuring it is centered and there is an even border around the edges. The sealed edge of the pouch should be inserted first.
4. **Insert Pouch:** Gently insert the sealed edge of the laminating pouch into the feed slot. The laminator will automatically draw the pouch through. Do not force the pouch.
5. **Retrieve Document:** Once the laminated document exits the rear slot, allow it to cool on a flat surface before handling to ensure a firm seal.
6. **Power Off:** After use, switch the laminator to the "OFF" position and unplug it.

5.2 Cold Lamination

Cold lamination is ideal for heat-sensitive materials such as certain photographs, thermal paper, or documents printed with heat-sensitive inks. Use self-adhesive cold laminating pouches (not included in this package).

1. **Power On:** Flip the power switch to the "COLD" position. The power indicator light will illuminate. No preheating is required for cold lamination.
2. **Prepare Document:** Place your document inside a self-adhesive cold laminating pouch according to the pouch manufacturer's instructions.
3. **Insert Pouch:** Gently insert the sealed edge of the cold laminating pouch into the feed slot. The laminator will draw the pouch through.
4. **Retrieve Document:** Once the laminated document exits the rear slot, it is ready for use.
5. **Power Off:** After use, switch the laminator to the "OFF" position and unplug it.

5.3 Anti-Jam (ABS) Function

In the event of a misfeed or jam, immediately press and hold the ABS release lever. This will disengage the rollers, allowing you to manually pull the pouch out of the feed slot. Once the pouch is removed, release the lever and resume normal operation.

5.4 Using the Integrated Paper Cutter

The laminator features an integrated paper cutter for precise trimming of documents or laminated items.

1. **Position Document:** Place the edge of the paper or laminated document under the cutting guide.
2. **Cut:** Slide the cutter blade along the guide to trim the document.
3. **Caution:** Exercise care when using the cutter. Keep fingers away from the blade.

5.5 Using the Corner Rounder

The included corner rounder tool allows you to create smooth, rounded corners on your laminated documents for a professional finish and to prevent sharp edges.

1. **Insert Corner:** Insert one corner of the laminated document into the slot of the corner rounder.
2. **Press Down:** Press down firmly on the top of the tool to cut the corner.
3. **Repeat:** Repeat for all desired corners.

6. MAINTENANCE

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** Periodically run a cleaning sheet (a piece of paper folded in half) through the laminator to remove any adhesive residue from the rollers.
- **Storage:** Store the laminator in a clean, dry place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Laminator does not turn on.	No power supply.	Check if the power cord is securely plugged into the laminator and the electrical outlet. Ensure the power switch is in the "HOT" or "COLD" position.
Laminating pouch jams.	Pouch inserted incorrectly or too thick.	Immediately press and hold the ABS release lever to remove the pouch. Ensure the sealed edge is inserted first and the pouch thickness is within the specified range (80-125 microns for hot lamination).
Poor lamination quality (bubbles, cloudy).	Insufficient heat or incorrect pouch insertion.	For hot lamination, ensure the ready indicator light is green before inserting the pouch. Ensure the pouch is inserted straight and centered. Allow laminated documents to cool completely on a flat surface.
Laminator is slow to heat up.	Normal operation.	The laminator requires 1-2 minutes to preheat. Wait for the green ready indicator light.

8. SPECIFICATIONS

Model Number	FNL009-EU
Brand	MAXDONE
Lamination Width	A4 (Max. 230mm)
Lamination Modes	Hot & Cold
Hot Lamination Pouch Thickness	80-125 microns
Warm-up Time	1-2 minutes
Number of Rollers	2

Dimensions (L x W x H)	33.5 x 12.5 x 10.2 cm (13.2 x 4.9 x 4.0 inches)
Weight	739 g (1.63 lbs)
Color	Black

9. WARRANTY AND SUPPORT

MAXDONE products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact your retailer. Please have your model number (FNL009-EU) and purchase date available when contacting support.