

[Manuals.plus](#) /

› [Smartby](#) /

› Universal LG Smart TV Remote Control User Manual

Smartby Universal LG Smart TV Remote

Universal LG Smart TV Remote Control User Manual

Model: Universal Replacement for LG Smart TVs

Brand: Smartby

1. PRODUCT OVERVIEW

This Smartby Universal Remote Control is designed as a direct replacement for various LG Smart TV remote models. It provides full functionality for your LG Smart TV, including power, volume, channel control, menu navigation, and access to smart features. This remote is compatible with a wide range of LG LCD, LED, 3D, HDTV, and Smart TV models.

Compatible LG Remote Models include: AKB75095307, AKB75375604, AKB74915305, AKB76040302, AKB76037601, AKB75855501, AKB74475401, AKB74475433, AKB73975702, AKB75055701, AKB73975711, AKB73715608, AGF76631064, AKB74915324, AKB73715601, AKB75095308, AKB76037601, AKB76040302, AKB75675313, AKB75675304.



Image: Front view of the Smartby Universal LG Smart TV Remote Control, showcasing its ergonomic design and button layout.

2. SETUP AND INSTALLATION

This universal remote control is designed for immediate use with compatible LG Smart TVs. No programming or pairing is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.

3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready to operate your LG Smart TV.



Image: Front and back view of the Smartby Universal LG Smart TV Remote Control, illustrating the location of the battery compartment on the rear.

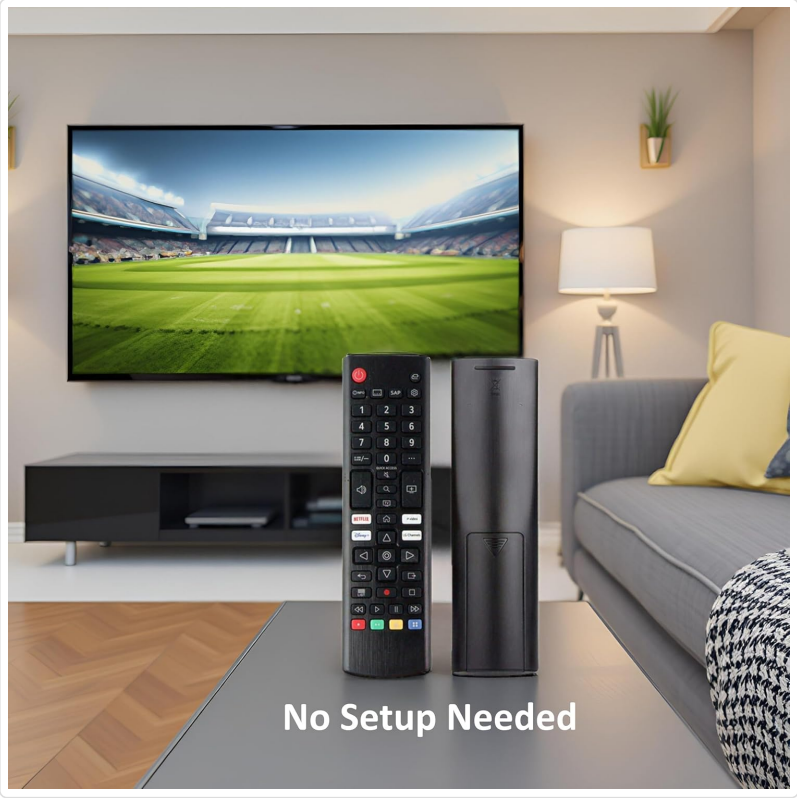


Image: The remote control positioned in a living room environment, emphasizing that no setup is needed for immediate use.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your new universal remote control. The layout is designed to mimic original LG remote functionality.



Image: Detailed diagram of the remote control, highlighting various buttons and their corresponding functions for easy reference.

3.1 Button Functions

Button	Function
Power	Turns the TV on or off.
INFO	Shows information on the current program.
... (More Actions)	Displays more remote control functions.

Button	Function
SAP	Enables SAP (Secondary Audio Program) feature.
Input	Changes the input source (e.g., HDMI 1, AV).
Number Buttons (0-9)	Direct channel selection. Can also be used with QUICK ACCESS.
GUIDE	Shows program guide.
QUICK ACCESS	A feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.
Volume Up/Down	Adjusts the volume level.
Mute	Mutes all sounds.
Channel Up/Down	Changes the TV channel.
TV / LG Channels	Allows you to watch TV or LG Channels.
Netflix / Disney+	Direct access buttons for streaming services.
Home	Accesses the Home menu. Holding it launches the last used apps.
OK (Center Button)	Selects menus or options and confirms your input.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
Back	Returns to the previous level or screen.
Search	Checks for recommended content.
Exit	Clears on-screen displays and returns to TV viewing.
LIST	Accesses the saved programs list.
Record (Red Dot)	Starts to record and displays record menu.
Playback Controls (Rewind, Play, Pause, Fast Forward, Stop)	Controls media playback.
Colored Buttons (Red, Green, Yellow, Blue)	These access special functions in some menus or applications.

4. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosol sprays, as they may damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can cause internal damage.

5. TROUBLESHOOTING

If you experience issues with your universal remote control, please refer to the following common solutions:

Problem	Solution
Remote is not responding.	• Check if the batteries are inserted correctly with the correct polarity (+/-). • Replace the batteries with new ones. Weak or dead batteries are a common cause of unresponsiveness. • Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
Some buttons are not working.	• Ensure the remote is pointed directly at the TV. • Clean the remote's infrared emitter (the small LED at the front) and the TV's receiver with a soft cloth. • If only specific buttons are unresponsive, it might indicate a defect. Try replacing batteries first.
Remote works intermittently.	• This often indicates low battery power. Replace the batteries. • Check for any sources of infrared interference in the room (e.g., strong sunlight, other electronic devices).

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Smartby
Compatible Devices	LG Smart TVs (LCD, LED, 3D, HDTV, Smart TV models)
Connectivity Technology	Infrared (IR)
Special Features	Ergonomic, No Programming Required, Universal Compatibility
Max Number of Supported Devices	1 (LG TV)
Item Weight	1.76 ounces
Package Dimensions	6.65 x 1.85 x 0.83 inches
Manufacturer	Smartby Factory
Date First Available	February 29, 2024

7. WARRANTY AND SUPPORT

For specific warranty information regarding your Smartby Universal LG Smart TV Remote Control, please refer to the product packaging or the seller's policy on the purchase platform. Typically, replacement remotes come with a standard return or replacement policy.

If you require further assistance or have questions not covered in this manual, please contact the seller or manufacturer directly through the platform where the product was purchased. You can often find contact information on the product's listing page or within your order history.

For general inquiries, you may also visit the[Smartby Store on Amazon](#).

