



Manuals.plus /

› Remotes Remade /

› Remotes Remade Replacement AC Remote Control User Manual for Mitsubishi Air Conditioners (Models SH20A, SG19C, SG18D, SG17B, SG15E, SG15D, SG15H)

## Remotes Remade SH20 SG19C SG18D SG17B SG15E SG15D SG15H

### Remotes Remade Replacement AC Remote Control User Manual

This manual provides instructions for the setup, operation, and maintenance of your Remotes Remade replacement AC remote control for Mitsubishi Air Conditioners.

#### 1. PRODUCT OVERVIEW

---

The Remotes Remade replacement remote control is designed to operate various Mitsubishi Air Conditioner models, including SH20A, SG19C, SG18D, SG17B, SG15E, SG15D, and SG15H. It provides essential functions for comfortable climate control.



**Image 1:** The primary remote control model is shown on the left, featuring a digital display and various function buttons. On the right, a collage displays several other compatible Mitsubishi AC remote control variations, indicating the broad compatibility of this replacement unit.

## 2. SETUP INSTRUCTIONS

### 2.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

### 2.2 Initial Pairing / Configuration

In most cases, the remote will work immediately upon battery installation. If it does not respond to your air conditioner:

1. Press and hold the **Power** button for 5 seconds.
2. Use the **Up** and **Down** arrow buttons (often labeled TEMP + / TEMP -) to cycle through the 21 available channels.
3. Release the **Power** button once your air conditioner responds. The remote is now paired.

## 2.3 Temperature Unit Selection (Fahrenheit/Celsius)

The remote typically defaults to Fahrenheit. To change the temperature display unit:

- Locate the small °C/°F **CLOCK RESET** button, usually found in a recessed area near the bottom of the remote.
- Use a thin, pointed object (like a pen tip) to press this button briefly to toggle between Fahrenheit (°F) and Celsius (°C).

## 3. OPERATING INSTRUCTIONS

---

Familiarize yourself with the remote's buttons and their functions:

- **ON/OFF:** Powers the air conditioner on or off.
- **TEMP + / TEMP -:** Adjusts the desired temperature setting.
- **MODE:** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **FAN:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **WIDE VANE / L-VANE-R:** Controls the horizontal swing or position of the air outlet vanes.
- **INDIRECT/DIRECT:** Adjusts the airflow direction for indirect or direct air circulation.
- **SLEEP:** Activates sleep mode, which often adjusts temperature and fan speed for comfortable sleep.
- **SMART SET:** Recalls a pre-programmed preferred setting.
- **NATURAL FLOW:** Simulates a natural breeze by varying fan speed.
- **TIMER (ON/OFF):** Sets a timer for the unit to turn on or off automatically.
- **WEEKLY TIMER:** Allows for programming daily or weekly operation schedules. Use **EDIT/SEND**, **SET**, **CANCEL**, **DAY**, **TIME**, and **TEMP** buttons for programming.
- **POWERFUL:** Activates a rapid cooling or heating function for quick temperature changes.
- **CLOCK RESET:** Used to set or reset the remote's internal clock.

## 4. MAINTENANCE

---

### 4.1 Battery Replacement

Replace batteries when the display becomes dim or the remote's range decreases. Always replace both batteries simultaneously with new AAA batteries.

### 4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure fresh batteries are correctly installed.
  - Check for any obstructions between the remote and the air conditioner's receiver.
  - Confirm the remote is pointed directly at the air conditioner.
  - If still unresponsive, attempt the initial pairing/configuration steps (Section 2.2).
- **Incorrect temperature display:**
  - Refer to Section 2.3 to switch between Fahrenheit and Celsius display.

- **Air conditioner not performing desired function:**

- Verify the correct mode (Cool, Heat, Fan, etc.) is selected.
- Check if any timer functions are active.

## 6. SPECIFICATIONS

---

<b>Product Dimensions</b>	2.4 x 1 x 7.5 inches
<b>Item Weight</b>	4.4 ounces
<b>Compatible Devices</b>	Mitsubishi Air Conditioners
<b>Compatible Models</b>	SH20A, SG19C, SG18D, SG17B, SG15E, SG15D, SG15H, and many others listed in product description.
<b>Power Source</b>	2 x AAA Batteries (not included)

## 7. WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact Remotes Remade directly through their official channels or the retailer where the product was purchased. Keep your purchase receipt for any warranty claims.