

- Manuals.plus /
- > [wedoking](#) /
 - > wedoking Bone Conduction Swimming Headphones (Model: wedoking fire) User Manual

wedoking wedoking fire

User Manual

WEDOKING BONE CONDUCTION SWIMMING HEADPHONES

Model: wedoking fire

Introduction

Thank you for choosing the wedoking Bone Conduction Swimming Headphones. These headphones are designed for versatile use, featuring both Bluetooth 6.0 connectivity and a built-in 16GB MP3 player. With an IPX8 waterproof rating, they are suitable for various water sports, including swimming and surfing. The open-ear design ensures comfort and situational awareness, while ENC noise cancellation provides clear call quality.



Image: The headphones are engineered to withstand full submersion, making them ideal for swimming.

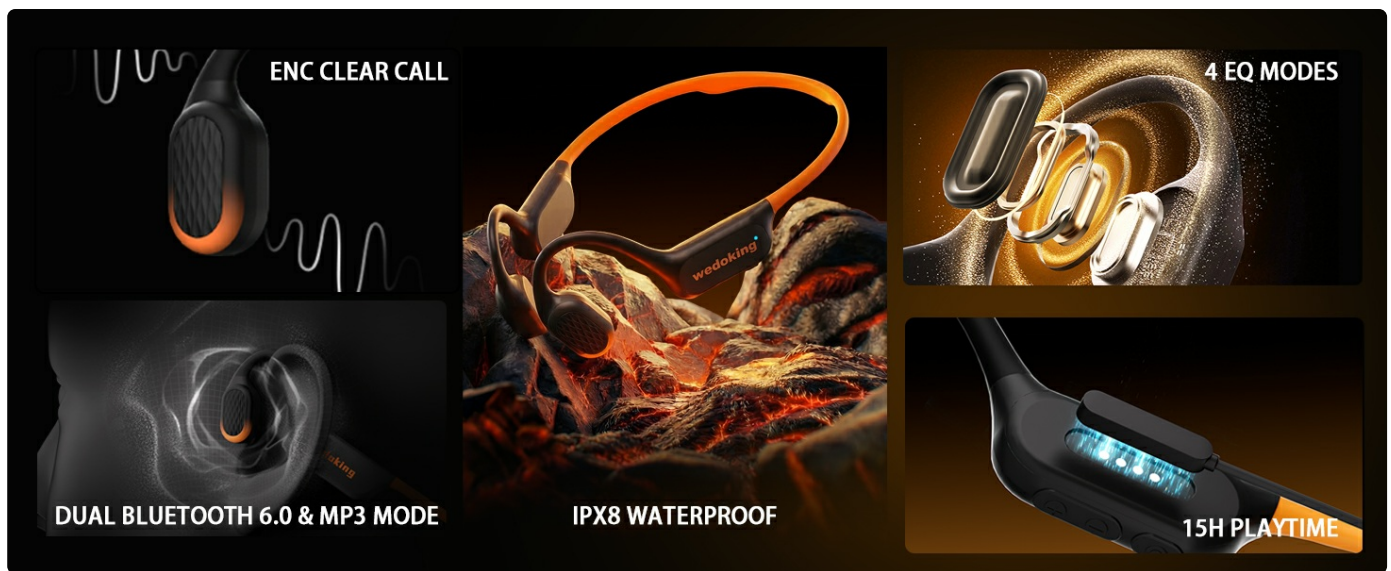


Image: Seamlessly transition your audio experience from land-based activities to water sports.

Setup

1. Charging the Headphones

Before first use, fully charge the headphones. Connect the charging cable to the charging port on the headphones and a USB power source. A full charge typically takes approximately 2 hours and provides up to 15 hours of continuous playback.

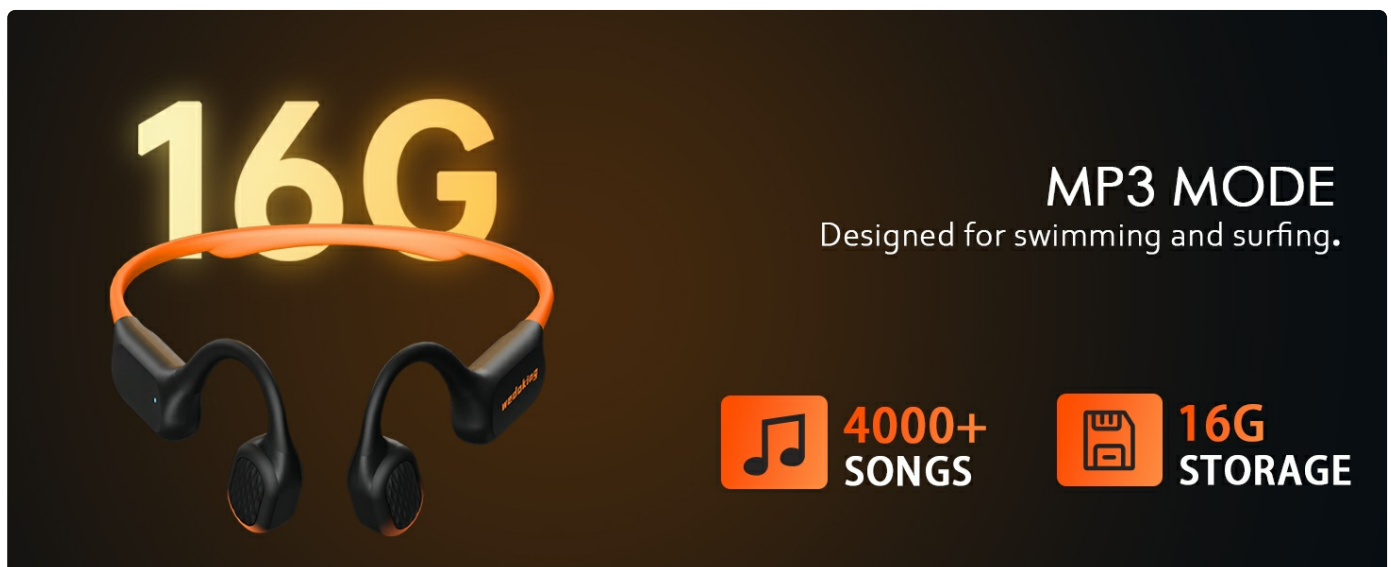


Image: The headphones offer up to 15 hours of playtime on a single charge.

2. Power On/Off

- **Power On:** Press and hold the Power button until the indicator light turns on.
- **Power Off:** Press and hold the Power button until the indicator light turns off.

3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5 seconds until the indicator light flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "wedoking fire" from the list of devices to connect. Once connected, the indicator light will flash blue periodically.

4. MP3 Mode and Music Transfer

The headphones feature a built-in 16GB memory for MP3 playback, allowing you to listen to music without a connected device. This mode is essential for underwater use as Bluetooth signals do not transmit through water.

- **Switching to MP3 Mode:** After powering on, press the Mode button (often the Power button or a dedicated button, refer to physical controls) to switch between Bluetooth and MP3 modes. The headphones will announce the current mode.
- **Transferring Music:** Connect the headphones to your computer using the provided USB cable. The headphones will appear as a removable disk. Drag and drop your MP3 format audio files directly into the device's storage.



15 HOURS PLAYTIME

Power That Keeps Up With You.

EASY BUTTON CONTROL

An Enlarged Button Makes It Simlpe to Play/Pause Music, Adjust Volume, Answer Calls, Switch Modes.

Image: The 16GB built-in memory allows storage for thousands of MP3 songs.

Operating Instructions

1. Basic Button Controls

The headphones feature intuitive buttons for easy control:

Function	Action
Power On/Off	Press and hold Power button
Play/Pause	Single press Play/Pause button
Volume Up	Single press Volume + button
Volume Down	Single press Volume - button
Next Track	Press and hold Volume + button
Previous Track	Press and hold Volume - button
Answer/End Call	Single press Play/Pause button
Reject Call	Press and hold Play/Pause button
Switch Bluetooth/MP3 Mode	Single press Mode button (or Power button, depending on model)

2. EQ Modes

The headphones offer 4 professional EQ modes to optimize your listening experience for different activities:

- **Vocal Mode:** Enhances clarity for podcasts and audiobooks.

- **Bass Mode:** Provides deeper bass for high-intensity workouts.
- **Swimming Mode:** Optimizes sound for underwater resonance.
- **Balance Mode:** A balanced sound profile for everyday listening.

To cycle through the EQ modes, double-click the Power button. This can be done in both Bluetooth and MP3 modes.

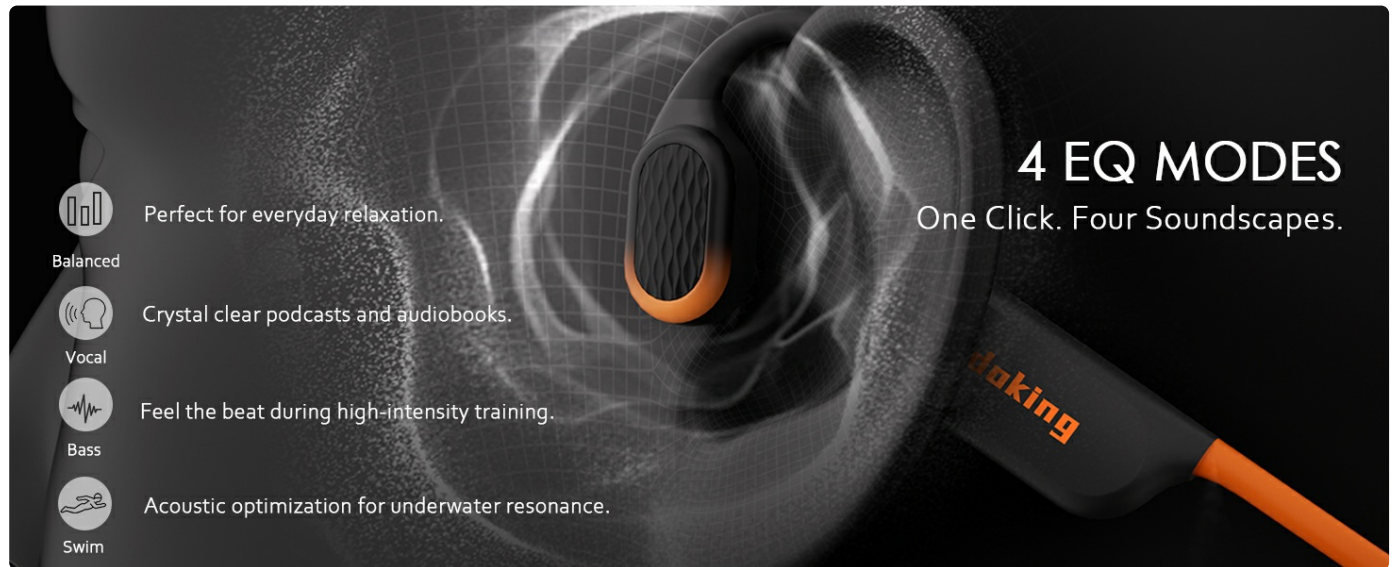


Image: Easily switch between four distinct EQ modes to customize your audio.

3. Crystal Clear Calls with ENC Noise Cancellation

Equipped with advanced Environmental Noise Cancellation (ENC) technology, these headphones filter out background noise, ensuring your voice is clear during calls. This feature is particularly useful during outdoor activities or in noisy environments.

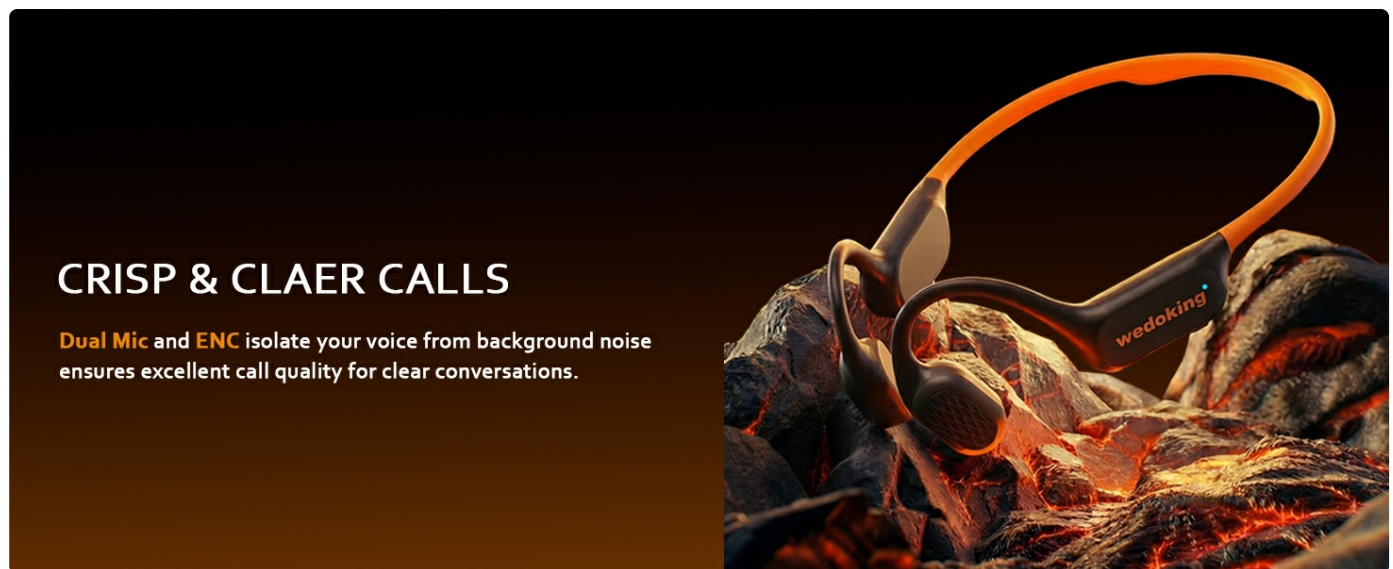


Image: ENC technology ensures crisp and clear calls by isolating your voice from background noise.

Maintenance

1. Waterproof Care (IPX8 Rating)

The headphones have an IPX8 waterproof rating, meaning they can be submerged in water up to 5 meters deep. To ensure optimal performance and longevity, follow these guidelines:

- Always switch to MP3 mode before entering water, as Bluetooth signals do not transmit effectively underwater.
- After use in chlorinated or saltwater, rinse the headphones with fresh water and dry thoroughly with a soft cloth.

- Avoid deep-sea diving with the headphones.

2. Cleaning

Wipe the headphones with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port is dry before charging.

3. Storage

Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Headphones do not power on	Low battery	Charge the headphones fully.
Cannot pair via Bluetooth	Headphones not in pairing mode; device Bluetooth off; too far from device	Ensure headphones are in pairing mode (flashing blue/red). Turn Bluetooth on your device. Move closer to the device (within 10 meters).
No sound in Bluetooth mode	Volume too low; not connected; wrong audio output selected	Increase volume on headphones and device. Re-pair headphones. Check device's audio output settings.
No sound in MP3 mode	No music files loaded; volume too low; corrupted files	Ensure MP3 files are transferred correctly. Increase volume. Try different MP3 files.
Music transfer fails	Incorrect file format; connection issue	Ensure files are MP3 format. Reconnect USB cable. Try a different USB port or computer.
Poor call quality	Environmental noise; weak signal	Move to a quieter environment. Ensure strong Bluetooth connection.

Specifications

Feature	Detail
Brand	wedoking
Model Name	Waterproof Headphones for Swimming
Model Number	wedoking fire
Connectivity Technology	Bluetooth 6.0, MP3
Bluetooth Range	Up to 10.1 meters (33 feet)
Water Resistance Level	IPX8 (submersible up to 5m)
Built-in Memory	16GB (for MP3 files)
Battery Life	Up to 15 hours (continuous playback)
Battery Charge Time	Approx. 2 hours

Feature	Detail
EQ Modes	Vocal, Bass, Swimming, Balance
Noise Control	ENC Noise Cancellation (for calls)
Ear Placement	Open Ear
Control Type	Button Control
Material	Skin-Friendly Silicone, Plastic
Audio Driver Type	Bone Conduction Driver
Frequency Range	20Hz - 20,000Hz

Warranty

This wedoking product is covered by a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Support

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official wedoking website. You can also visit the [wedoking Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CWV3JQX1>

More documents and user manuals: <https://manuals.plus/>