

Select Sound DW-TWS01

Select Sound TWS Bluetooth In-Ear Headphones User Manual

Model: DW-TWS01

INTRODUCTION

Thank you for choosing Select Sound TWS Bluetooth In-Ear Headphones. These headphones are designed to provide a high-quality audio experience with the convenience of wireless connectivity and hands-free calling. Featuring a built-in microphone for clear communication and intuitive controls, they are perfect for music, calls, and daily use. This manual will guide you through the setup, operation, and maintenance of your new headphones.

SAFETY INFORMATION

- Do not expose the headphones or charging case to extreme temperatures, humidity, or liquids.
- Avoid dropping, impacting, or disassembling the device.
- Keep out of reach of children and pets.
- Use only the provided charging cable or a certified equivalent.
- Prolonged exposure to loud volume may cause hearing damage. Adjust volume to a safe level.
- Do not use headphones in situations where inability to hear ambient sounds may be dangerous (e.g., driving, cycling, walking in traffic).

PACKAGE CONTENTS

- Select Sound TWS Bluetooth In-Ear Headphones (Left and Right)
- Charging Case with LED Display
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Select Sound TWS Bluetooth In-Ear Headphones.



This image displays the Select Sound TWS Bluetooth In-Ear Headphones nestled within their open charging case. The case features a prominent LED display indicating a 100% battery charge, along with individual battery indicators for the left and right earbuds. The sleek black design of both the earbuds and the case is visible.

Audífonos IN-EAR **DW-TWS01**





- Bluetooth con rango de hasta 10 m
- Pantalla LED
- Reconocimiento táctil

This image presents the Select Sound TWS Bluetooth In-Ear Headphones, model DW-TWS01, along with a textual overlay highlighting its main features: Bluetooth connectivity with up to 10m range, an LED display, and tactile recognition. The earbuds are shown both inside and outside the charging case, which displays a 100% charge.

- **Earbuds:** Left and Right earbuds with touch control areas and built-in microphones.
- **Charging Case:** Portable case for charging and storing earbuds. Features an LED display for battery status.
- **LED Display:** Shows the charging percentage of the case and individual battery levels for each earbud.

SETUP

1. Charging the Headphones and Case

Before first use, fully charge both the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated and the charging indicators light up.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power adapter (not

included) or a computer's USB port.

3. The LED display on the case will show the current battery percentage. When fully charged, it will display "100%".
4. Once the case is charged, the earbuds will charge automatically when placed inside. The individual earbud battery indicators on the LED display will show their charging status.

2. Pairing with Your Device

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. Ensure the earbuds are charged.
2. Open the charging case and take out both earbuds. They will automatically power on and attempt to pair with each other.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "Select Sound DW-TWS01" (or similar name) from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

Note: If the earbuds do not connect automatically, try placing them back in the case, closing the lid, waiting a few seconds, and then taking them out again.

OPERATING INSTRUCTIONS

The Select Sound TWS headphones feature intuitive touch controls on each earbud.

Power On/Off

- **Power On:** Take earbuds out of the charging case. They will power on automatically.
- **Power Off:** Place earbuds back into the charging case and close the lid. They will power off automatically.
- **Manual Power Off:** Press and hold the touch control area on either earbud for approximately 5 seconds until you hear a power-off prompt.

Music Control

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

Call Control

- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold the touch control area on either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Press and hold the touch control area on either earbud for 3 seconds (when not on a call).



A man with a beard is shown wearing the Select Sound TWS Bluetooth In-Ear Headphones while focused on his laptop. He is seated at a table with a coffee cup, illustrating the product's use in a typical work or leisure setting, emphasizing comfort and hands-free operation.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in their charging case to protect them and keep them charged.
- **Battery Care:** To preserve battery life, charge the headphones regularly, even if not used for extended periods. Avoid fully discharging the battery frequently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
One earbud (e.g., left) does not sync or produce sound.	Earbuds are not properly paired with each other or with the device.	1. Ensure both earbuds are charged. 2. Place both earbuds back into the charging case, close the lid, and wait for 5-10 seconds. 3. Take both earbuds out simultaneously. They should automatically pair with each other first, then with your device. 4. If the issue persists, try forgetting the device from your phone's Bluetooth settings and re-pairing.
No sound from headphones.	Headphones not connected, low battery, or volume too low.	• Ensure headphones are connected to your device. • Check battery level on the LED display and charge if necessary. • Increase volume on both your device and the headphones.
Cannot pair with device.	Bluetooth is off, headphones are not in pairing mode, or interference.	• Ensure Bluetooth is enabled on your device. • Make sure earbuds are out of the case and in pairing mode. • Move closer to your device and away from other wireless devices. • Restart your device and try pairing again.

SPECIFICATIONS

Feature	Detail
Model Number	DW-TWS01
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Wireless Range	Up to 10 meters
Ear Placement	In-Ear
Form Factor	In-Ear
Impedance	32 Ohm
Noise Control	None
Compatible Devices	Cell phones, Tablets, Desktop computers
Recommended Uses	Exercise, Calls, Music

Feature	Detail
Color	Black
Package Dimensions	16.7 x 11.1 x 4.4 cm; 190 g

WARRANTY AND SUPPORT

Select Sound products are designed for reliability and performance. For any questions, technical support, or warranty inquiries, please refer to the contact information provided on the product packaging or visit the official Select Sound website.

You can visit the [Select Sound Store on Amazon](#) for more information.

© 2025 Select Sound. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question