

UBay b34a9b9f-3734-41b0-ab78-a78f49578bca

UBay Replacement Remote Control User Manual

Model: b34a9b9f-3734-41b0-ab78-a78f49578bca

INTRODUCTION

This manual provides instructions for the UBay Replacement Remote Control, designed for use with ONN Android TV boxes 100024646 and 100026240, as well as MECOOL MK2 Smart TV box and MECOOL TV Stick. This remote features voice control functionality for enhanced user experience.

PRODUCT OVERVIEW





Image: Front view of the UBay Replacement Remote Control. It is white with black buttons. Key features visible include the power button, input button, Google Assistant button (with microphone icon), settings button, directional pad, back button, home button, live TV button, volume up/down, mute, and dedicated shortcut buttons for YouTube, Netflix, Disney+, and HBO Max.

The UBay Replacement Remote Control is an ergonomic and lightweight device. It includes essential buttons for navigation, volume control, and direct access to popular streaming services. The integrated voice function allows for convenient command input.

Key Features:

- Voice control functionality for easy content search.
- Compatibility with specific ONN Android TV box models (100024646, 100026240).
- Compatibility with MECOOL MK2 Smart TV box and MECOOL TV Stick.
- Dedicated shortcut keys for YouTube, Netflix, Disney+, and HBO Max.

- Ergonomic and lightweight design.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
4. Close the battery cover securely.

Pairing Instructions:

Before using the remote control, it must be paired with your device. The pairing method is similar to your original remote control.

1. Ensure your ONN Android TV box or MECOOL device is powered on.
2. Point the remote control towards your device.
3. Simultaneously press and hold the **Home Button** and the **RETURN Button** on the remote control.
4. Continue holding both buttons until the LED indicator on the remote control begins to flash. This indicates that the remote is in pairing mode.
5. Follow any on-screen prompts on your TV to complete the pairing process.
6. Once successfully paired, the LED indicator will stop flashing, and the remote control will be ready for use.

***Note:** If pairing fails, ensure the remote is close to the device and repeat the steps. Refer to your device's user manual for specific pairing instructions if needed.*

OPERATING THE REMOTE CONTROL

Button Functions:

Button	Function
Power Button ()	Turns the connected device on or off.
Input/Source Button ()	Switches input sources on the connected device.
Google Assistant/Voice Button ()	Activates voice control for searching content or issuing commands.
Settings Button (⚙)	Accesses device settings.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK/Select Button (Center of D-Pad)	Confirms selections.

Button	Function
Back Button (←)	Returns to the previous screen or menu.
Home Button (△)	Returns to the main home screen.
Live TV Button (⏏)	Direct access to live television (if supported by device).
Volume Up/Down (+ / -)	Adjusts the volume level.
Mute Button (⏏)	Mutes or unmutes audio.
YouTube Shortcut	Launches the YouTube application.
Netflix Shortcut	Launches the Netflix application.
Disney+ Shortcut	Launches the Disney+ application.
HBO Max Shortcut	Launches the HBO Max application.

Using Voice Function:

1. Press the **Google Assistant/Voice Button** (ⓘ).
2. Hold the remote control near your mouth.
3. Speak your command clearly, such as "Find action movies" or "Open Netflix".
4. Release the button when you have finished speaking.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries: Check if batteries are inserted correctly or need replacement. ◦ Pairing: Ensure the remote is properly paired with your device. Refer to the "Pairing Instructions" section. ◦ Obstruction: Ensure there are no obstructions between the remote and the device.
Voice function not working.	◦ Pairing: Voice functionality requires proper Bluetooth pairing. Re-pair the remote if necessary. ◦ Microphone: Ensure nothing is blocking the microphone on the remote. ◦ Device Settings: Check your device's settings to ensure voice input is enabled.
Shortcut buttons (Netflix, YouTube, etc.) not launching apps.	◦ App Installation: Ensure the respective applications are installed on your Android TV box. ◦ Internet Connection: Verify your device has an active internet connection. ◦ Device Compatibility: Confirm your device model is fully compatible with these shortcut functions.
Remote control feels sluggish or delayed.	◦ Low Batteries: Replace the batteries with fresh ones. ◦ Interference: Move away from other electronic devices that might cause signal interference.

SPECIFICATIONS

- **Brand:** UBay
- **Model Number:** b34a9b9f-3734-41b0-ab78-a78f49578bca
- **Compatible Devices:** ONN Android TV boxes (100024646, 100026240), MECOOL MK2 Smart TV box, MECOOL TV Stick
- **Special Feature:** Voice Function, Ergonomic, Lightweight
- **Color:** White
- **Max Number of Supported Devices:** 1
- **Item Weight:** 1.44 ounces
- **Package Dimensions:** 5.47 x 1.5 x 0.75 inches

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact UBay customer service directly. Specific warranty terms may vary based on region and retailer.
For further assistance, please visit the UBay official website or contact their customer support channels.

© 2024 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0CWVTDZTG>

More documents and user manuals: <https://manuals.plus/>