

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image 4x4 Giant Crusher Remote Control 4WD Truck Instruction Manual

Sharper Image 1018183

Sharper Image® 4x4 Giant Crusher Remote Control 4WD Truck Instruction Manual

Model: 1018183

1. PRODUCT OVERVIEW

The Sharper Image® 4x4 Giant Crusher Remote Control 4WD Truck is designed for robust off-road adventures. Featuring oversized wheels, a powerful 4x4 drive system, and large shocks, it offers excellent handling and stability across various terrains. Its ultra-bright LED headlights enable nighttime driving, extending playtime. The truck is powered by a USB-C quick-charging battery and controlled by a reliable 2.4 GHz wireless remote.



Image: The Sharper Image 4x4 Giant Crusher Remote Control 4WD Truck, showcasing its large wheels and remote control.

Key Features:

- **4-Wheel Drive:** Tackle any off-road challenge with massive wheels and a powerful 4x4 system.
- **Giant All-Terrain Tires:** Designed for superior handling and control across diverse landscapes.
- **Oversized Shocks:** Provides enhanced stability and shock absorption for rough terrain.
- **Bright LED Lights:** For improved visibility during nighttime operation.
- **Rechargeable USB-C Battery:** Offers up to 15 minutes of driving per charge, with a 120-minute recharge time.

- **2.4 GHz Wireless Remote Control:** Ensures reliable and interference-free control up to 100 ft.
- **Fast 5 MPH Speed:** Provides an exciting driving experience.

2. WHAT'S IN THE BOX

Upon unboxing your Sharper Image® 4x4 Giant Crusher, please ensure all components listed below are present:

- Giant Crusher Truck
- Remote Control
- USB-C Cable
- Sheet of Reusable Flag Decals
- Product Manual (this document)



WHAT YOU GET



4x4 Giant Crusher



Built-in 9.6V 1000mAh
Li-Po rechargeable battery
(removeable)



Remote control




USB-C charging cable



Sticker sheet

WHAT YOU NEED

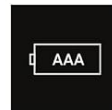

Remote requires 3 AAA 1.5 V
batteries (not included)

Image: Visual representation of the product contents, including the truck, remote, USB-C cable, and sticker sheet.

3. SETUP

3.1. Charging the Truck Battery

1. Locate the USB-C charging port on the Giant Crusher Truck.
2. Connect the provided USB-C cable to the truck's charging port.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
4. Allow approximately 120 minutes for a full charge. The charging indicator light (if present) will change or turn off when charging is complete.

Note: The truck includes a built-in 9.6V 1000mAh Li-Po rechargeable battery.

3.2. Installing Remote Control Batteries

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 3 AAA 1.5V batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.3. Pairing the Remote Control

The truck and remote control are designed to pair automatically using 2.4 GHz wireless technology. Follow these steps:

1. Ensure the truck's battery is charged and the truck is powered on.
2. Install fresh batteries in the remote control and power it on.
3. The remote and truck should automatically connect. If not, turn both off and on again, ensuring they are within close proximity.

4. OPERATING INSTRUCTIONS

4.1. Basic Controls

- **Forward/Backward:** Use the left joystick/trigger on the remote control to move the truck forward or backward.
- **Left/Right:** Use the right joystick/steering wheel on the remote control to steer the truck left or right.

AGES
6+



2.4 GHz
WIRELESS REMOTE



BRIGHT
LIGHTS



RECHARGEABLE
BATTERY



4x4 SHARPER IMAGE® **GIANT CRUSHER** REMOTE CONTROL 4WD TRUCK

Image: The 4x4 Giant Crusher navigating a rocky, outdoor environment, demonstrating its off-road capability.

4.2. All-Terrain Performance

The Giant Crusher is engineered to conquer various terrains, including grass, dirt, and rocky surfaces, thanks to its 4x4 drive and oversized shocks. Its large tires provide excellent grip and stability. The truck can reach speeds of up to 5 MPH.

SHARPER IMAGE®



4-WHEEL
DRIVE



ALL-TERRAIN
TIRES



OVERSIZED
SHOCKS



REPLACEABLE
STICKERS

MOTHER OF ALL WHEELS



Image: The 4x4 Giant Crusher shown with text emphasizing its large wheels and robust design, suitable for challenging terrains.



Image: A child holding the large wheels of the Giant Crusher, illustrating the impressive size of the truck's tires.

4.3. Nighttime Operation

The truck is equipped with bright LED headlights, allowing for exciting play even in low-light conditions or at night. Ensure the lights are functioning before operating in the dark.

4.4. Customization

Use the included sheet of reusable flag decals to personalize your Giant Crusher Truck and showcase your unique style.

4.5. Product in Action (Video)

Your browser does not support the video tag.

Video: An official product video demonstrating the Sharper Image 4x4 Giant Crusher's movement and suspension capabilities on various surfaces, including indoor and outdoor environments.

5. MAINTENANCE

5.1. Cleaning

After each use, especially after operating on dirty or dusty surfaces, gently wipe down the truck with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the electronic components. Pay special attention to cleaning the tires and suspension to prevent debris buildup.

Note: The rubber center strips on the tires can be removed for thorough cleaning if dirt or debris accumulates underneath them.

5.2. Battery Care

- Always fully charge the truck's battery before storage.
- Do not overcharge the battery. Disconnect the charger once charging is complete.
- Remove batteries from the remote control if it will not be used for an extended period to prevent leakage.
- Store the truck and batteries in a cool, dry place away from direct sunlight and extreme temperatures.

5.3. General Care

- Avoid operating the truck in wet conditions or through puddles to prevent damage to electronic components.
- Do not expose the truck or remote to excessive force or impact.
- Regularly inspect the truck for any loose parts or damage. Tighten screws or replace damaged components as needed.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Truck does not turn on.	Battery is not charged or not connected properly.	Ensure the truck's battery is fully charged and securely connected.
Remote control not responding.	Remote batteries are low or incorrectly installed. Truck and remote are not paired.	Replace remote batteries. Re-pair the truck and remote by turning both off and on again. Ensure they are within range (up to 100 ft).
Short play time.	Battery not fully charged. Battery degradation over time.	Ensure battery is fully charged (120 minutes). Consider replacing the battery if it consistently provides significantly less than 15 minutes of play after a full charge.
Truck moves slowly or inconsistently.	Low battery in truck or remote. Debris in wheels/axles.	Charge truck battery and replace remote batteries. Clean any debris from the wheels and axles.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	30.9 x 22.3 x 18.1 inches
Item Weight	16.91 pounds
Item Model Number	1018183

Feature	Detail
Manufacturer Recommended Age	8 years and up
Truck Battery	1 Lithium Polymer battery (included)
Remote Control Batteries	3 AAA 1.5V batteries (not included)
Manufacturer	Merchsource
Date First Available	March 1, 2024

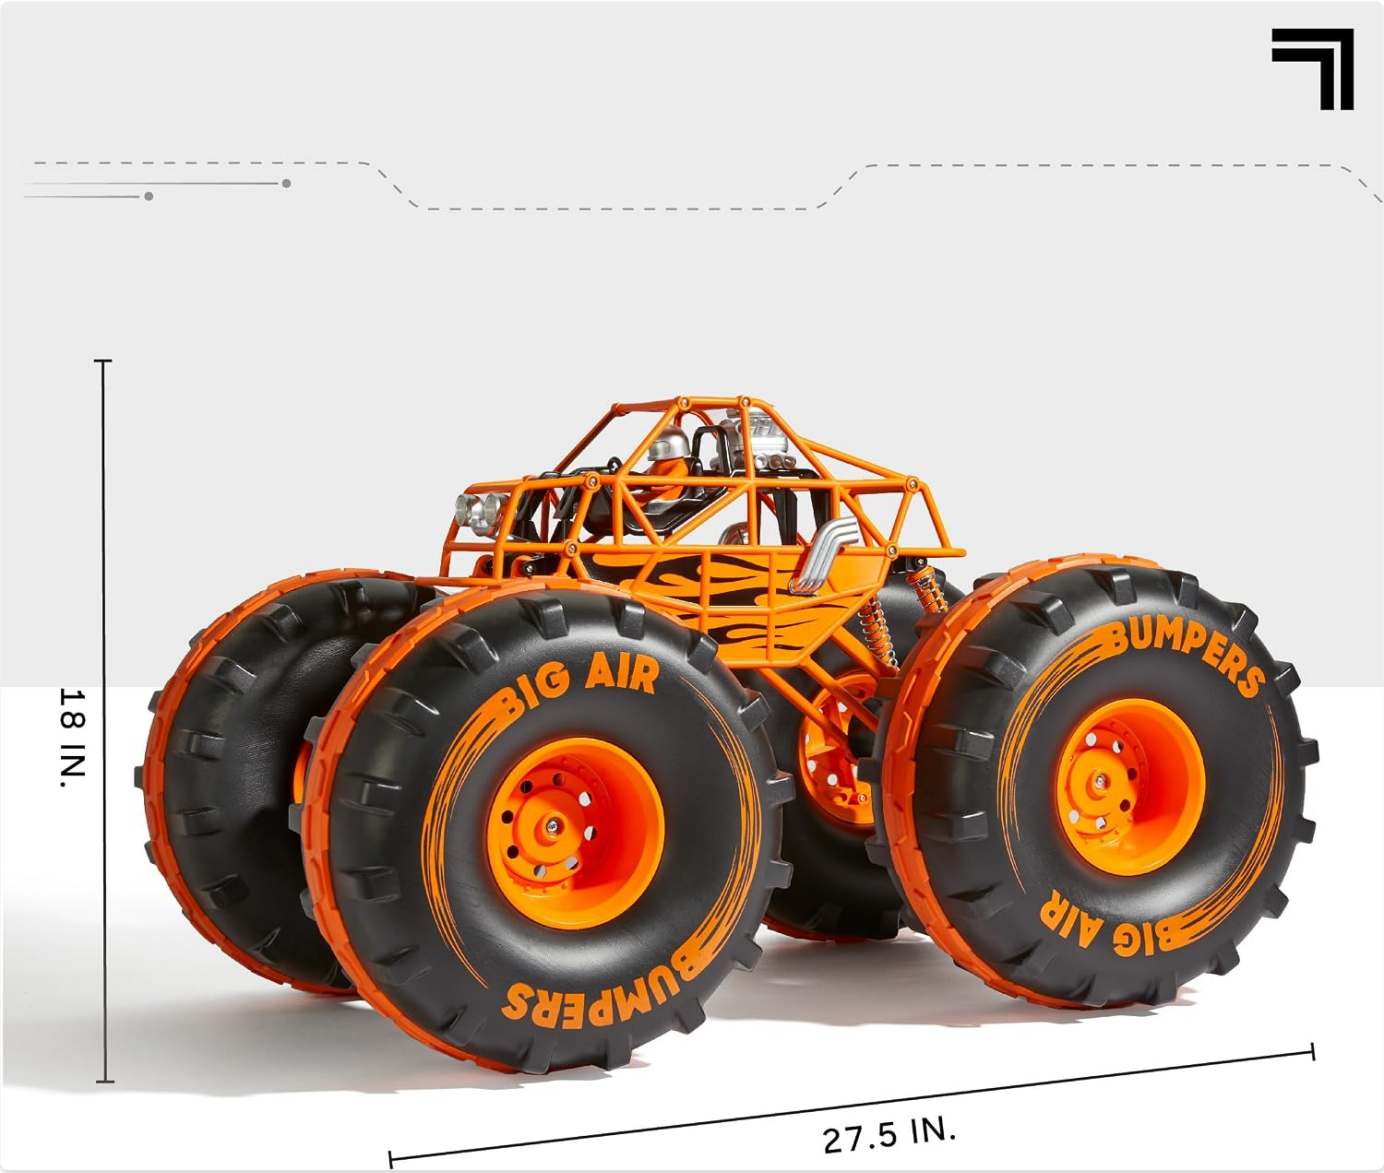


Image: Diagram showing the approximate dimensions of the 4x4 Giant Crusher: 18 inches high and 27.5 inches long.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact Sharper Image customer service directly. Refer to the packaging or the official Sharper Image website for the most up-to-date contact details. It is recommended to retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CWWC4BMK>

More documents and user manuals: <https://manuals.plus/>