

Discovery 1017870

Discovery Bright Doodles LCD Art Tablet

Model: 1017870

Instruction Manual

INTRODUCTION

The Discovery Bright Doodles LCD Art Tablet provides a mess-free and engaging platform for creative expression. Designed for children aged 3 and up, this portable drawing pad allows users to draw, write, and doodle without the need for paper or ink. Its intuitive design and durable construction make it suitable for various environments, from home to travel.

This manual provides essential information on setting up, operating, and maintaining your LCD Art Tablet to ensure optimal performance and longevity.

SAFETY INFORMATION

- This product is intended for children aged 3 years and older. Adult supervision is recommended.
- Do not expose the tablet to extreme temperatures, direct sunlight, or moisture.
- Avoid dropping the tablet or subjecting it to strong impacts, as this may damage the LCD screen.
- Only use the provided stylus or a similar non-abrasive, blunt instrument to draw on the screen. Sharp objects can permanently damage the display.
- Keep batteries out of reach of small children. If swallowed, seek immediate medical attention.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Discovery Bright Doodles LCD Art Tablet
- 1 x Tethered Stylus
- 1 x Instruction Manual (this document)



Image: The Discovery Bright Doodles LCD Art Tablet shown alongside its retail packaging. The tablet is blue with a black screen displaying colorful doodles, and a green tethered stylus is visible.

SETUP

Battery Installation

The Discovery Bright Doodles LCD Art Tablet requires 2 AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the tablet.
2. Using a small screwdriver (not included), carefully open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: Always use fresh batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

Drawing on the Tablet

Use the included tethered stylus to draw or write on the LCD screen. You can also use your fingertip. The screen will display colorful lines as you draw.



Image: A child's hand holding the green stylus and drawing colorful lines on the black screen of the blue Discovery Bright Doodles LCD Art Tablet.

Erasing the Screen

To clear the entire screen and start a new drawing, press the erase button located on the bottom edge of the tablet. The screen will instantly clear.



Image: A close-up view of the bottom edge of the tablet, showing the round green erase button and the rectangular green screen lock switch with an open and closed padlock icon.

Screen Lock Function

The tablet features a screen lock switch to prevent accidental erasing. This is useful for preserving artwork or notes.

- To **lock** the screen: Slide the screen lock switch (located next to the erase button) to the position showing a closed padlock icon. While locked, pressing the erase button will not clear the screen.
- To **unlock** the screen: Slide the screen lock switch to the position showing an open padlock icon. The erase button will now function normally.

***Tip:** Always ensure the screen is unlocked before attempting to erase your drawing.*

Stylus Storage

The included stylus is tethered to the tablet to prevent loss. When not in use, the stylus can be neatly stored in the designated slot on the side of the tablet.

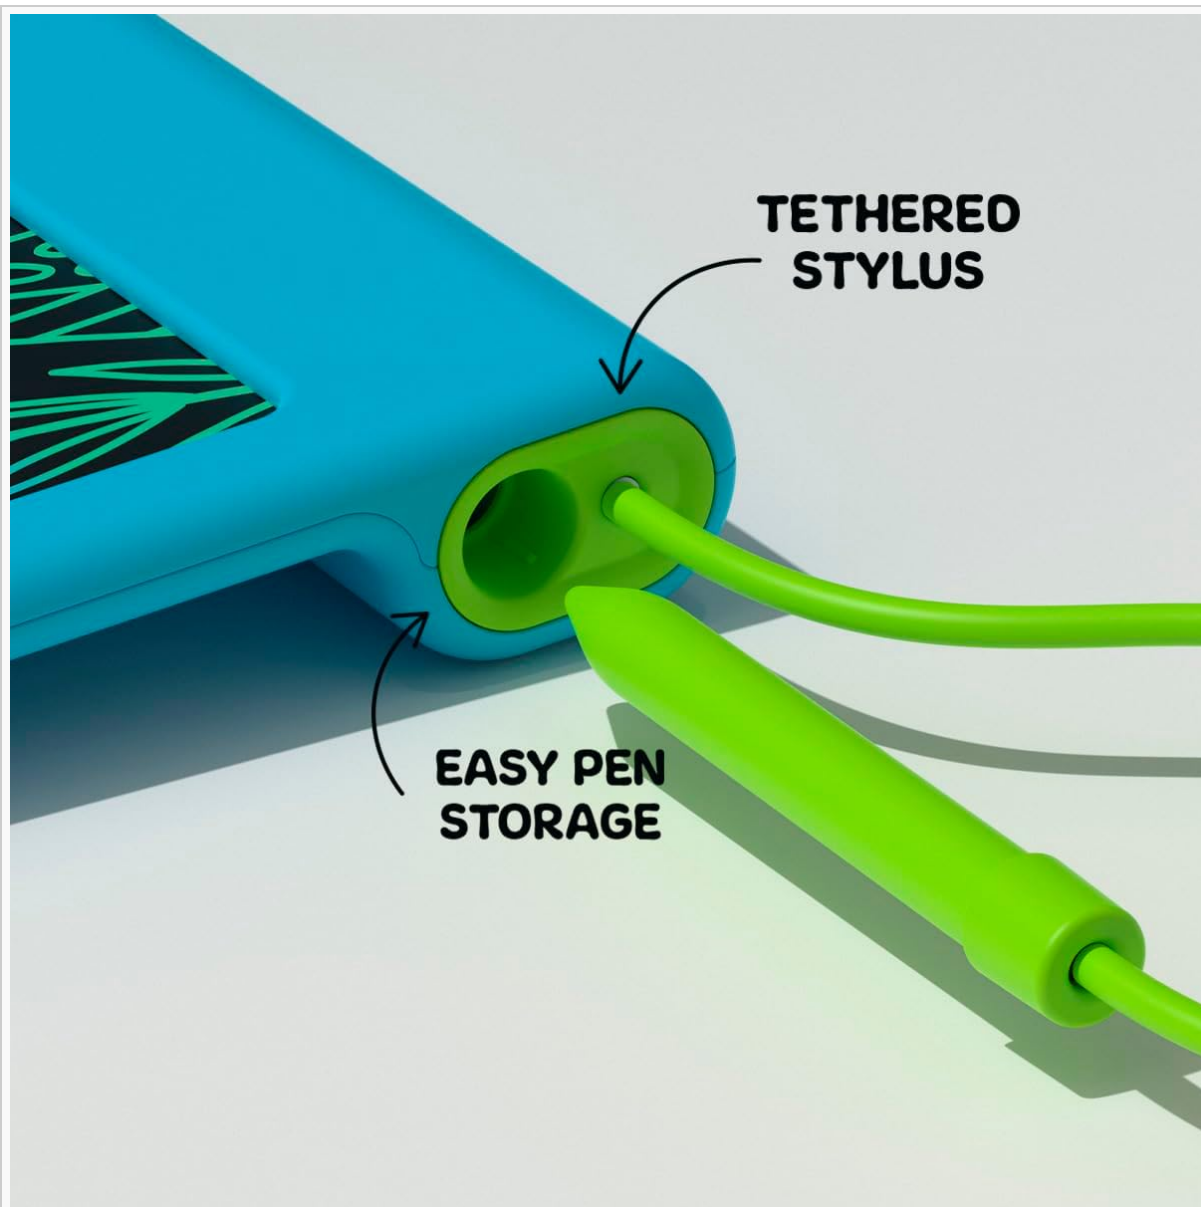


Image: A close-up view of the side of the tablet, showing the green tethered stylus inserted into its storage slot.

MAINTENANCE

Cleaning

To clean the tablet, gently wipe the screen and casing with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the screen or casing.

Battery Replacement

If the erase function stops working or the screen becomes dim, it may be time to replace the batteries. Refer to the "Battery Installation" section under Setup for instructions.

TROUBLESHOOTING

- **Screen does not clear when erase button is pressed:**
 - Check if the screen lock switch is in the "locked" position. Slide it to the "unlocked" position.
 - Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Drawing lines are faint or inconsistent:**
 - This may indicate low battery power. Replace the batteries.

- Ensure you are using the stylus or a suitable blunt object with appropriate pressure.
- **Stylus is lost:**
 - The stylus is tethered to the tablet to prevent loss. If it becomes detached, a replacement stylus may be available from the manufacturer or a compatible alternative can be used.

SPECIFICATIONS



Model Number	1017870
Brand	Discovery
Product Dimensions	9.7 x 6.2 x 0.1 inches
Item Weight	1.12 pounds
Recommended Age	3 years and up
Power Source	2 x AAA Batteries (not included)
Special Feature	Illuminated LCD Screen
Manufacturer	Merchsource




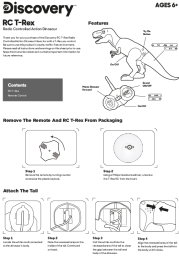
WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Discovery brand website. Please retain your proof of purchase for any warranty claims.

© 2025 Discovery. All rights reserved.

Related Documents - 1017870

	<p>Discovery Star Sky P1/P2 Planetarium: User Manual, Features, and Safety Guide</p> <p>Detailed user manual for the Discovery Star Sky P1/P2 Planetarium. Learn about its features like star projection, music, rotation, remote control, and battery operation. Includes essential safety warnings and warranty information from Levenhuk.</p>
	<p>Discovery Scope Set 2 Microscope and Telescope User Manual</p> <p>Comprehensive user manual for the Discovery Scope Set 2, including instructions for use, care, maintenance, and specifications for both the microscope and telescope. Features multilingual content and detailed guidance.</p>

	<p>Discovery Zoom Power Lab Microscope Instruction Manual Ages 10+</p> <p>Explore the microscopic world with the Discovery Zoom Power Lab Microscope. This instruction manual provides detailed guidance on setup, operation, parts identification, magnification, observation techniques, cleaning, and essential safety warnings for users aged 10 and above. Includes a comprehensive parts list and troubleshooting tips.</p>
	<p>Discovery Artisan 64 Digital Microscope User Manual</p> <p>Comprehensive user manual for the Discovery Artisan 64 Digital Microscope by Levenhuk. Learn about its features, assembly, operation, software, specifications, and maintenance for detailed microscopic observation.</p>
	<p>Discovery Artisan 256 Digital Microscope User Manual</p> <p>Explore the microscopic world with the Discovery Artisan 256 Digital Microscope. This comprehensive user manual provides detailed instructions on setup, operation, software usage, and maintenance for your digital microscope.</p>
	<p>Discovery RC T-Rex Radio Controlled Action Dinosaur User Manual</p> <p>Instructions for setting up and using the Discovery RC T-Rex Radio Controlled Action Dinosaur, including battery installation, cleaning, and storage.</p>