

[Manuals.plus](#) /

› [Lancer Tactical](#) /

› Lancer Tactical Airsoft Tommy Thompson Submachine Gun User Manual

Lancer Tactical LT

Lancer Tactical Airsoft Tommy Thompson Submachine Gun User Manual

Model: LT

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Lancer Tactical Airsoft Tommy Thompson Submachine Gun. Please read this manual thoroughly before using the product to ensure proper handling and to prevent damage or injury.

The D98 M1A1 Submachine Gun AEG is a replica of one of the most prominent SMGs during World War II. It features both semi-automatic and full-automatic firing modes and comes equipped with a 1,000-round drum magazine and a 30-round spare straight magazine.

INCLUDED COMPONENTS

Your Lancer Tactical Airsoft Tommy Thompson Submachine Gun package includes the following items:

- 1x Airsoft Rifle
- 1x 8.4V Mini Battery
- 1x Standard Wall Charger
- 1x Standard Magazine (30 rounds)
- 2x Drum Magazine (1000 rounds each)
- Sample BBs
- Carrying Strap
- Cleaning/Unjamming Rod
- Instruction Manual



Figure 1: Complete package contents including the airsoft gun, drum magazines, battery, charger, and BBs.

SETUP

1. Charging the Battery

Before first use, fully charge the included 8.4V Mini Battery using the provided Standard Wall Charger. Connect the battery to the charger and plug the charger into a standard wall outlet. Refer to the charger's indicator light for charging status. Do not overcharge the battery.



Figure 2: The included 8.4V Mini Battery and Standard Wall Charger.

2. Installing the Battery

Locate the battery compartment, typically within the stock of the airsoft gun. Connect the charged battery to the gun's internal wiring connector. Carefully place the battery inside the compartment and secure the cover.

3. Loading the Magazines

The airsoft gun comes with both a 30-round standard stick magazine and two 1000-round drum magazines.

Loading the Drum Magazine:

1. Open the BB hatch located on the top of the drum magazine.
2. Pour 6mm BBs into the hatch until the drum magazine is full.
3. Close the BB hatch securely.
4. Wind the magazine in a clockwise direction using the winding mechanism until you hear a clicking sound, indicating it is fully wound.

Caution: Winding the magazine in a counter-clockwise direction will damage the magazine.

Your browser does not support the video tag.

Video 1: Demonstrates how to load the drum magazine with BBs and wind it for proper feeding.

Loading the Standard Magazine:

For the 30-round stick magazine, use a speed loader (not included) or manually load BBs through the top opening, pushing them down against the spring.



Figure 3: The drum magazine attached to the airsoft gun, showing the fire selector.



Figure 4: The standard stick magazine attached to the airsoft gun.

1. Safety and Fire Selector

The airsoft gun features an authentic safety and fire selector switch. Always ensure the selector is set to "SAFE" when not actively firing or when handling the gun. The selector allows you to choose between "SINGLE" (semi-automatic) and "FULL AUTO" (fully automatic) firing modes.



Figure 5: Detail of the safety and fire selector, showing "FIRE", "SAFE", "FULL AUTO", and "SINGLE" settings.

2. Adjustable Hop-Up

The airsoft gun is equipped with an adjustable hop-up system to fine-tune the trajectory of your BBs. Adjust the hop-up to achieve optimal range and accuracy based on the weight of the BBs you are using. Experiment with small adjustments to find the best setting.



Figure 6: Illustration of the adjustable hop-up unit, which helps control BB flight path.

3. Sights

The airsoft gun features authentic front and rear sights for aiming. Align the front sight post with the rear sight notch and your target for accurate shots.



Figure 7: View of the rear sight for aiming.



Figure 8: View of the front sight for aiming.

MAINTENANCE

1. Cleaning and Unjamming

Regular cleaning of the barrel is recommended to maintain accuracy and prevent jams. Use the included cleaning/unjamming rod with a small piece of cloth to gently clean the inner barrel. If a BB becomes jammed, use the rod to carefully push it out from the muzzle end.

Warning: Always ensure the airsoft gun is unloaded and on "SAFE" before performing any maintenance.

2. Storage

Store the airsoft gun in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery from the gun when storing for extended periods to prevent discharge or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gun not firing or weak shots.	Battery is low or not connected. Magazine is not loaded or wound (drum mag). BBs are jammed.	Charge the battery. Ensure battery is properly connected. Load and wind the magazine correctly. Clear any BB jams using the cleaning rod.
BBs not feeding properly.	Magazine not fully wound (drum mag). Incorrect BB size. Damaged magazine.	Rewind the drum magazine. Use high-quality 6mm airsoft BBs. Inspect magazine for damage; replace if necessary.
Battery gets hot during charging/use.	Overcharging. Faulty battery or charger.	Do not overcharge. Discontinue use immediately if battery becomes excessively hot. Contact customer support for replacement if suspected faulty.

SPECIFICATIONS

Feature	Detail
Brand	Lancer Tactical
Model Name	LT
Color	Black
Caliber	6.00mm BBs
Muzzle Velocity	250-285 FPS with .20g BBs
Power Type	Electric (AEG)
Product Dimensions (LxWxH)	32"L x 0.5"W x 7"H
Item Weight	2.5 Pounds
Frame Material	Polymer
Barrel Material	Metal
Magazine Capacity (Drum)	1000 Rounds
Magazine Capacity (Standard)	30 Rounds
Fire Modes	Semi-Automatic, Full-Automatic
Hop-Up	Adjustable



Figure 9: Product dimensions and weight.

SAFETY INFORMATION

Always wear appropriate eye protection when operating this airsoft gun. Do not aim at people or animals. Treat every airsoft gun as if it were loaded. Keep fingers off the trigger until ready to fire. Store unloaded and in a secure location away from children.

This product is intended for recreational use only and is not a real firearm. Misuse can cause serious injury. Adhere to all local laws and regulations regarding airsoft guns.

WARRANTY AND SUPPORT

This Lancer Tactical Airsoft Tommy Thompson Submachine Gun comes with a**60 Day Warranty**. Please note that the warranty does not cover shipping costs.

For technical support, parts, or warranty claims, please contact Lancer Tactical customer service. Refer to the packaging or the official Lancer Tactical website for contact information.

© 2025 Lancer Tactical. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question